

INSTRUCTION MANUAL

STAND MIXER

EN

MANUEL D'UTILISATION

BATTEUR SUR SOCLE

FR

MANUAL DE USO

BATIDORA DE PIE

ES



Dear Customer,

 
Thank you very much for purchasing a Smeg 50's Style stand mixer.

By choosing one of our products, you have selected an appliance which combines iconic style with innovative technical design and attention to detail.

This appliance matches perfectly with other Smeg products, and also works great as a standalone statement piece in your kitchen.

We hope you enjoy using your new appliance!

For any further information please visit www.smegusa.com.

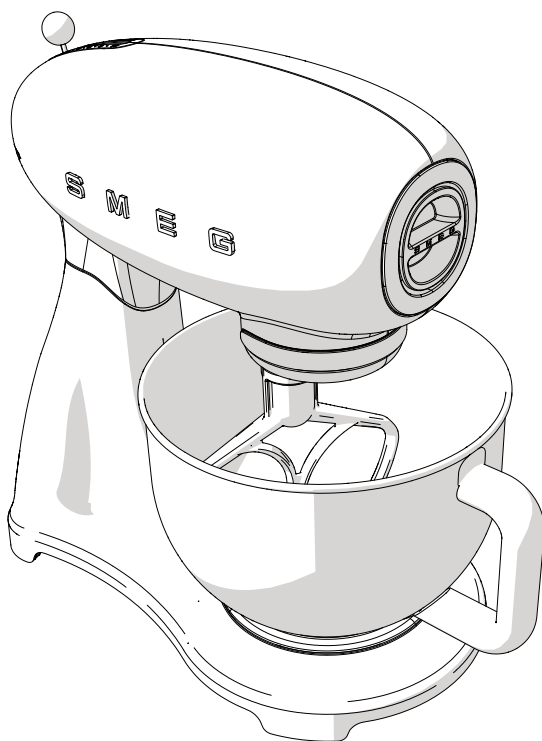

Model SMF01
Stand mixer

Contents

1 Instructions	7
1.1 Introduction	7
1.2 This user manual	7
1.3 Intended use	7
1.4 Manufacturer liability	8
1.5 Identification plate	8
1.6 Disposal	8
2 Description	9
2.1 Product description	9
2.2 Description of parts	10
2.3 Standard accessories	11
3 Use	12
3.1 Before first use	12
3.2 Using the stand mixer	13
3.3 Using the pouring shield	18
3.4 Functions	19
3.5 Speed setting suggestions	20
4 Cleaning and Care	23
4.1 Instructions	23
4.2 Maintenance	23
4.3 Cleaning the surfaces	23
4.4 Ordinary daily cleaning	23
4.5 Food stains or residues	23
4.6 What to do if...	24

Important Safeguards

WARNING: If the instructions contained in this manual are not followed precisely, fire or explosion may result causing property damage, personal injury or death.



READ AND SAVE THESE INSTRUCTIONS - Your safety and the safety of others are very important.

We have provided many important safety messages throughout this manual and on the appliance.

Read all the instructions before using the appliance and always obey all safety messages.



Important Safeguards



RECOGNIZE SAFETY INFORMATION

This is a safety alert symbol. This symbol alerts you to potential hazards that can result in severe personal injury or death.

UNDERSTAND SIGNAL WORDS

A signal word - DANGER, WARNING or CAUTION - is used with the safety alert symbol. DANGER denotes the most serious hazards. It means you could be killed or seriously injured if you do not immediately follow the instructions. WARNING means you could be killed or seriously injured if the instructions are not followed. CAUTION indicates a potentially hazardous situation, which, if not avoided, could result in minor to moderate injury.

WARNING



- This appliance is intended for use in the home only.
- Use this appliance only for its intended purpose. The manufacturer cannot be held liable for damage caused by improper use of this appliance.
- This appliance complies with current safety regulations. Improper use of this appliance can result in personal injury and material damage.
- Read all the instructions before installing or using the appliance for the first time.
- Keep these operating instructions in a safe place and pass them on to any future user.

The safety messages will inform you of potential hazards, on how to avoid the risk of injury and what can occur if the instructions are not followed.

IMPORTANT: Observe all codes and ordinances in force.

WARNING: For your safety, the instructions contained in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or death.

Do not store or use gasoline or other flammable vapors, liquids or materials near this or any other appliance.



NOTE: This appliance is NOT designed for installation in manufactured (mobile) homes or in recreational vehicles (RVs).

DO NOT install this appliance outdoors.

Important Safeguards



WARNING



To reduce the risk of fire, electrical shock, personal injury, or damage when using the appliance, follow basic safety precautions, including the following:

NE

Follow all safety instructions in order to use the appliance safely.

- Read this user manual carefully before using the appliance.
- To protect against electric shock, do not immerse the appliance, the power cord or the plug in water or any other liquid.
- Do not use the appliance when the power cord or the plug is damaged or after the appliance malfunctions, or when the appliance has fallen or is damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The cable is short to prevent accidents. Do not use an extension cord.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not pull on the cord to unplug it from the power socket.
- Do not place the appliance above or near lit cooktop burners or electric rings, inside an oven or near other heat sources.
- Switch off the appliance immediately after use.
- Do not leave the appliance unattended while it is operating.
- Disconnect the appliance from the power socket as soon as you have finished using it and before cleaning it.
- In case of fault repairs should only be carried out by a qualified technician.
- Never try to put out a fire or flames with water: turn off the appliance, remove the plug from the socket and smother the flames with a fire blanket or any other appropriate cover.
- Do not modify the appliance.
- Keep the appliance out of children's reach.



Important Safeguards

For this appliance

- Unplug the appliance from the power socket as soon as you have finished using it and before cleaning it.
- Always unplug the appliance from the wall if it is left unattended and before assembling, disassembling or cleaning.
- Remove beaters from mixer before washing.
- Do not use more than one attachment at a time.
- Do not insert, remove or replace attachments with the safety lock disengaged (motor head lowered).
- Do not touch moving parts while the appliance is operating. Keep hands, hair, clothing, spatulas and any other objects away from the mixer's attachments and accessories to avoid personal injury or damage to the appliance.
- Do not remove attachments while the mixer is operating. Switch off the appliance and unplug it before changing accessories or approaching parts that move are in use.
- Check that the bowl is correctly positioned and locked into its base before you start using the appliance with its attachments.
- Do not release or remove the bowl while the appliance is operating.
- Do not exceed the bowl's maximum capacity.
- Let the appliance cool down before cleaning.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not place objects on top of the appliance.
- Do not use harsh detergents or sharp objects to wash or remove residues from the bowl, attachments or accessories.
- Do not use outdoors.
- The stand mixer can be used to mix, whip, whisk and knead solid and liquid ingredients to speed up the preparation time for various recipes. With the addition of optional accessories it is able to grind, mince, grate, mill, roll out and cut pasta into different shapes, etc.
- Close supervision is necessary when any appliance is used by or near children.

SAVE THESE INSTRUCTIONS

Important Safeguards



1 Instructions

1.1 Introduction

Key information for the user:

Instructions



General information on this user manual, on safety and final disposal.

Description



Description of the appliance and its accessories.

Use



Information on the use of the appliance and its accessories, advice on preparing recipes with the appliance.

Cleaning and care



Information for correct cleaning and care of the appliance.



Safety instructions



Information



Advice

1.2 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

1.3 Intended use

- The appliance is designed exclusively for home use.
- Do not use the appliance for anything other than the intended use.
- Do not use outdoors.
- The stand mixer can be used to mix, whip, whisk and knead solid and liquid ingredients to speed up the preparation time for various recipes. With the addition of optional accessories it is able to grind, mince, grate, mill, roll out and cut pasta into different shapes, etc.
- The appliance is not designed to operate with external timers or with remote-control systems.
- This appliance may not be used by people (including children) of reduced physical and mental capacity, or lacking in experience in the use of electrical appliances, unless they are supervised or instructed by adults who are responsible for their safety.



Important Safeguards

1.4 Manufacturer liability

The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than as envisaged;
- Not having read the user manual;
- Tampering with any part of the appliance;
- Use of non-original spare parts;
- Not following the safety instructions.

1.5 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

1.6 Disposal



Power voltage Danger of electrocution

- Turn off the appliance.
- Unplug the appliance from the wall outlet.
- **Old appliances do not belong in household waste!** To comply with current legislation, old appliances, having reached the end of their useful lives, should be taken to a disposal facility where they can be sorted. In this way, any valuable material contained in the old appliances can be recycled and the environment protected. Responsible local authorities or their waste disposal operators can provide further information.

The appliance is packed in non-polluting and recyclable materials.

- Dispose of the packing materials at an appropriate disposal facility.



 
Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the plastic bags.



2 Description

2.1 Product description

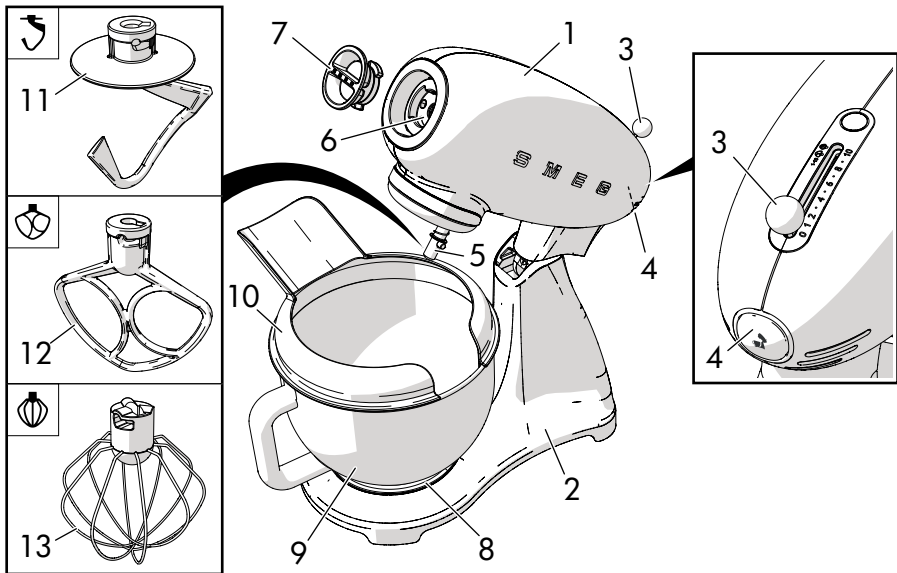

Model SMF01 - Stand Mixer

- | | |
|---|-------------------|
| 1 Motor head | 7 Front hub cover |
| 2 Body | 8 Bowl base |
| 3 Power and speed selector | 9 Bowl |
| 4 Head raising/lowering release button | 10 Pouring shield |
| 5 Lower attachment shaft for supplied attachments | 11 Dough hook |
| 6 Front attachment hub for optional accessories | 12 Flat beater |
| | 13 Wire whisk |



Description

2.2 Description of parts

Motor head (1)

Upper part of the appliance, rotates the attachments and accessories.

Power and speed selector (3)

Lever for speed selection.

The '0' position of the lever corresponds to the OFF position (appliance off).

To start the appliance, position the lever on one of the 10 available speeds (positions 1-10), depending on the type of mixing required.

See "3.5 Speed setting suggestions" for more details and suggestions.

Head raising/lowering release button (4)

Button which releases the motor head to position it in one of its two possible configurations (raised or lowered position).

Lower attachment shaft for supplied attachments (5)

Attachment shaft for inserting attachments. Holds the attachment solidly in position during planetary movement.

Front attachment hub for optional accessories (6)

Attachment for connecting optional accessories.

It is protected by a removable cover.

Bowl base (8)

Base with clamping plate in which to insert the bowl and which then clamp it into position.

Bowl (9)

Stainless-steel bowl, capacity 4.8 liters.

Ideal for holding both large and small quantities of ingredients.

The handle makes it easier to insert and remove.

 
Pouring shield (10)

Plastic cover which can be attached to the bowl to keep ingredients from splattering/coming out of the bowl and to make it easier to add ingredients.



2.3 Standard accessories


Aluminum flat beater

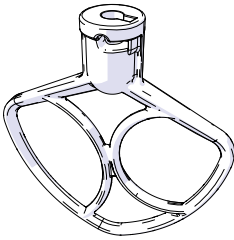

For combining, mixing, and starting all mixing procedures.


For preparing cake batters and pastries, biscuits, icing, etc. and for other, thicker batters and mixes.

 Aluminum dough hook

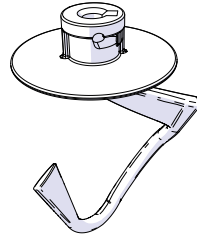

For slowly combining, mixing and kneading leavened dough type mixtures including bread, pasta, pizza, etc.

 
Stainless steel wire whisk

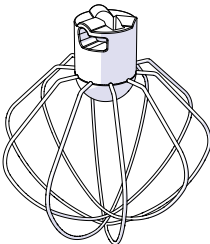

For beating, mixing, whisking and whipping ingredients such as butter, eggs, cream, etc.

Also ideal for preparing creams, custards, sauces, etc.

 Pouring shield

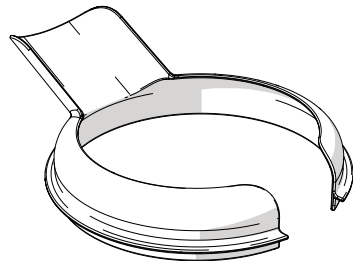

For protecting against splattering and to make it easier to add ingredients while mixing.



The attachments and accessories intended to come into contact with food are made of materials that comply with the provisions of current legislation.



Use

3 Use



Electrical Shock Hazard

- Plug into a grounded 3-prong outlet.
- Do not remove the ground prong.
- Do not use an adapter.
- Do not use an extension cord.
- Failure to follow these instructions can result in death, fire, or electrical shock.

Volts: 120 Volts AC only.

Hertz: 60 Hz



Your stand mixer has a 3-prong grounded plug. To reduce the risk of electrical shock, this plug will fit into an outlet only one way. If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

- Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or service technician install an outlet near the appliance.
- A short power supply cord (or detachable power supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power supply cords or extension cords are available and may be used if care is taken when using them.

If a longer detachable power supply cord or extension cord is used:

- The marked electrical rating of the power supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- If the appliance is of the grounded type, the extension cord should be a grounded type 3-prong cord.

 
3.1 Before first use

1. Remove any protective films or other packaging from the outside or inside of the appliance, including accessories and attachments.
2. Remove any labels (apart from the technical data plate) from the appliance, its accessories and attachments.
3. Remove and wash the bowl, the cover and attachments (see "4 Cleaning and Care").
4. Clean the body and head of the appliance with a damp cloth.
5. Dry the components thoroughly and place them in their working positions.




3.2 Using the stand mixer

1. Place the mixer on a flat, stable and dry surface.
2. Press the release button (1).
3. Hold down the button and raise the head (2), accompanying its movement with your hand.

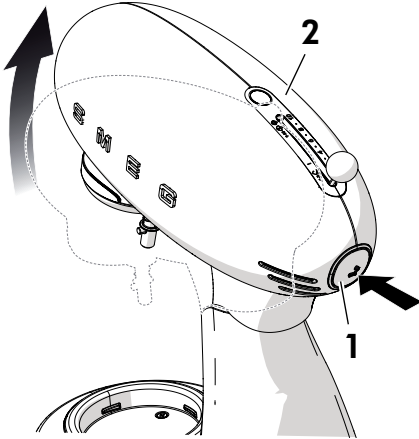

 4. Insert the bowl (3) in its base (4).
Grasp the bowl by its handle (5) and turn the bowl (3) clockwise until it locks into place.

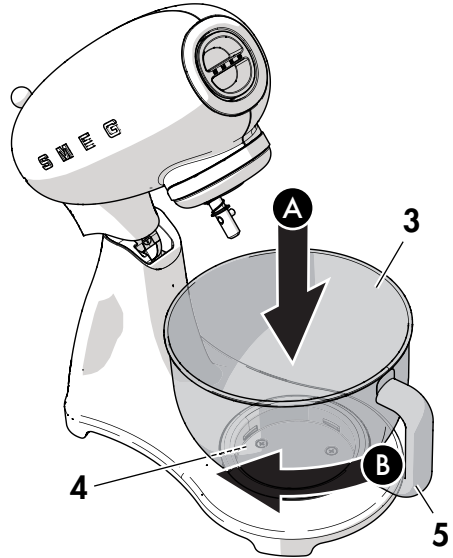

5. Select the attachment required based on the type of mixing to be performed.



There may be a slight movement of the motor head while kneading or mixing heavy ingredients or those in large quantities. This is normal and will not compromise the smooth operation and durability of the device.



Moving parts

 
 
Danger of personal injury

- Do not operate the mixer with the attachment without having locked the bowl in position.




Use


6. Slip the attachment (6) onto the lower attachment shaft (7) and push it upwards. Keep pressing the attachment upwards and turn it counterclockwise until the pin (8) locks fully into place.

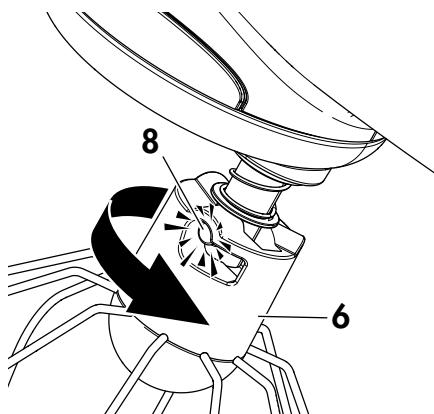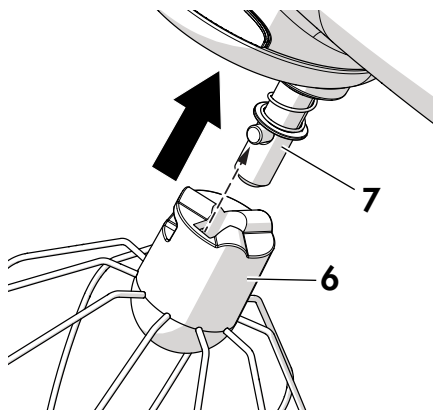

 7. Add the ingredients to the bowl.
8. To close, bring the motor head (2) down by pressing the release button (1), and then tilt the motor head (2) backwards slightly until it releases.
9. Keep the button pressed down and lower the head (2), accompanying its movement with your hand.

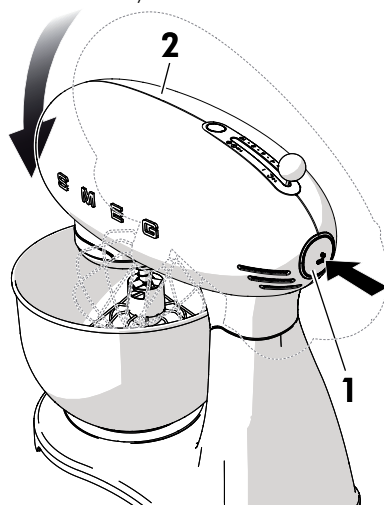

 
10. Position the pouring shield (9) on the bowl if required, with the chute facing outwards.

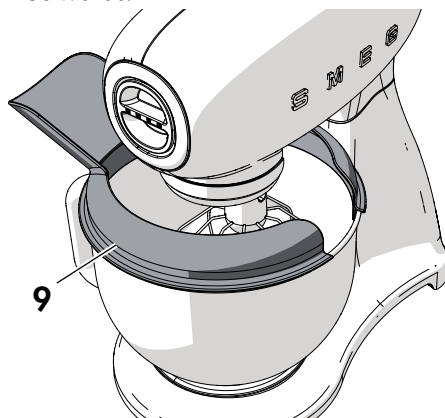

Ensure that the attachment is correctly locked into place on the attachment shaft.



 11. Check that the speed selector (**10**) is positioned on '0' (OFF).
12. Insert the plug into the power socket.
13. Select the required speed (from 1 to 10) using the selector (**10**) to start the appliance and begin mixing the ingredients. See "3.5 Speed setting suggestions".

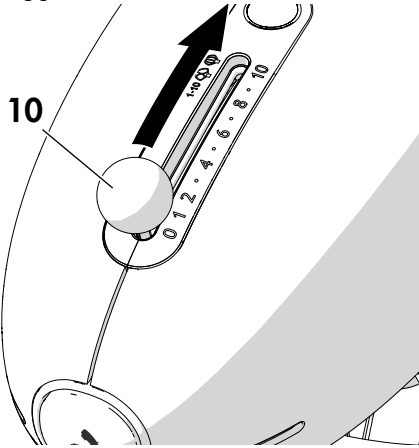

Moving parts

Danger of personal injury and damage to the appliance

- Do not touch the attachments while the appliance is moving
- Do not operate the mixer with the attachment inserted and the bowl empty.

NE



Warning!

- For greater safety, each time that power is cut to the motor, for example by raising the motor head or unplugging the appliance, the speed selector must be returned to zero in order to restart the mixer.



 
In order to stop the appliance and raise the head to change the attachment or remove the bowl, move the speed selector to '0' (OFF).




Use

When you have finished using the mixer:

1. Position the speed selector (10) on '0' (OFF) and unplug the mixer from the socket.
2. Remove the pouring shield, if it is on the bowl (9).

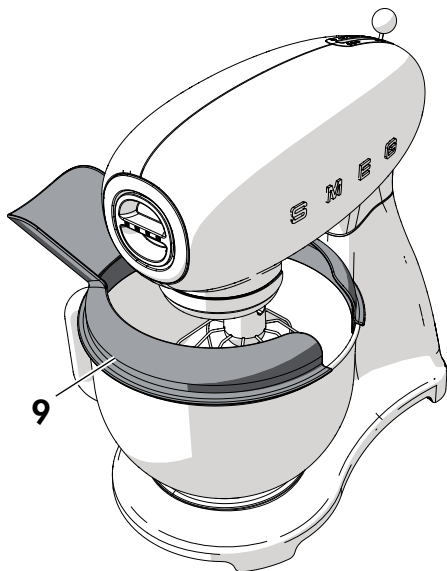

 3. Press the release button (1) to raise the head (2).



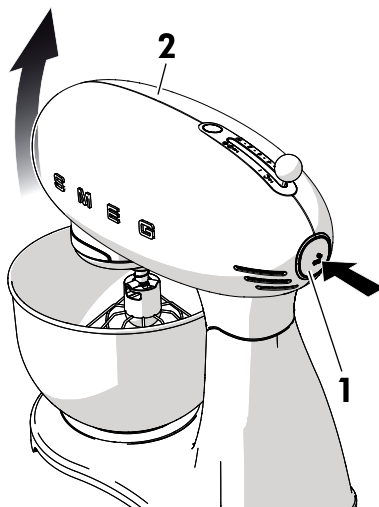




4. Push the attachment (6) upwards slightly and turn it clockwise to unlock it from the pin (8).
Remove the attachment (6) from the lower attachment shaft (7).

5. Remove the bowl (3) from its base (4) by turning it counterclockwise to release it.

   NE

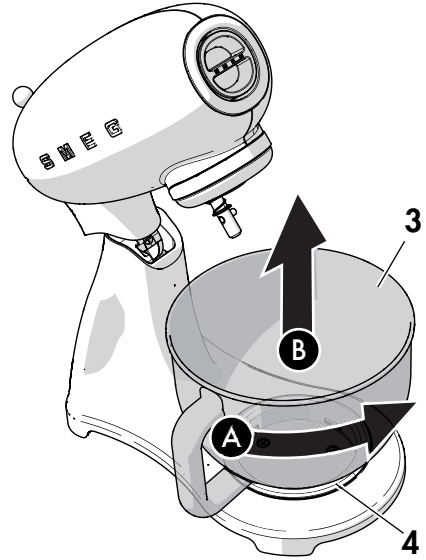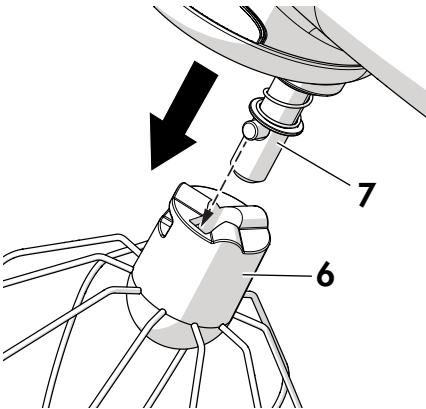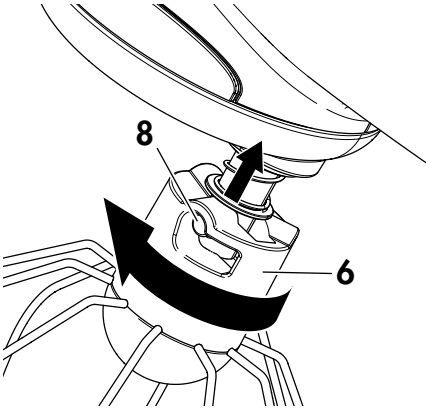





Use

3.3 Using the pouring shield

 1. Fit the pouring shield (1) to the upper lip of the bowl after inserting the bowl in its base, the attachment on the lower attachment shaft and lowering the head to the operating position.

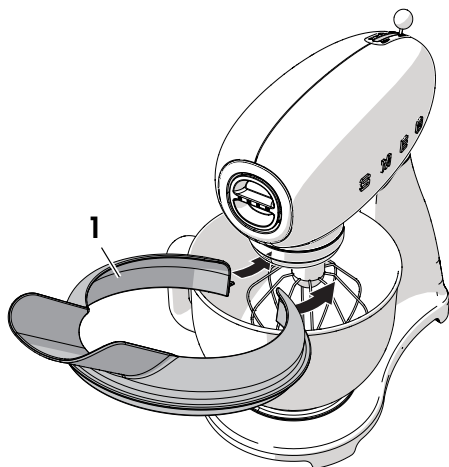

 2. Fit the pouring shield with the opening (1) facing outwards in order to add ingredients to the bowl without stopping the mixer.

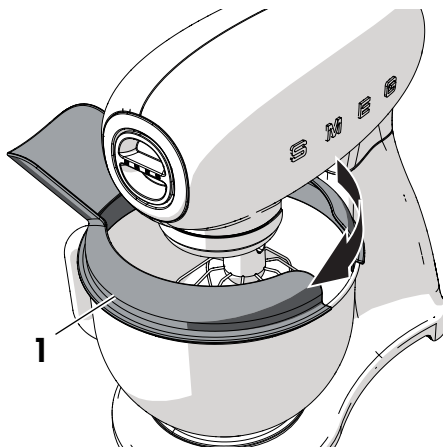

Moving parts

Risk of damage to the pouring shield

- Remove the pouring shield to raise or lower the head with the attachment on the lower attachment shaft.



3.4 Functions

Safety lock system

The appliance has a safety system which automatically shuts off the appliance when the motor head is raised.



You should nevertheless always place the speed selector in the 0 (OFF) position before pressing the button to move the motor head.

Smooth Start Function

The Smooth Start function starts the mixer up with a reduced initial speed, regardless of the speed set with the selector.

 
The speed progressively increases until the set speed is reached.

This avoids damage to the appliance and the attachments, and ensures ingredients are not thrown from the bowl.

Planetary movement

The planetary movement is generated by rotation (1) of the attachment around its axis in the opposite direction to the rotary movement (2) of the mixer.

This movement maximizes coverage of the entire bowl with consistent results for all mixtures.

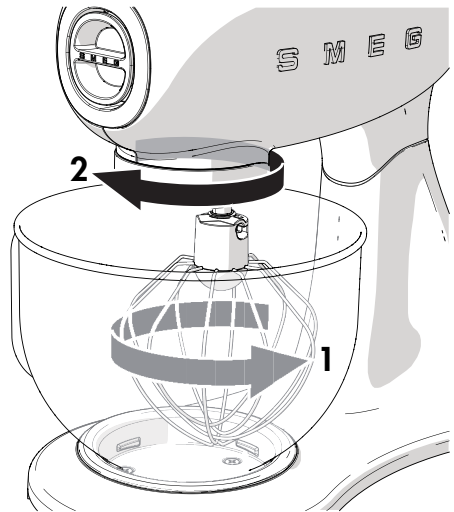

Hot appliance

- Following prolonged use, the upper part of the motor head may become warm. This is not usually indicative of a malfunction, however.



 
Use

3.5 Speed setting suggestions



The speed selector shows the most appropriate attachment to use with the selected speed.

The speeds indicated in the table are approximate and can vary depending on the recipe and the interaction of the different ingredients used.

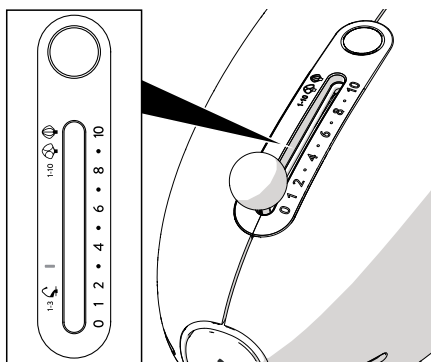

Speed setting	Function	Attachment
LOW 1 - 3	COMBINING AND KNEADING Combining ingredients. Kneading - preparing leavened doughs (bread, pizza, confectionery, etc.).	  
MEDIUM 4 - 7	MIXING Mixing and beating dense batters. Beating eggs and butter, cake and cookie mixes.	 
HIGH 8 - 10	WHIPPING AND WHISKING Whisking light or dense batters such as sponge cake mixes, whipping cream, egg whites or sauces.	 



General advice

- Turn on the appliance at a low speed until all the ingredients are mixed, then increase the speed based on the required operation.
- When adding ingredients, always pour them onto the side of the bowl and not directly onto the moving attachment.
- Reduce the speed when you add dry or liquid ingredients to keep them from splattering or coming out of the bowl. Increase the speed again when they have been mixed in.
- Use the pouring shield on the bowl for liquid mixtures or when adding dry ingredients to avoid dirtying objects in the vicinity of the mixer or being hit by splattering liquids or powder.
- Keep the bowl and attachments clean and attach them to the appliance only when they are perfectly dry.
- Clean the head and body of the mixer carefully using a damp cloth when they are dirty.
- Do not put the appliance and its attachments away unless they have been thoroughly cleaned and dried.

Recommendations for recipes using eggs

- For the best results, use eggs at room temperature.
- When working with stiff pasta doughs, do not exceed the quantity equivalent to using 3 medium eggs and add small quantities of water if necessary.
- Before whisking egg whites, ensure that there is no residue of oil/fat or egg yolk in the bowl or on the attachments.
- The mixer allows you to whisk egg whites very quickly. Monitor the process carefully to avoid overworking them.



Recommendations for kneading

- Use speed setting 2 or 3 to knead leavened doughs or particularly tough mixtures such as egg pasta. Using the appliance on higher speeds with these stiffer doughs risks overloading it, increasing the probability of a malfunction.
- Do not exceed 2.2 lbs of standard flour or 1.8 lbs of wholewheat or strong flour (e.g. bread flour).
- When preparing egg pasta, do not exceed a quantity equivalent to using 3 medium eggs and add small quantities of water if necessary.
- Take care to use an adequate proportion of water in the dough (at least 50-60% by weight with respect to the quantity of flour). Doughs which are too dry and therefore stiff can overload the motor, increasing the probability of a malfunction. If you notice that the motor is straining, add small quantities of water to help the mixture come together, or divide the dough mixture in two and work the quantities separately.
- Do not exceed the bowl's maximum capacity so as not to overload the appliance.

- If the mixer is struggling, turn it off and remove half of the bowl's contents. The appliance should then be able to process the two halves separately.
- Ingredients mix more easily if liquids are added to the bowl first.



There may be a slight movement of the motor head while kneading or mixing heavy ingredients or those in large quantities. This is normal and will not compromise the smooth operation and durability of the device.



4 Cleaning and Care

4.1 Instructions



Improper use Danger of electrocution

- Switch off and unplug the appliance before cleaning the mixer and its attachments and accessories.



Improper use Risk of damage to surfaces

- Do not use steam jets to clean the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach on steel parts or parts with metallic finishes (e.g. anodized, nickel- or chrome-plated).
- Do not use abrasive or corrosive detergents (e.g. powder products, stain removers and metallic sponges).
- Do not use rough or abrasive materials or sharp metal scrapers.

4.3 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

4.4 Ordinary daily cleaning

To clean the mixer body, wipe it down with a damp cloth. Dry it with a soft cloth or microfiber cloth.



Splattered liquids or batters should be removed immediately using a soft, damp cotton cloth.

The accessories provided and the pouring shield can be hand-washed using a mild detergent and soft sponge.

The bowl can be washed in the dishwasher

4.5 Food stains or residues

Do not use metallic sponges or sharp scrapers as they will damage the surfaces. Use ordinary non-abrasive products with the aid of wooden or plastic utensils if necessary. Wipe over thoroughly and dry with a soft cloth or microfiber cloth.

4.2 Maintenance

All service should be performed by an authorized service representative.



Cleaning and Care

4.6 What to do if...

Problem	Possible cause	Solution
The motor will not start	The motor has overheated.	Disconnect the mixer from the power and leave the motor to cool.
	The plug is not properly inserted in the power socket.	Insert the plug into the power socket. Do not use adaptors or extensions. Check that the breaker is on.
	The cable is defective.	Have the cable replaced at an Authorized Service Center.
	Lack of power.	Check that the house main breaker is on.
	The head has been raised during operation.	The safety lock system has operated. Move the speed selector to 0 (OFF), press and hold down the button on the rear to release the head and lower it.

Cleaning and Care



Problem

Possible cause

Solution



The mixer is not resting on a stable surface. Place the mixer on a flat, stable surface.

The anti-slip rubber feet are worn. Have them replaced at an Authorized Service Center.

The mixer vibrates

The speed used is too high or the load is excessive. Set a lower speed and ensure the bowl has not been overfilled.

The bowl has not been correctly locked into its base. Check that the bowl is correctly locked into its base.

The lower attachment shaft has come loose over time. Have the mixer checked and adjusted at an Authorized Service Center.

The attachments hit the walls of the bowl

The attachment or the bowl is not properly inserted. Turn the speed selector to 0, press the button on the back to lift the head to check that the attachment is inserted correctly in the lower attachment shaft and that the bowl is inserted correctly in the base.



Cleaning and Care

Problem	Possible cause	Solution
The attachment is struggling to turn inside the bowl	The dough mixture is too thick and is stopping the attachment from turning.	Add water or other liquid to loosen the dough mixture.
	The bowl is too full.	Remove half the bowl's contents and work it separately.



If the problem has not been resolved or in the event of another type of fault, contact your local technical support center.

The manufacturer reserves the right to make any changes deemed useful for improvement of his products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

Le constructeur se réserve la faculté d'apporter, sans préavis, toutes les modifications qu'il jugera utiles pour l'amélioration de ses produits. Les illustrations et les descriptions figurant dans ce manuel ne sont pas contraignantes et n'ont qu'une valeur indicative.

El fabricante se reserva el derecho a aportar sin aviso previo todas las modificaciones que considere útiles para la mejora de sus propios productos. Las ilustraciones y las descripciones contenidas en este manual no comprometen, por tanto, al fabricante y tienen un valor meramente indicativo.



914775910/D