




NOIR 48" DUAL-FUEL PROFESSIONAL RANGE
Includes Gas Grill

MODELS:

JDRP648HM00 (Stainless)


BURNER BOX AND GRILL PARTS

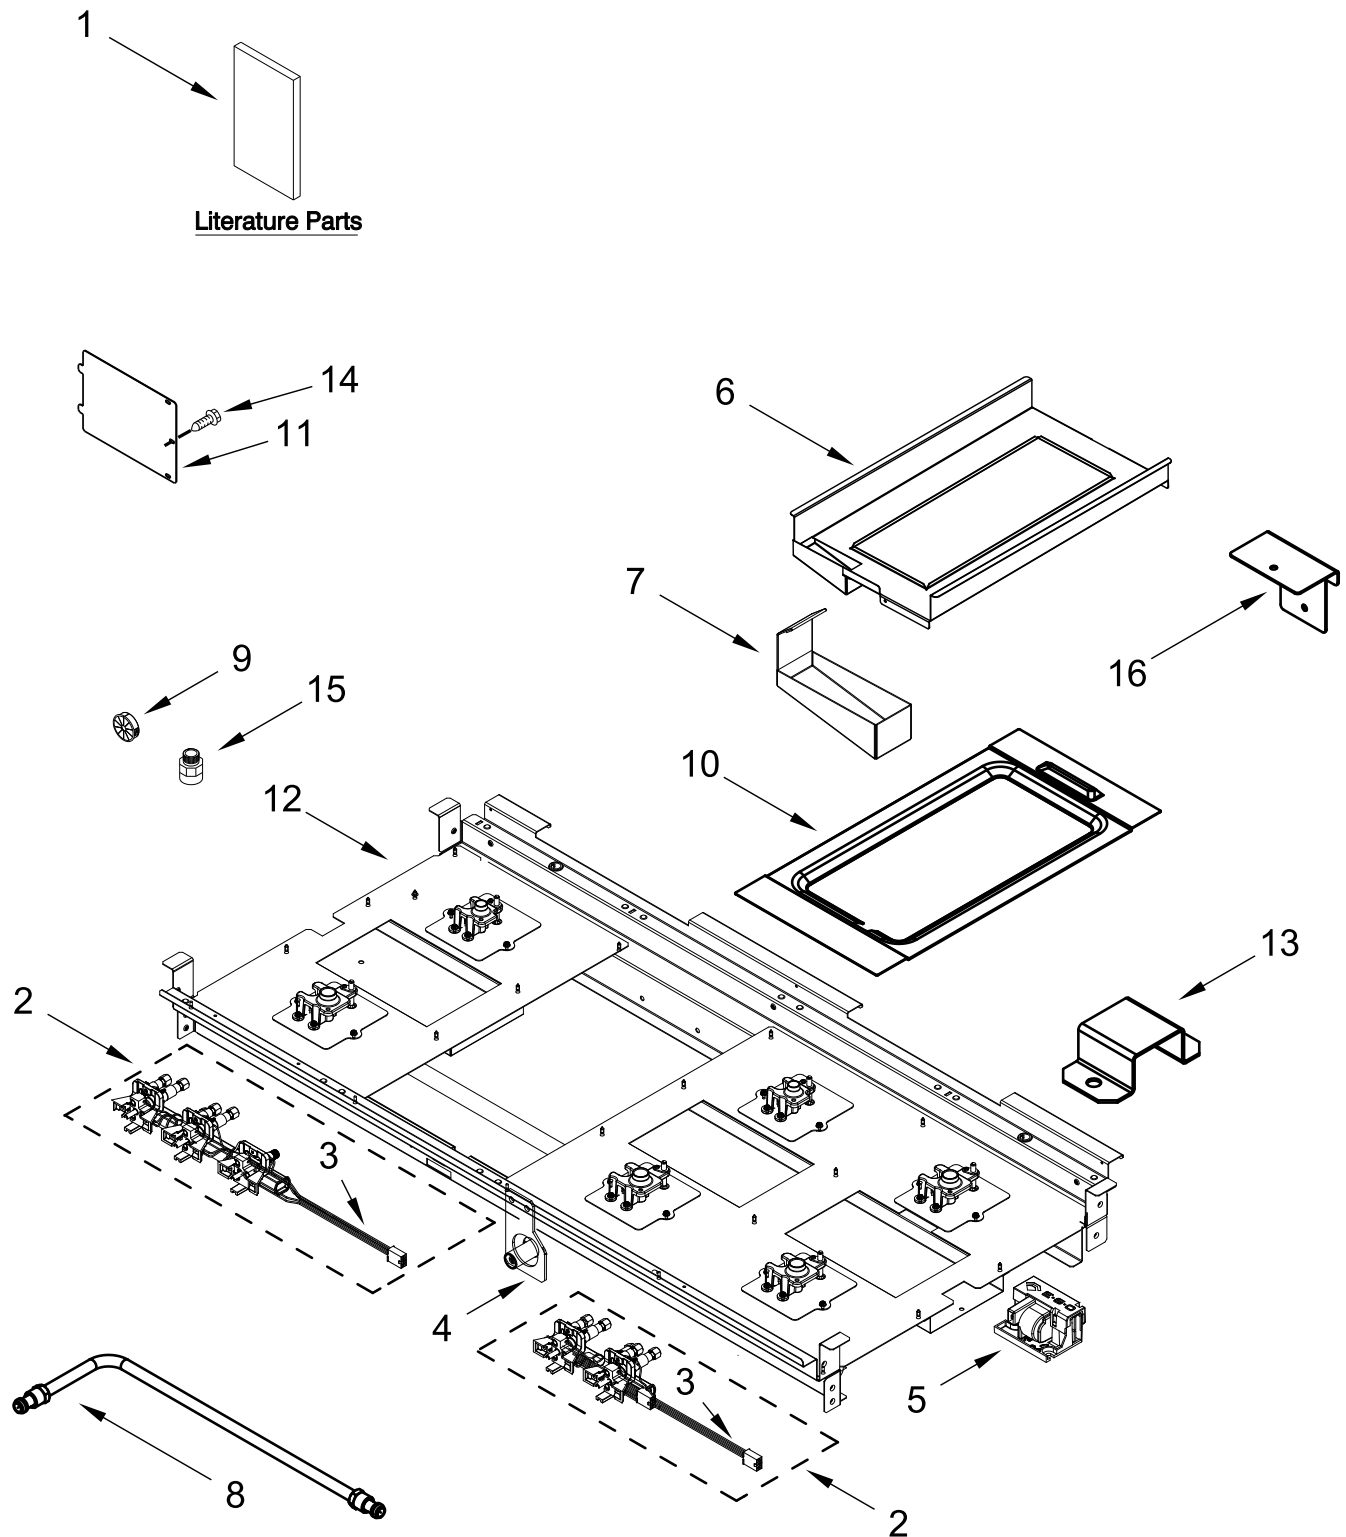

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	13	W11174418	Bracket, Grill Orifice Holder
	W11114330	Guide, Use and Care				14	7101P426-60	Screw
	W11114333	Instructions, Installation		W11106300	Switch, Harness (Right Center Front, Right Center Rear, Right Front, Right Rear)	15	4453116	Adapter, Male
	W11184746	Guide, Internet Connectivity				16	W11285353	Bracket, Grill Grease Capture
	W11266584	Diagram, Wiring (Cooktop)	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11202370	Diagram, Wiring (Oven)	5	W11121317	Module, Spark		W11297779	Harness, Main (30")
	W11202265	Sheet, Tech	6	W11120957	Capture, Grill Grease		W11200311	Harness, Main (18")
2	W10893054	Assembly, Valve Manifold	7	W11174414	Tray, Grill Drip		W11200330	Harness, Cooktop
		(Left Front, Left Rear, And Grill)	8	W10892803	Tube, Manifold Supply (Left)		W10780278	Harness, Door Lock
	W10893058	Assembly, Valve Manifold		W10892801	Tube, Manifold Supply (Right Center)		W11200318	Harness, Communication
		(Right Center Front And Right Center Rear)		W10892802	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
	W11183722	Assembly, Valve Manifold	9	W10189097	Bushing, Burner Box		W11212216	Cord, Power
		(Right Front and Right Rear)	10	W11120965	Deflector, Grill Heat		9759877	Retainer, Strain Relief
			11	W10115843	Cover, Ignition		4450800	Screw, Grounding
			12		Box, Burner (Not Serviced)		9757778	Bushing, Snap Split
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238041	Kit, LP Conversion


COOKTOP, BURNER, AND GRILL PARTS

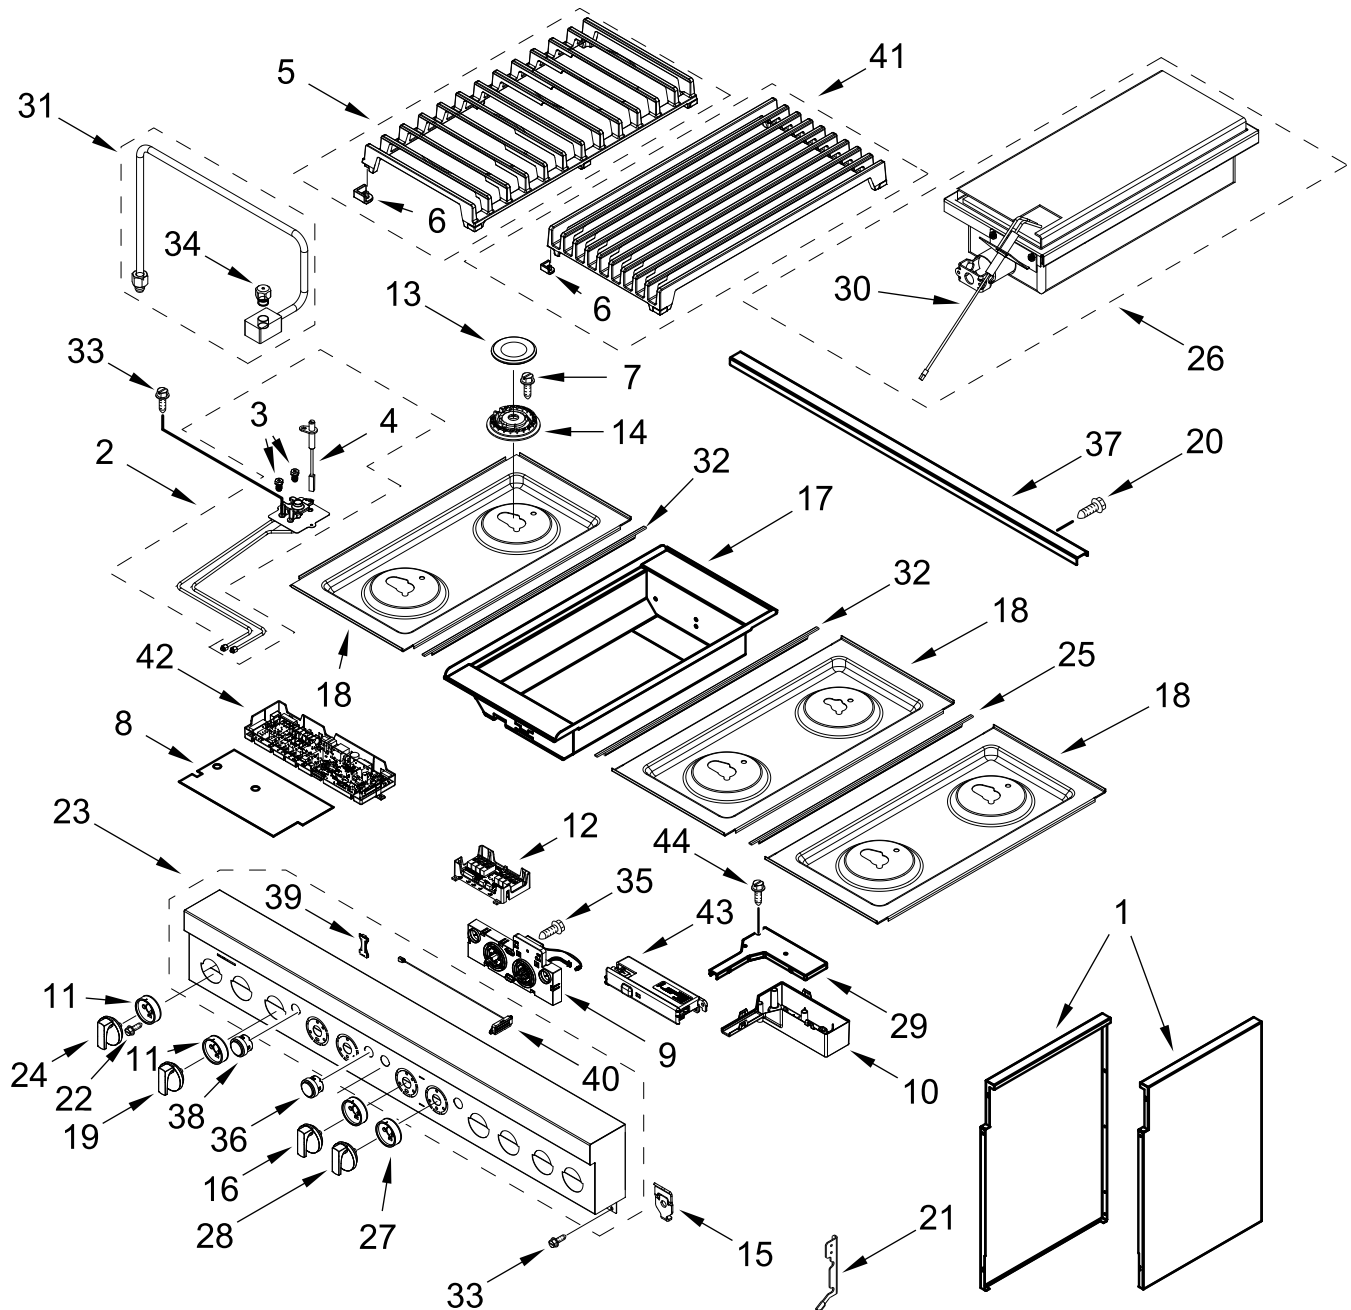

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	5		Assembly, Grate	21	W10130760	Bracket, Moving Console (Left)
	W11111428	Panel, Cabinet Side (Right)		W11172289	Black (Left)		W10130759	Bracket, Moving Console (Right)
2	W10892807	Assembly, Orifice Holder (Left Front)		W11172654	Black (Right Center)	22	W10919387	Screw
	W10892495	Assembly, Orifice Holder (Left Rear)		W11172625	Black (Right)	23	W11253771	Panel, Console
	W10892471	Assembly, Orifice Holder (Right Center Front)	6	W11042504	Bumper, Grate	24		Knob, Burner (For 6 Cooktop Burners)
	W10892724	Assembly, Orifice Holder (Right Center Rear)	7	W11196257	Screw		W10887596	Stainless Trim, T-Strip
	W10892726	Assembly, Orifice Holder (Right Front)	8	W11281269	Barrier, Appliance Manager	25	W10271524	Black
	W10892474	Assembly, Orifice Holder (Right Rear)	9	W11292568	Interface, User	26	W11120976	Assembly, Grill Burner
3	W10892422	Orifice, Main (17.4K) (Left Front and Right Front)	10	W11205795	Cover, WIFI Outer	27		Bezel, Oven (For 4 Oven Knobs)
	W10892418	Orifice, Main (15.4K) (Left Rear, Right Center Front, Right Rear)	11	W11090284	Bezel, Cooktop (For 6 Cooktop Burners and Grill)		W11042375	Stainless Knob, Oven Temperature
	W10892440	Orifice, Main (7.2K) (Right Center Rear)	12	W10890116	Manager, Appliance (Expansion)	28	W10891868	Stainless
	W10892435	Orifice, Simmer (2.6K) (All But Right Center Rear)	13		Cap, Burner	29	W11205794	Cover, WIFI Inner
	W10892429	Orifice, Simmer (2.0K) (Right Center Rear)		W11121392	Black (Includes 6)	30	W11174598	Electrode, Grill
4	W11238757	Igniter (All But Right Center Rear)	14	W10891987	Spreader, Flame (High) (All But Right Center Rear)	31	W11197929	Assembly, Grill Orifice Holder (Left Center)
	W11238756	Igniter (Right Center Rear)		W10892022	Spreader, Flame (Low) (Right Center Rear)	32	W10291193	Trim, L-Strip
			15	W11036559	Spring Clip, Range	33	7101P426-60	Screw
			16		Knob, Oven Mode	34	W10892423	Orifice, Grill (18K) (Left Center)
				W10891869	Stainless	35	3400814	Screw
			17	W11174429	Assembly, Grill Box	36	W11090650	Button Assembly, Oven Start
			18		Panel, Cooktop	37	W11156418	Trim, Island
				W11038237	Black (Left)	38	W11090651	Button Assembly, Oven Light
				W11038241	Black (Right Center)	39	W10896369	Assembly, Light Pipe
				W11038254	Black (Right)	40	W11130078	Antenna, WIFI
			19		Knob, Grill	41	W11172682	Assembly, Grill Grate
				W10894926	Stainless	42	W11100272	Manager, Appliance (Powermax)
			20	7101P338-60	Screw	43	W11110768	Assembly, WIFI Module
						44	7101P624-60	Screw


48" CHASSIS PARTS

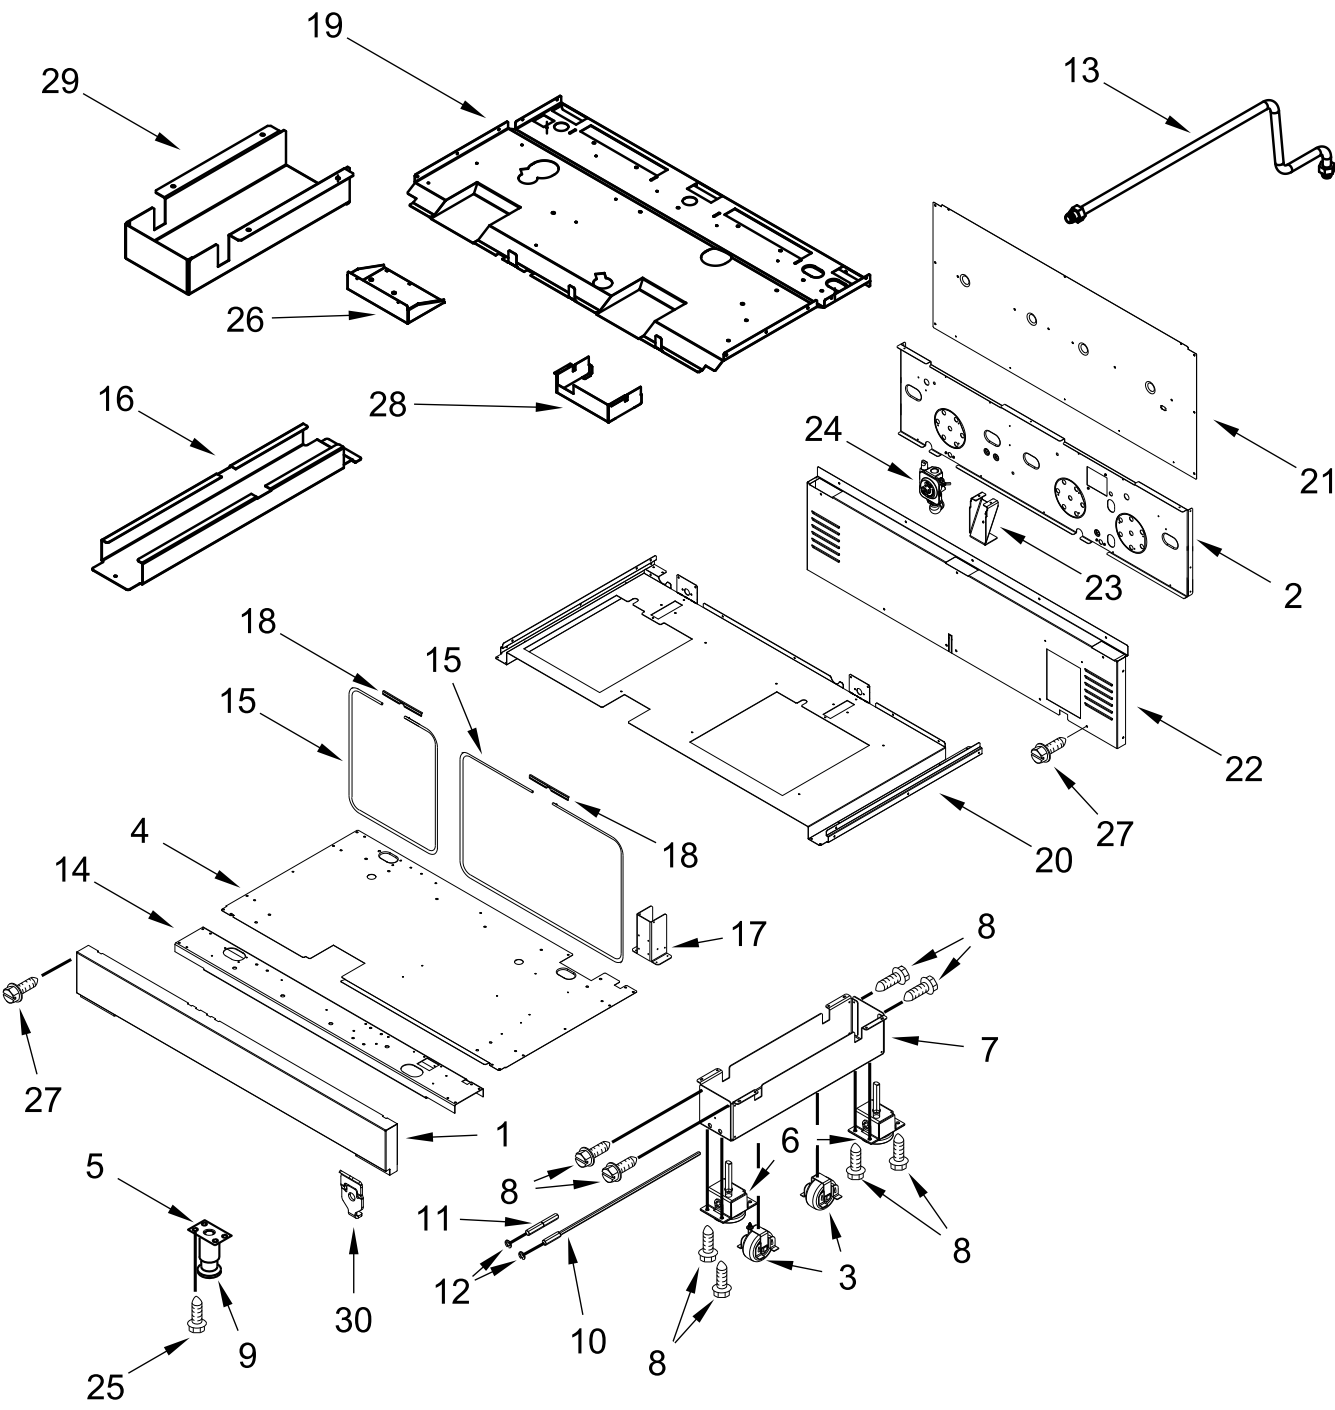

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	13	W11106963	Tube, Pressure Regulator	22	W11034123	Panel, Back Bottom
2	W11105913	Back, Chassis	14	W11087494	Support, Channel	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	15	W11115328	Gasket, Oven (30")	24	W10449140	Regulator, Pressure
4	W11110260	Duct, Bottom (48")		W11115326	Gasket, Oven (18")	25	3400518	Screw
5	9759118	Plate, Mounting	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W10115819	Column, Central	27	7101P426-60	Screw
7	W10908710	Base, Leveling Leg	18	W10216520	Retainer, Gasket (9" Long)	28	W11106335	Cabinet, Appliance Manager
8	4449743	Screw	19	W11037132	Top, Chassis	29	W11084360	Channel, Wire
9	9759117	Foot, Dual Fuel	20	W11040800	Chassis, Bottom	30	W11036559	Spring Clip, Range
10	W10115869	Shaft, Long	21	W11103335	Panel, Back Top			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


30" OVEN PARTS

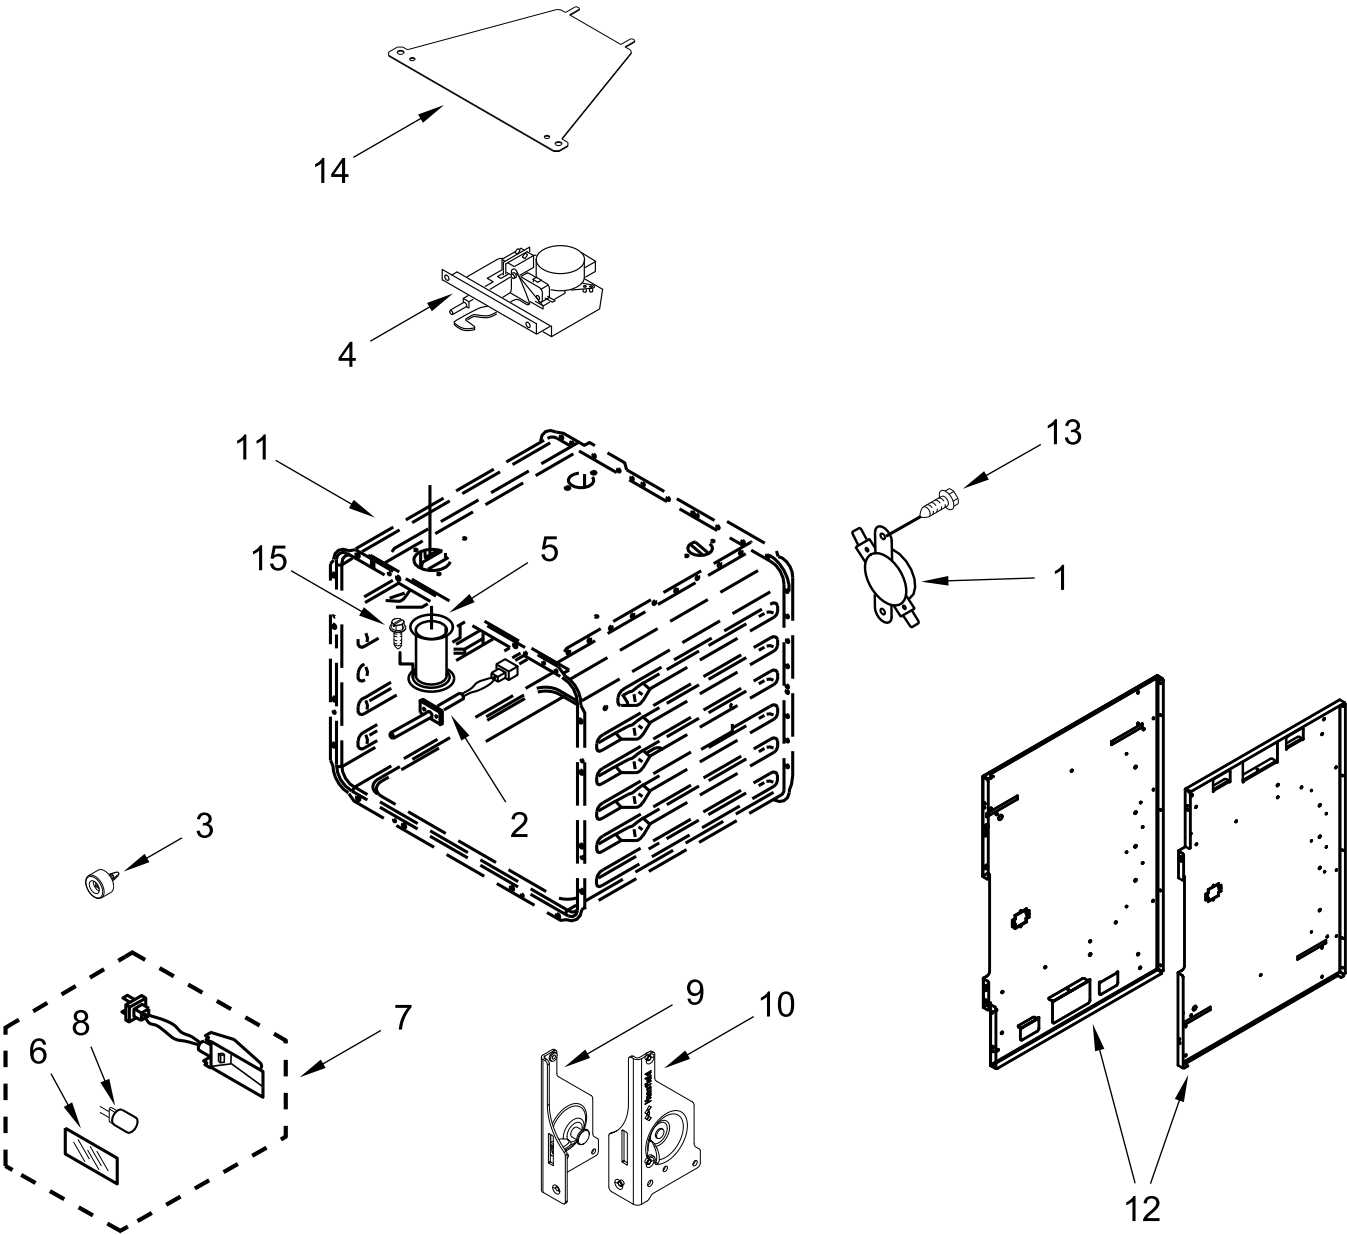

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10105790	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap, 30"
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10299350	Insulation, Back, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W10169756	Lens, Light	13	7101P426-60	Screw			
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


18" OVEN PARTS

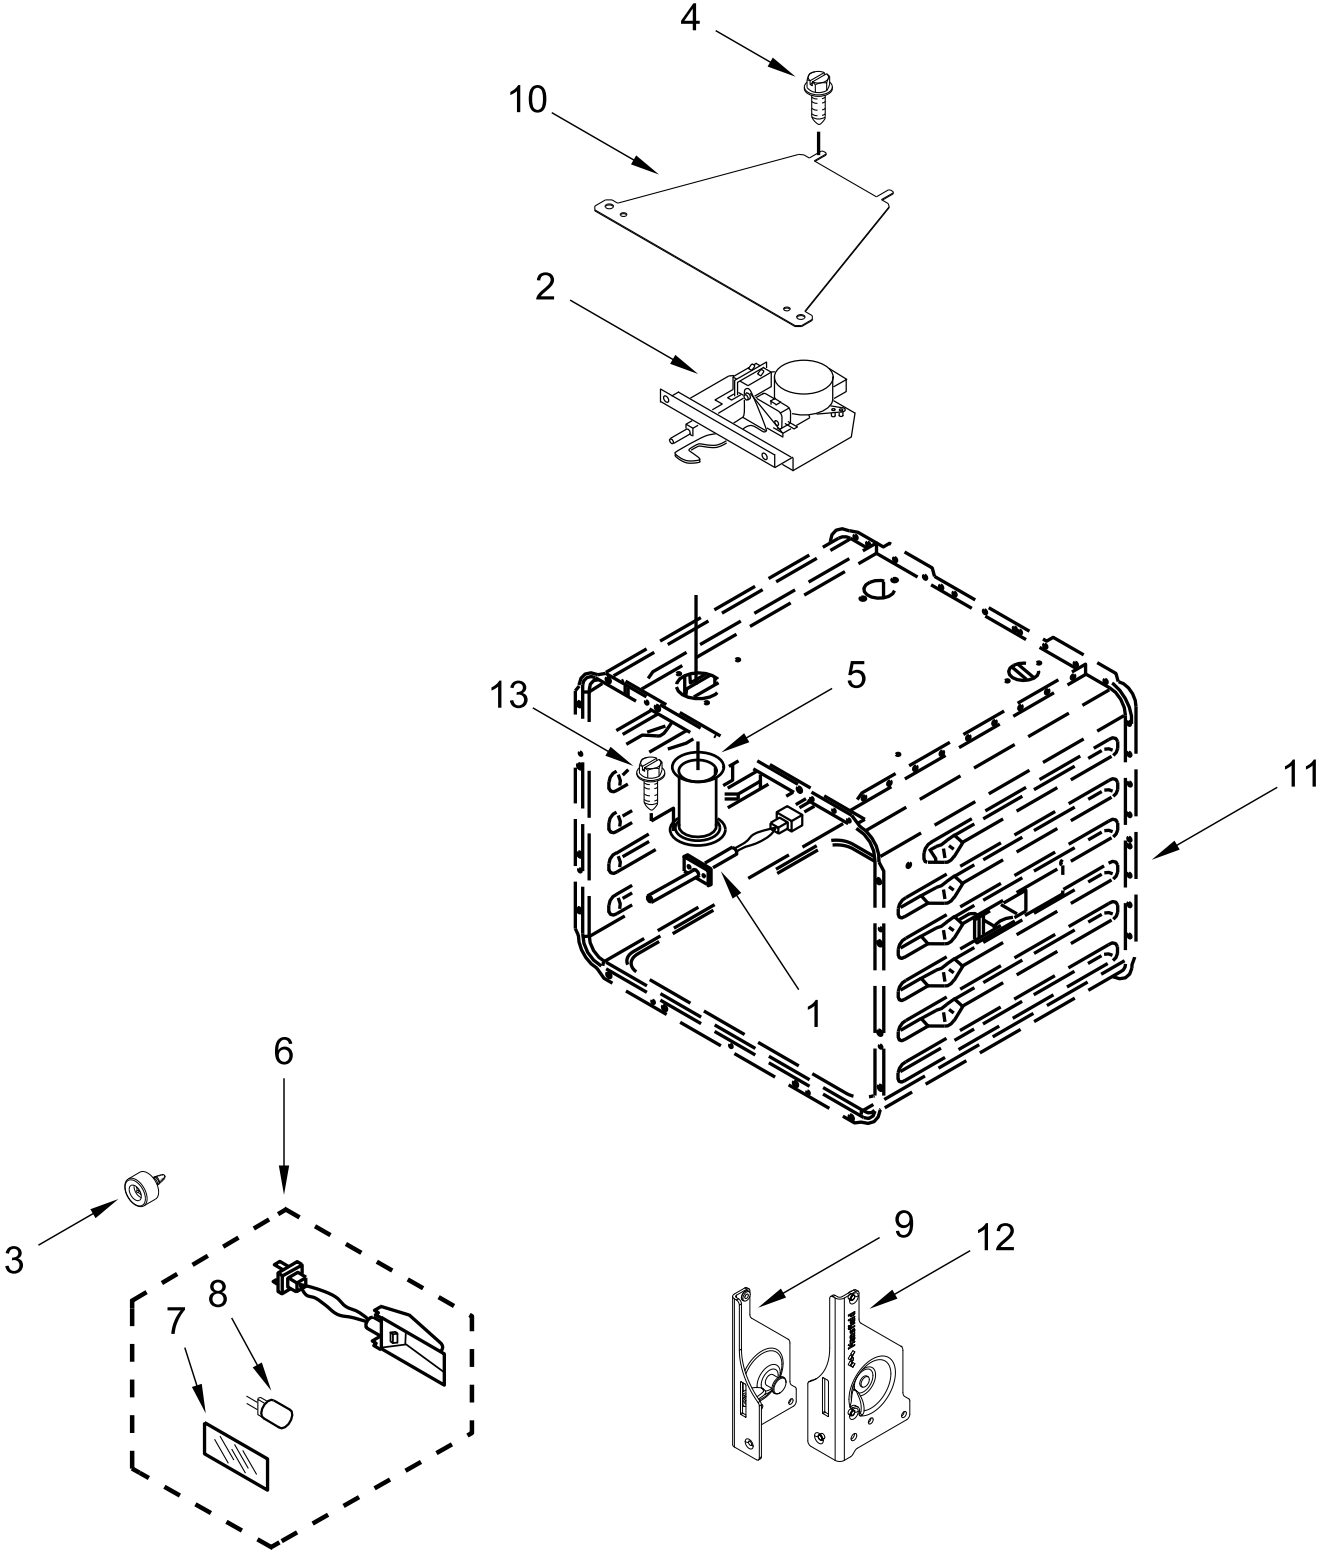

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	13	3196176	Screw
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			FOLLOWING PARTS NOT ILLUSTRATED
3	W10105790	Bumper & Screw	10	W10160858	Cover, Latch		W10282820	Insulation, Wrap, 18"
4	7101P426-60	Screw	11		Liner, Oven (Not Serviced)		W10282812	Insulation, Back, 18"
5	W10288078	Tube, Vent	12	W11096293	Receiver, Hinge (Right)		3400968	Nut
6	W11223932	Assembly, Oven Light						
7	W10169756	Lens, Light						


VENTING PARTS

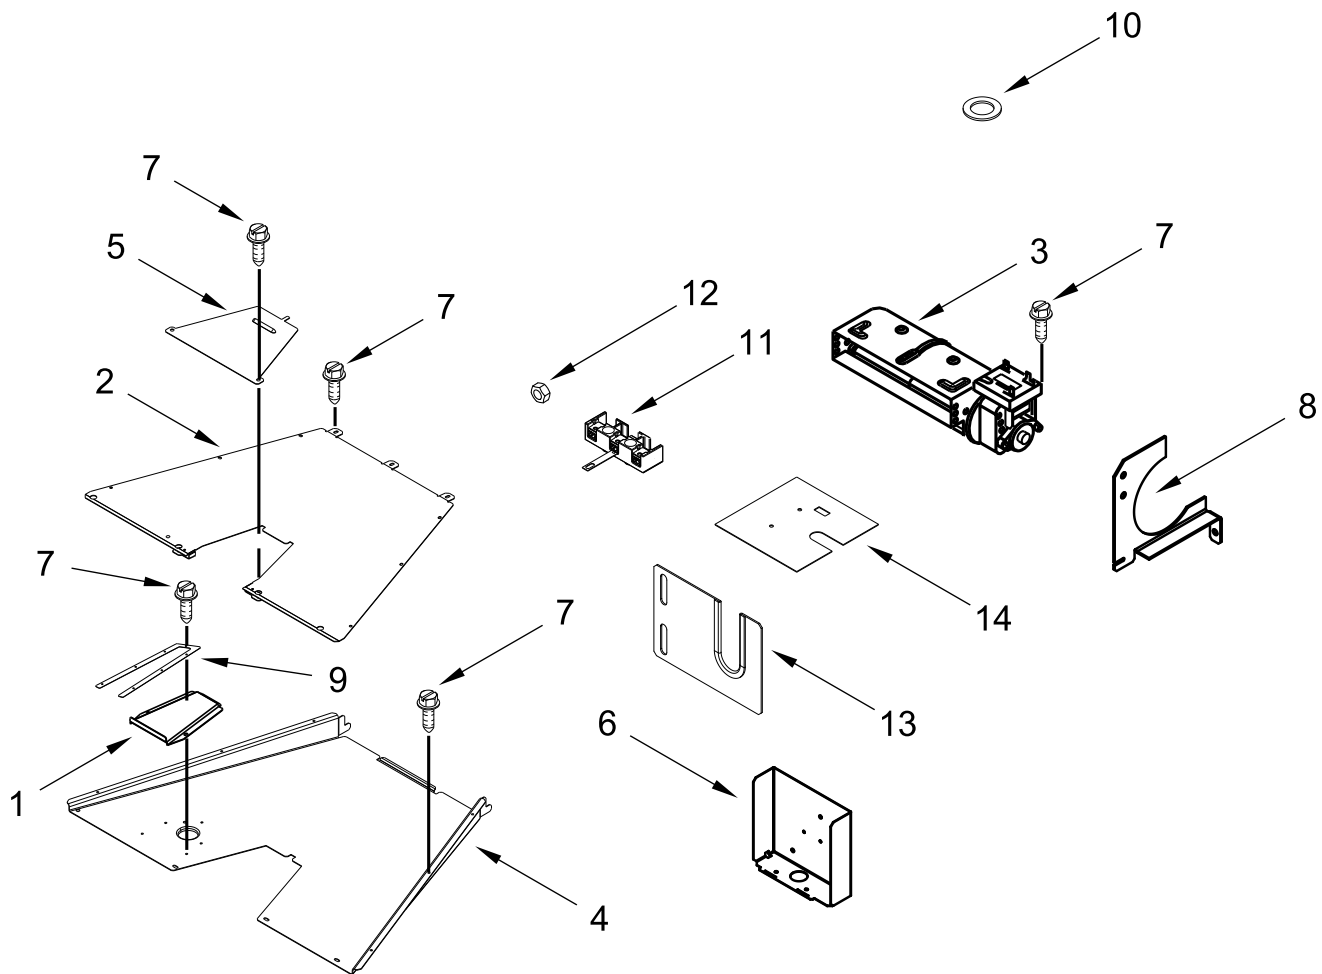

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")
	W10818235	Slope, Exhaust Vent (18")		W11113378	Vent, Cooling Bottom (18")		W10270402	Seal, Vent Slope (18")
2	W11105223	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18")	6	W11284049	Box, Terminal	11	9761958	Block, Terminal
			7	7101P426-60	Screw	12	112432	Nut, Hex
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel
						14	9759721	Insulator, Terminal Box


30" OVEN DOOR PARTS

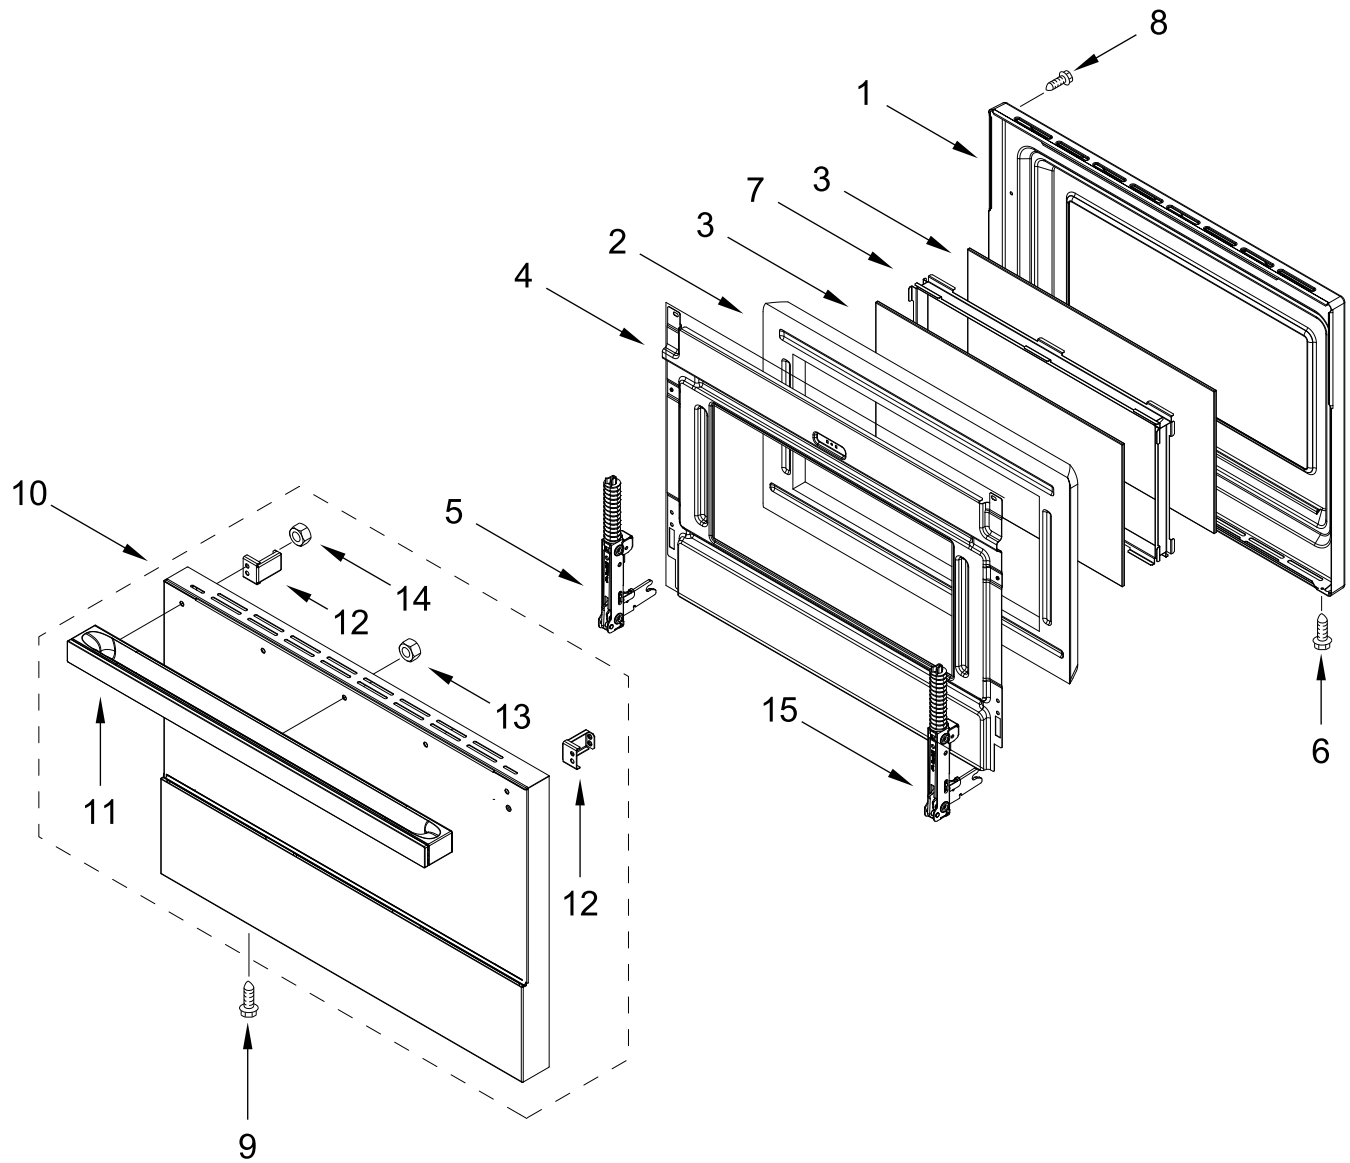

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	8	W10284411	Screw with Washer	13	W11198435	Nut
2	W10321285	Insulation, Door	9	W10162096	Screw	14	999299	Nut
3	W11184409	Glass, Inner	10	W10870221	Assembly, Outer Door Glass (Includes Handle)	15	W11096979	Hinge, Door (Right)
4	W11194821	Retainer, Glass						
5	W11096980	Hinge, Door (Left)	11	W11125541	Handle, Door			
6	W10607120	Screw	12	W11194816	Bracket, Handle			
7	W10272594	Frame, Glass						


18" OVEN DOOR PARTS

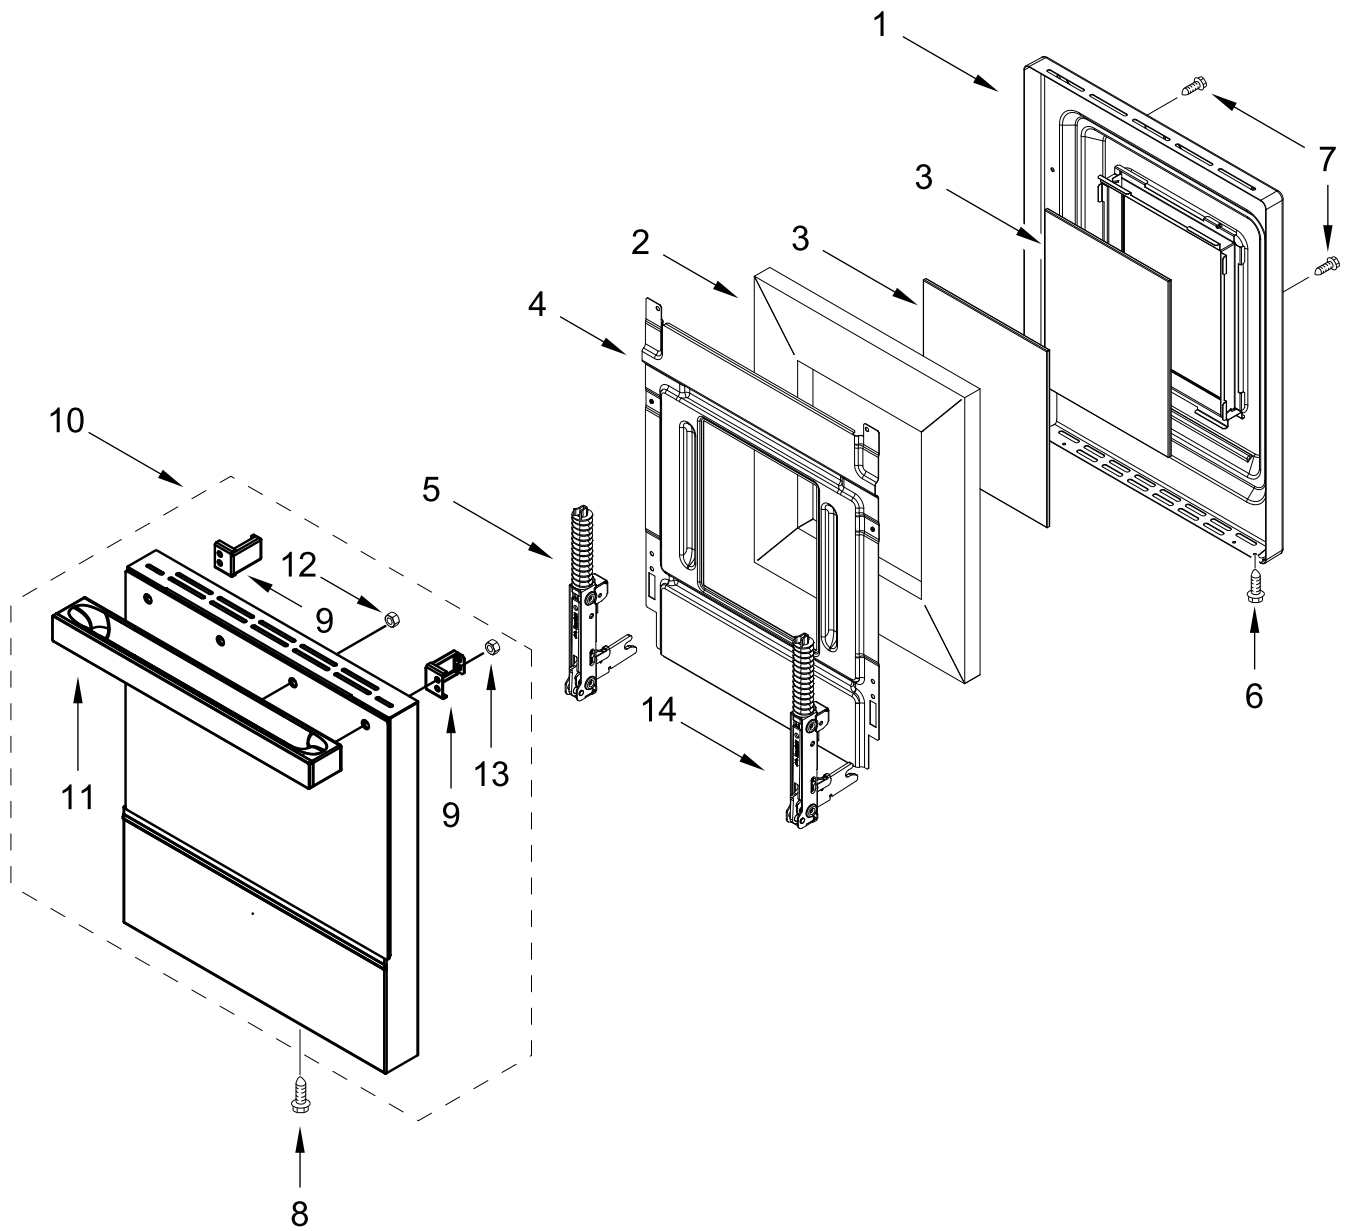

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10284411	Screw with Washer	11	W11125539	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W11198435	Nut
3	W11036789	Glass, Inner	9	W11194816	Bracket, Handle	13	999299	Nut
4	W11194818	Retainer, Glass	10	W10870212	Assembly, Outer Door Glass (Includes Handle)	14	W11096981	Hinge, Door (Right)
5	W11096982	Hinge, Door (Left)						
6	W10607120	Screw						


30" INTERNAL OVEN PARTS

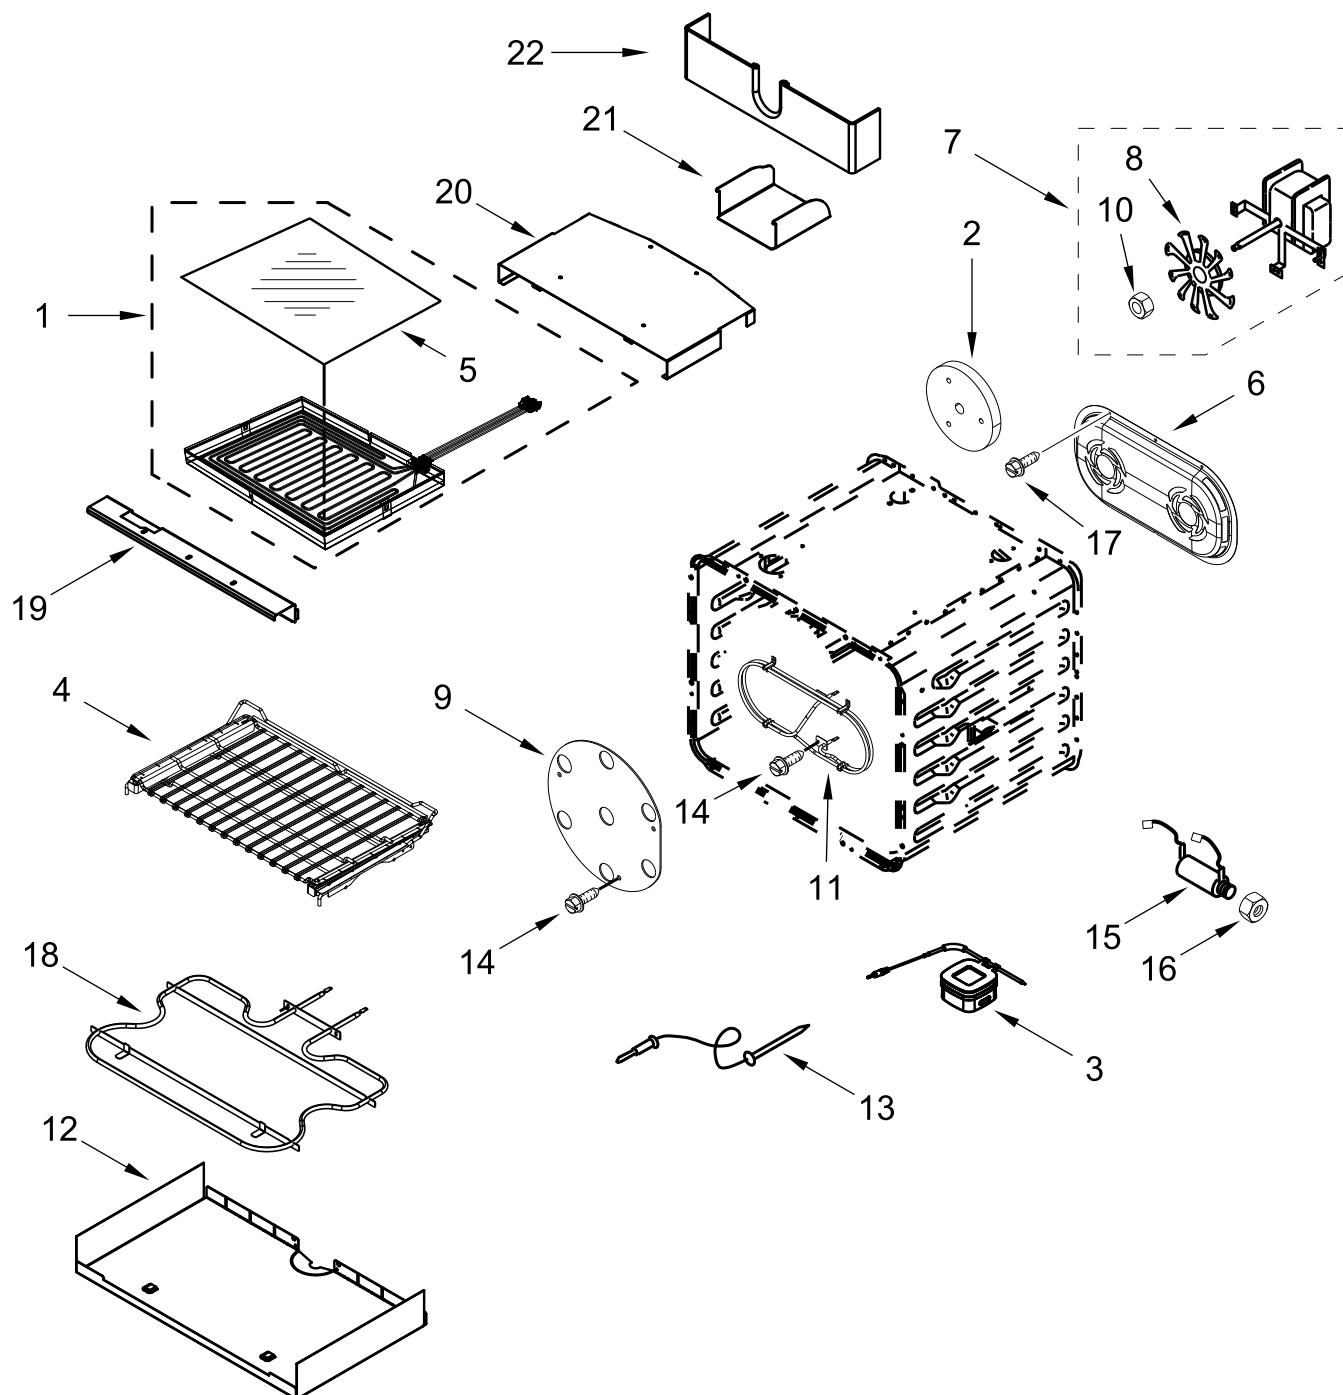

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11210530	Element, Broil	8	W11108376	Blade, Fan	16	W11033111	Nut, Locking
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	17	W10739592	Screw
3	W11186918	Probe, Wireless Meat	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
4	W11111342	Rack, Oven (Sliding)	11	W10116434	Element, Convection	19	W11112336	Bracket, Broil Front
5	W11193191	Glass, Broil Element	12	W11109421	Tray, Hidden Bake	20	W11158843	Bracket, Broil Top
6	W11232487	Baffle, Convection	13	9755542	Probe, Temperature	21	W11111391	Cover, Broil Terminal
7	W11121400	Fan, Convection	14	4449154	Screw	22	W11170823	Cover Plate, Terminal Hole
			15	9755543	Jack, Meat Probe			

18" INTERNAL OVEN PARTS

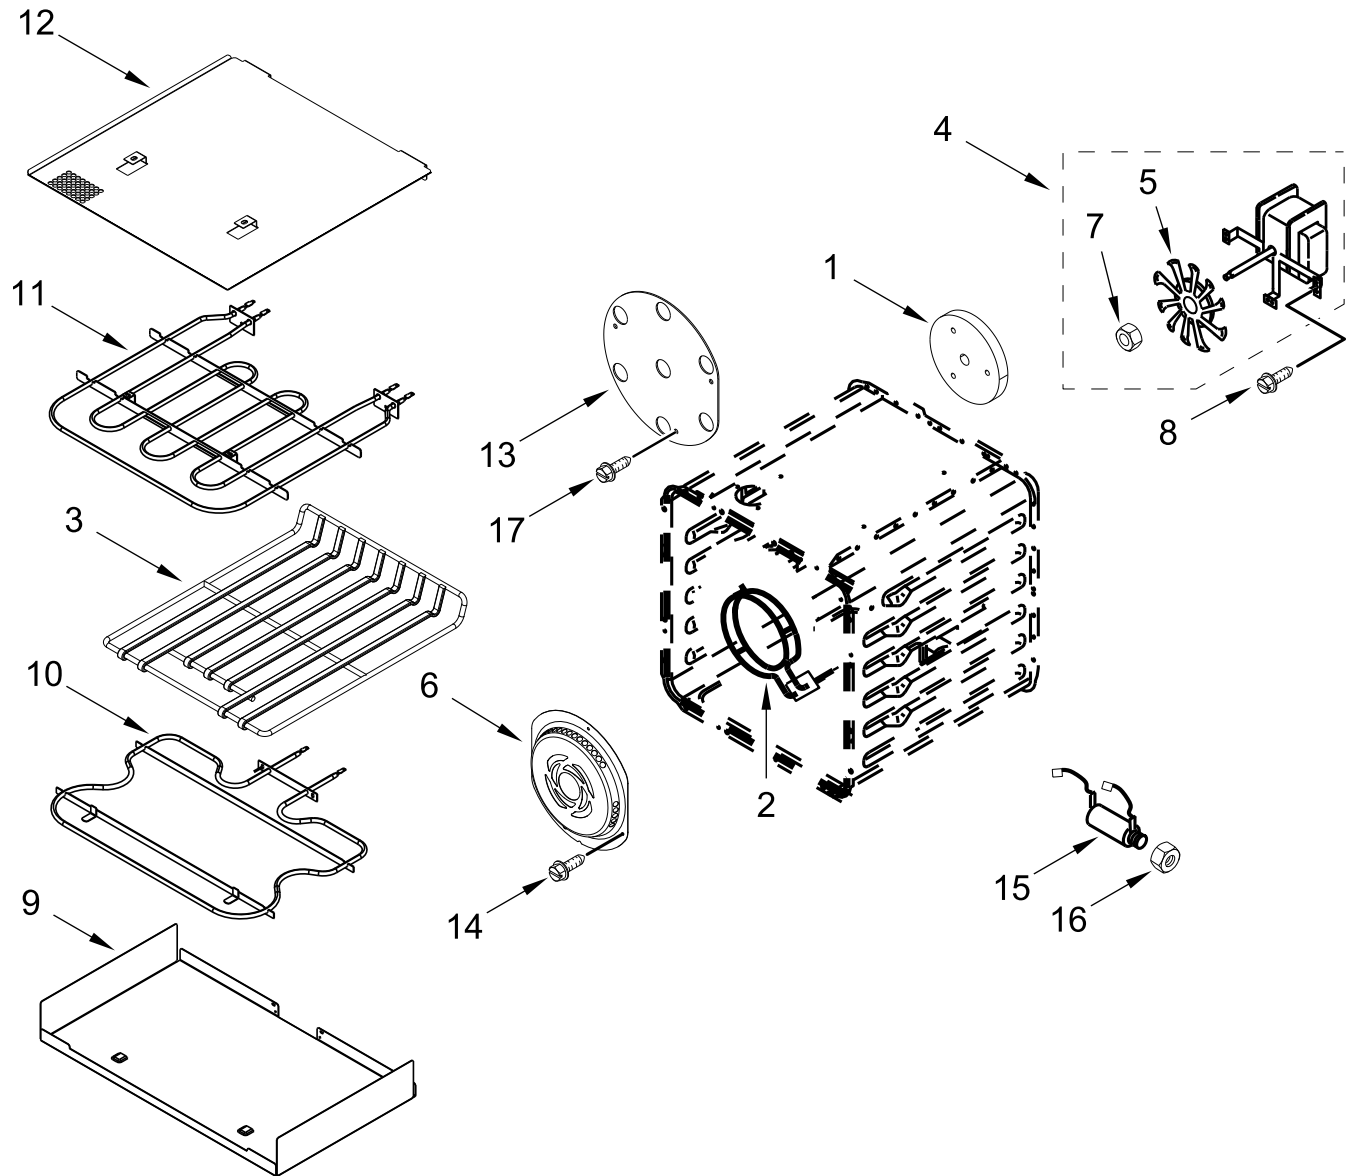

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
2	9762242	Element, Convection Steam	8	4449154	Screw	15	9755543	Jack, Meat Probe
3	W11111351	Rack, Oven (18")	9	W11110223	Tray, Hidden Bake	16	W11033111	Nut, Locking
4	W11121400	Fan, Convection	10	W11045324	Element, Hidden Bake	17	W10720084	Screw
5	W11108376	Blade, Fan	11	W10116010	Element, Broil			
6	W11113808	Cover, Fan	12	W10160855	Shield, Element Broil			
			13	W10261523	Plate, Fan			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill