




UNDERCOUNTER DISHWASHER (Noir)

MODELS:

JDTSS246GL0 (Stainless)


DOOR AND PANEL PARTS

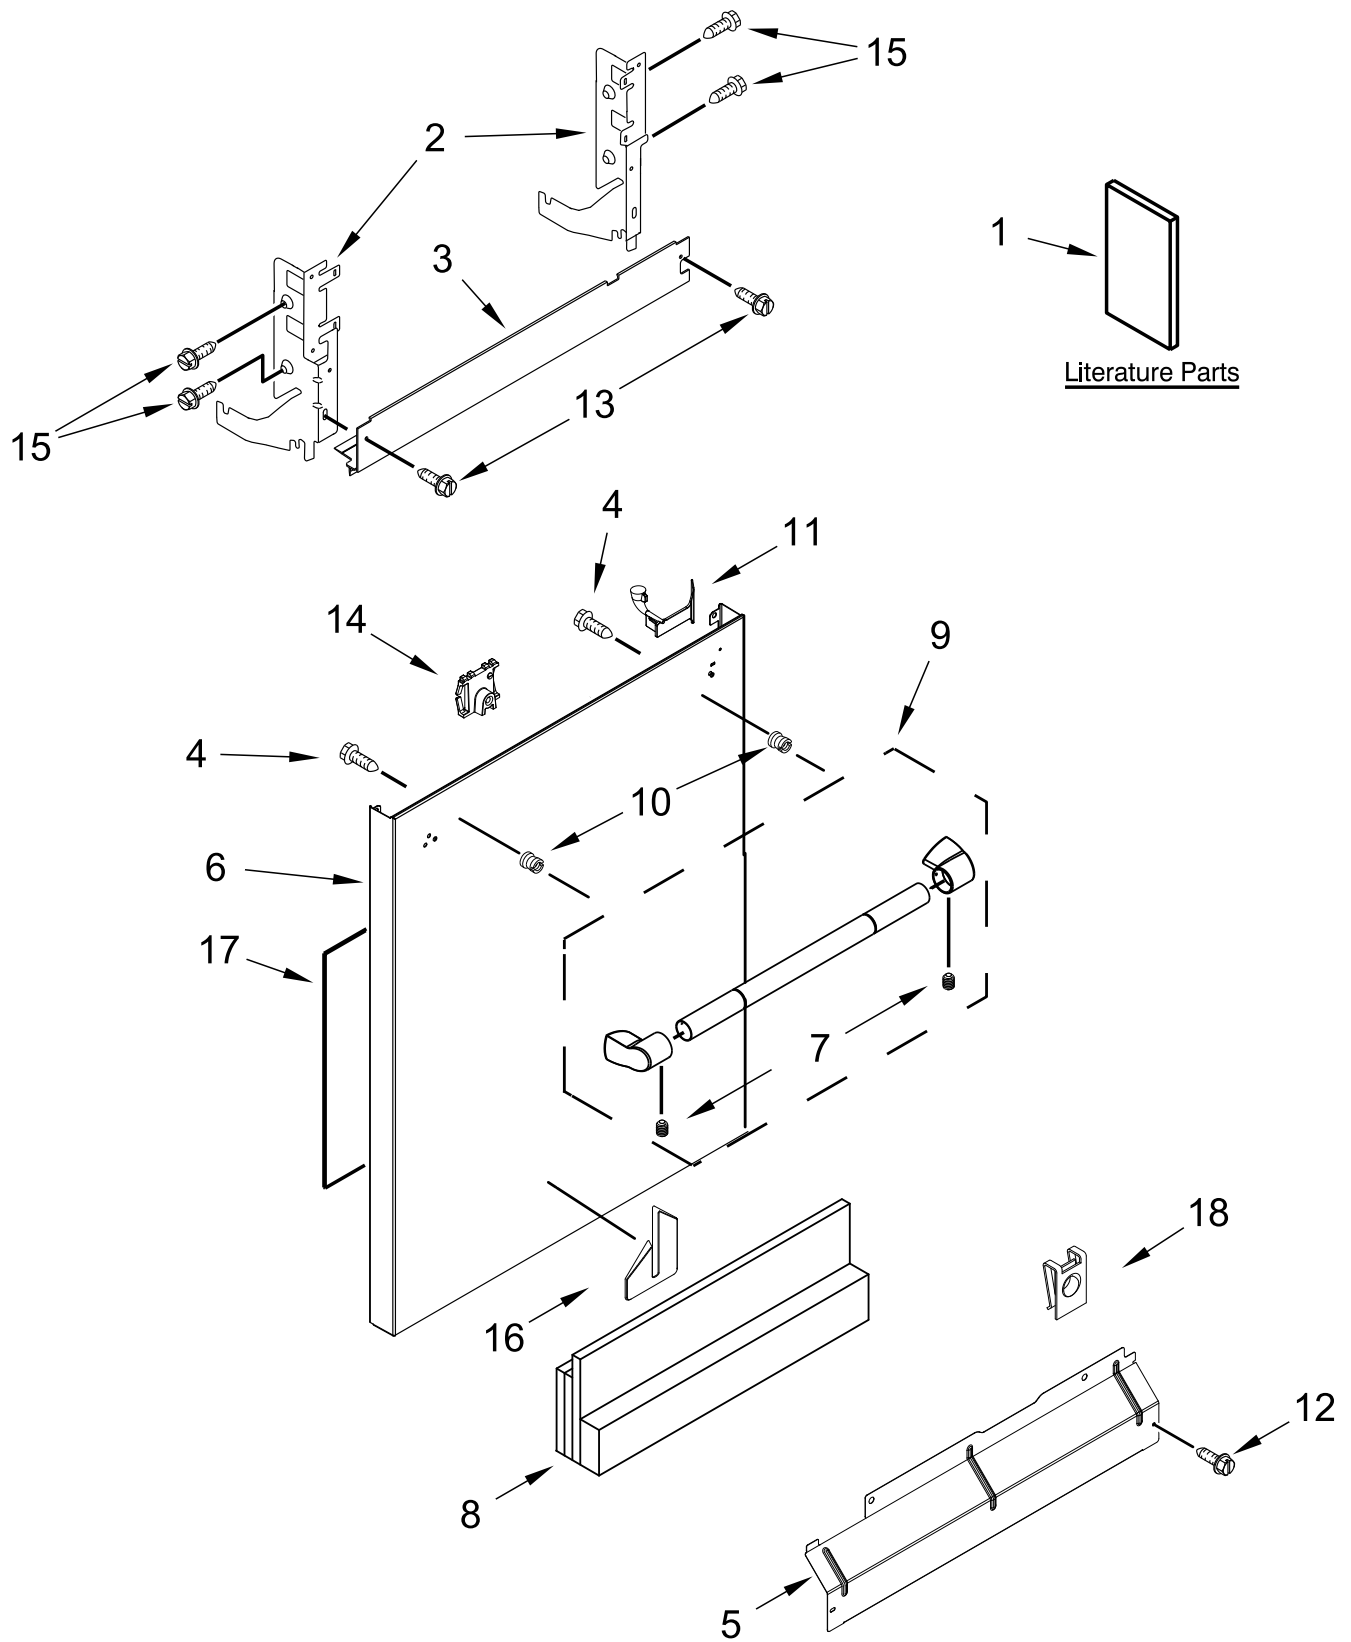

DOOR AND PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10316572	Screw	11	W10854504	Light Pipe
	W10806906	Installation Instructions	5		Access Panel	12	302868	Screw (Black)
	W11263946	Energy Guide		W10852733	Black	13	304392	Screw
	W11255226	Use & Care Guide	6		Panel, Front (Includes 11, 14 & 16)	14	W10692757	Barrel Nut, Front Panel
	W10914074	Tech Sheet, English		W11246883	Stainless	15	3400071	Screw
	W10914075	Tech Sheet, French	7	W10687133	Set Screw	16		Nameplate
2		Arm, Hinge	8	W10735304	Insulation, Four Layer		W11238657	Stainless
	8534854	Left Hand	9		Handle Assembly	17	W10315897	Insulation, Front Panel
	8534853	Right Hand		W11213316	Stainless	18	W10853886	U-nut
3	W10844384	Barrier, Vapor	10	W11049903	Stud, Mounting			


CONTROL PANEL AND LATCH PARTS

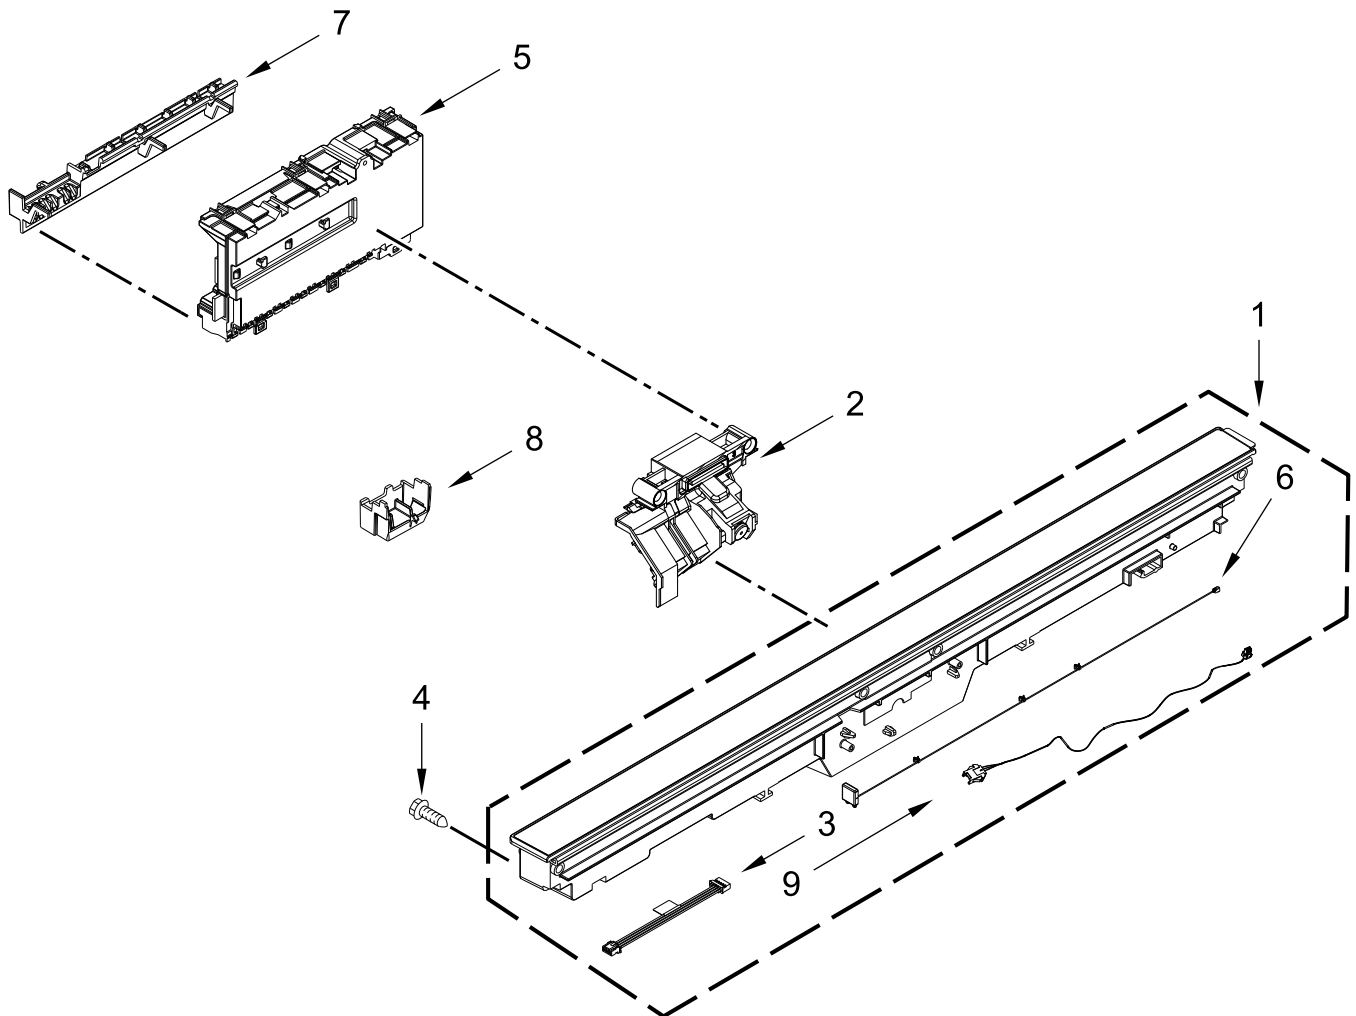

CONTROL PANEL AND LATCH PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console Assembly (Includes Insert)	4	W10348408	Screw	8	W10462393	Box, Connector
	W11254951	Black	5	W11251296	Control, Electronic	9	W10913100	Jumper, UI
2	W10653840	Latch Assembly (Includes Switch)	6	W10806955	Antenna, Front Console			
3	W10898167	Jumper, 4-wire	7	W10462395	Brace, Connector			


INNER DOOR PARTS

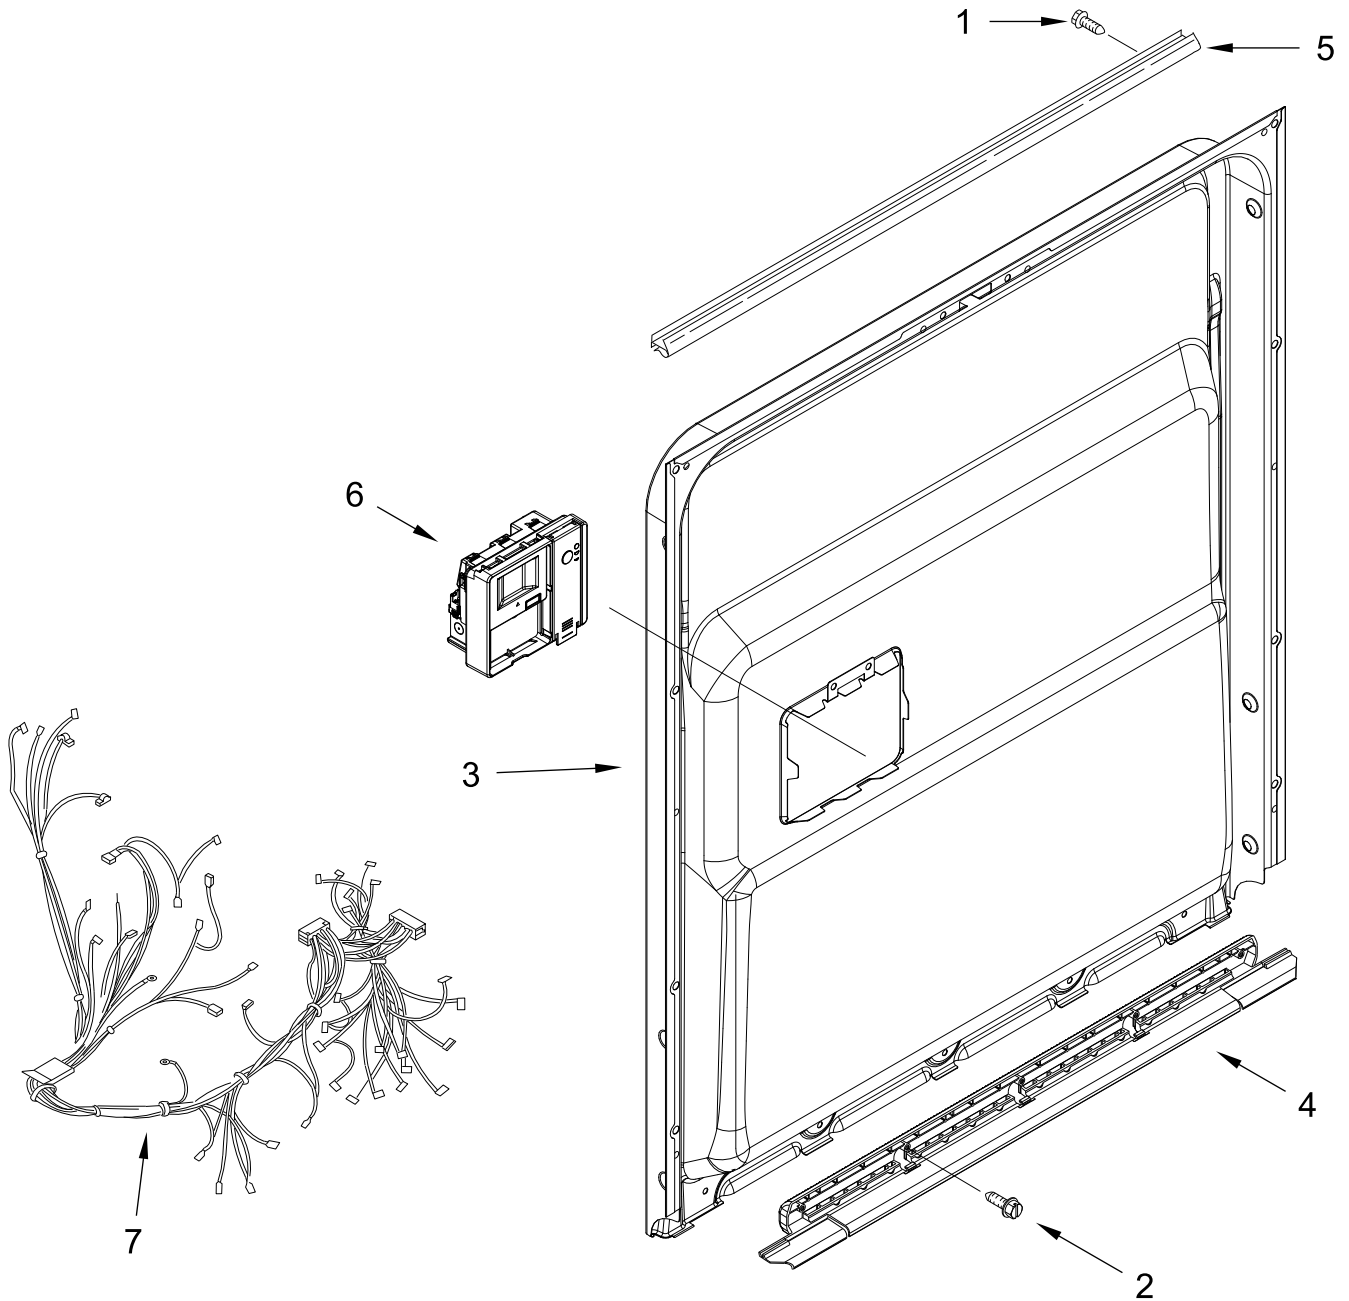

INNER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10348409	Screw	4	W10667473	Seal, Door Bottom	6	W10620297	Dispenser Assembly
2	8281217	Screw	5	W11050927	Seal, Console/Door	7	W11193071	Wiring Harness
3	W10712594	Inner Door Assembly						


FILL, DRAIN AND OVERFILL PARTS

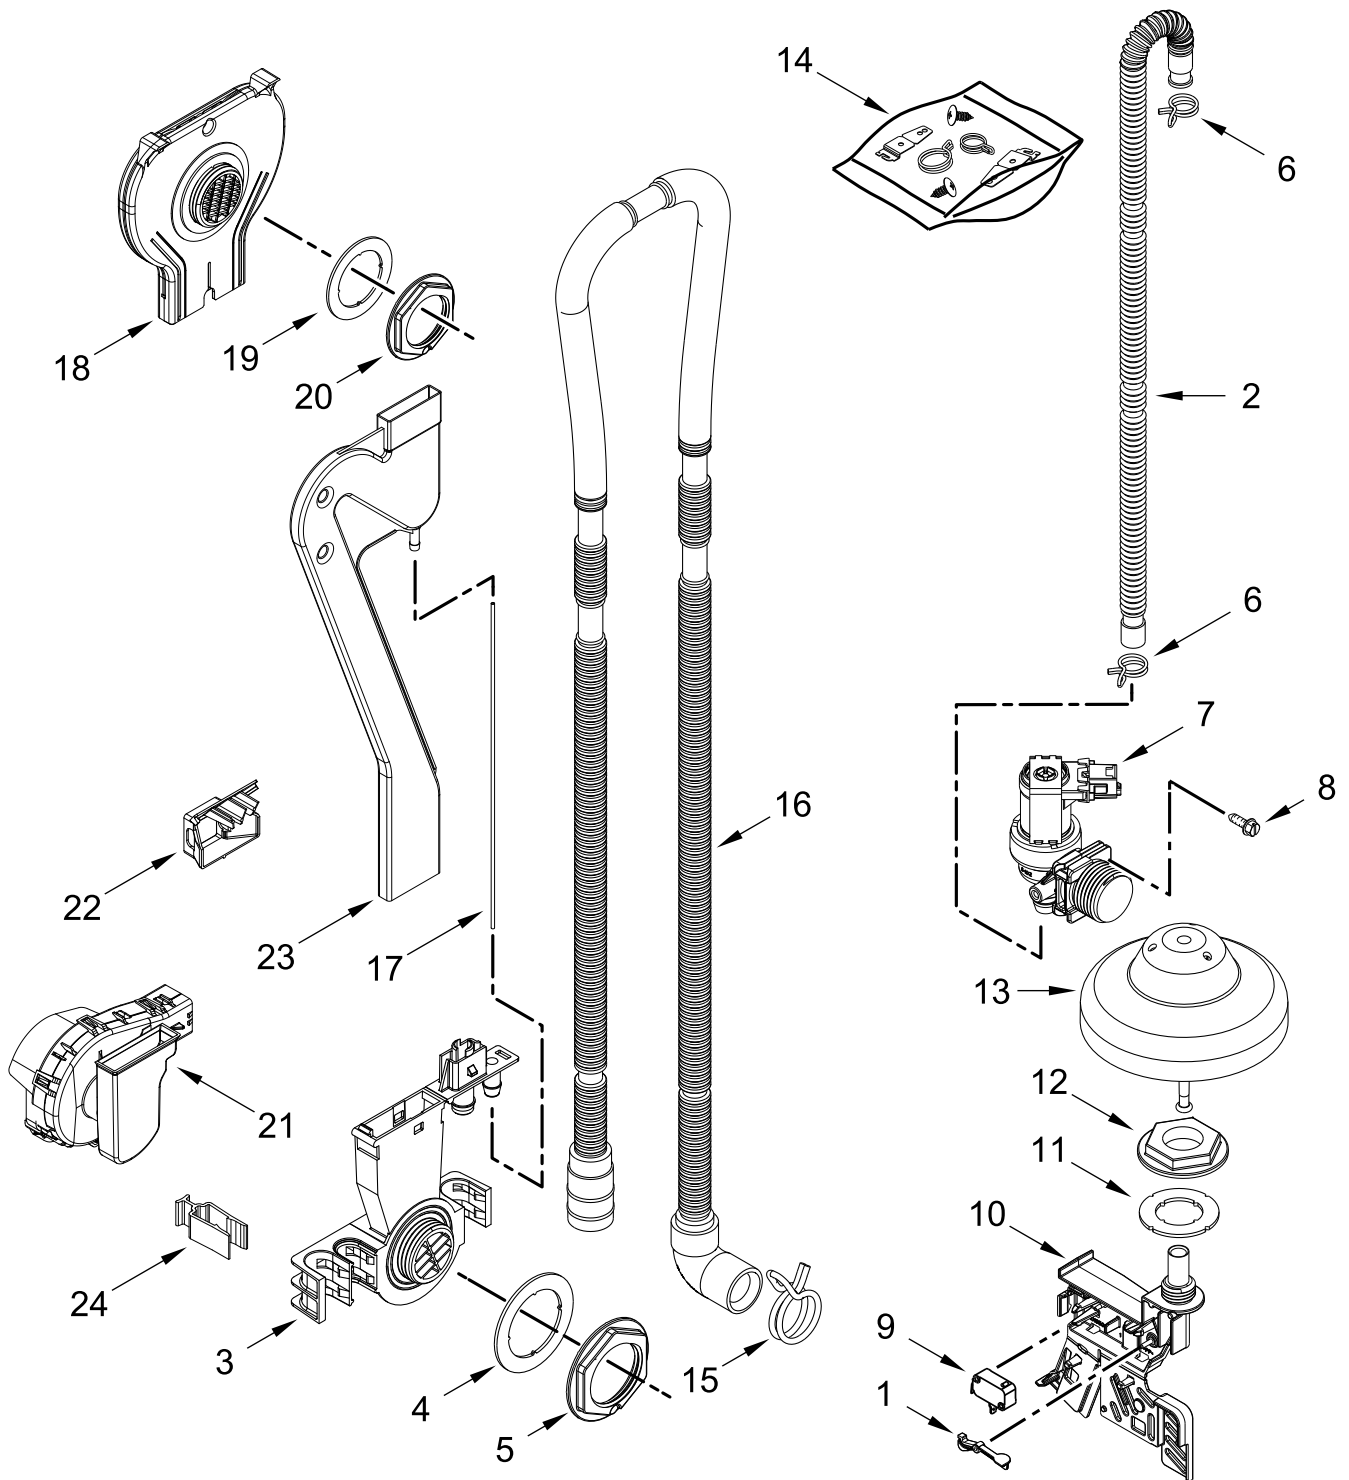

FILL, DRAIN AND OVERFILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10195037	Lever, Overfill Switch	11	8531743	Gasket, Flat	20	W10851721	Nut, Air Assembly
2	W10769066	Inlet, Hose	12	W10195038	Nut, Standpipe			(Also Order Item 19)
3	W10584470	Inlet, Water (Also Order Item 4)	13	W10195036	Float & Retainer Assembly	21	W10673168	Blower Assembly
4	8531323	Gasket	14	W10786175	Miscellaneous Parts Bag (Contains 2 Screws, 2 Clamps, & 2 Brackets)	22	W10653323	Nozzle, Airduct
5	W10213825	Nut, Water Inlet (Also Order Item 4)				23	W10770367	Tube, Exhaust
6	371505	Clamp, Hose	15	370445	Clamp, Hose	24	W10653320	Clip, Retainer
7	W10327249	Fill Valve Assembly	16	W10545278	Drain loop with check valve assembly			
8	3390631	Screw	17	W10772907	Vent Hose			
9	W10734532	Switch, Overfill Control	18	W10851715	Outlet, Air Assembly (Also Order Item 19)			
10	W10647205	Housing, Overfill (Also Order Item 11)	19	W10653310	Seal, Rubber			


TUB AND FRAME PARTS

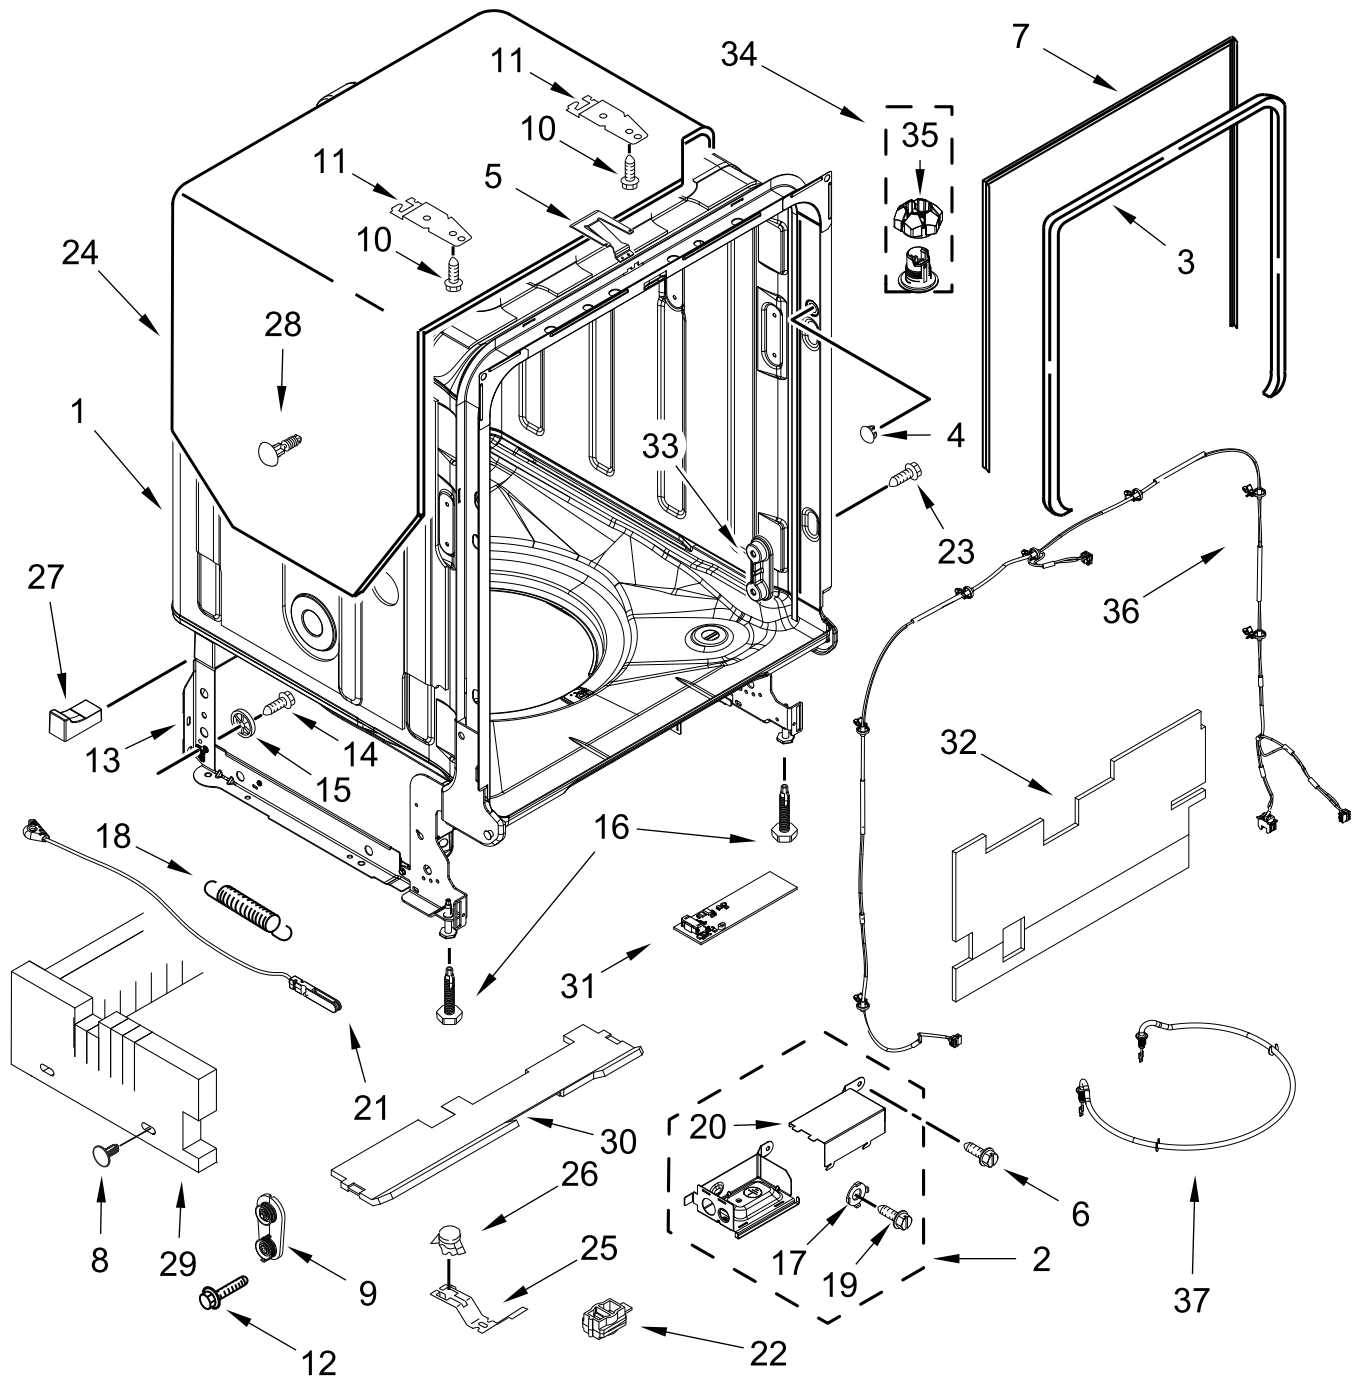

TUB AND FRAME PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10681499	Tub Assembly (Also Includes Heater Assembly)	15	W10190778	Wheel Leg	30	W10746772	Sound Insulation, Bottom
2	W10713315	Assembly, Terminal Box	16	W10619352	Leveler, Leg	31	W10916847	Wifi Module
3	W10660528	Gasket, Tub	17	3378128	Washer, Pronged Cup	32	W10380173	Sound Insulator, Bottom
4	W10813122	Plug, Tub	18	8270020	Spring, Door Balance	33	W10622469	Mount, Lower Track Assembly
5	W10544004	Strike, Latch	19	3400014	Screw, Grounding	34	W10635340	Lens, Light Assembly
6	304392	Screw	20	W10653292	Cover, Terminal Box	35	W10610790	Nut, Retainer
7	W10835073	Seal, Cabinet	21	W10158291	Cable, Door	36	W10913102	Harness, Tub Lights
8	W10486051	Retainer	22	W10292870	Shield, Thermostat	37	W10696509	Heater Element Assembly
9	W10084086	Door Balance Assembly	23	W10309090	Screw			(Includes Heater Washer & Nut)
10	3367670	Screw	24	W10866980	Shield, Tub Sound			NOTE: If heater element is removed, it must be replaced.
11	8269145	Bracket, Undercounter	25	W10300703	Bracket, Thermostat			
12	3400074	Screw	26	W10195091	Thermostat			
13	W10681564	Support Assembly, Rear	27		Spacer, Tub/Brace			
14	W10348411	Screw		W10195630	Left Hand			
				W10195631	Right Hand			
			28	304666	Retainer			
			29	W10750120	Insulation, U-Wrap			


PUMP, WASHARM AND MOTOR PARTS

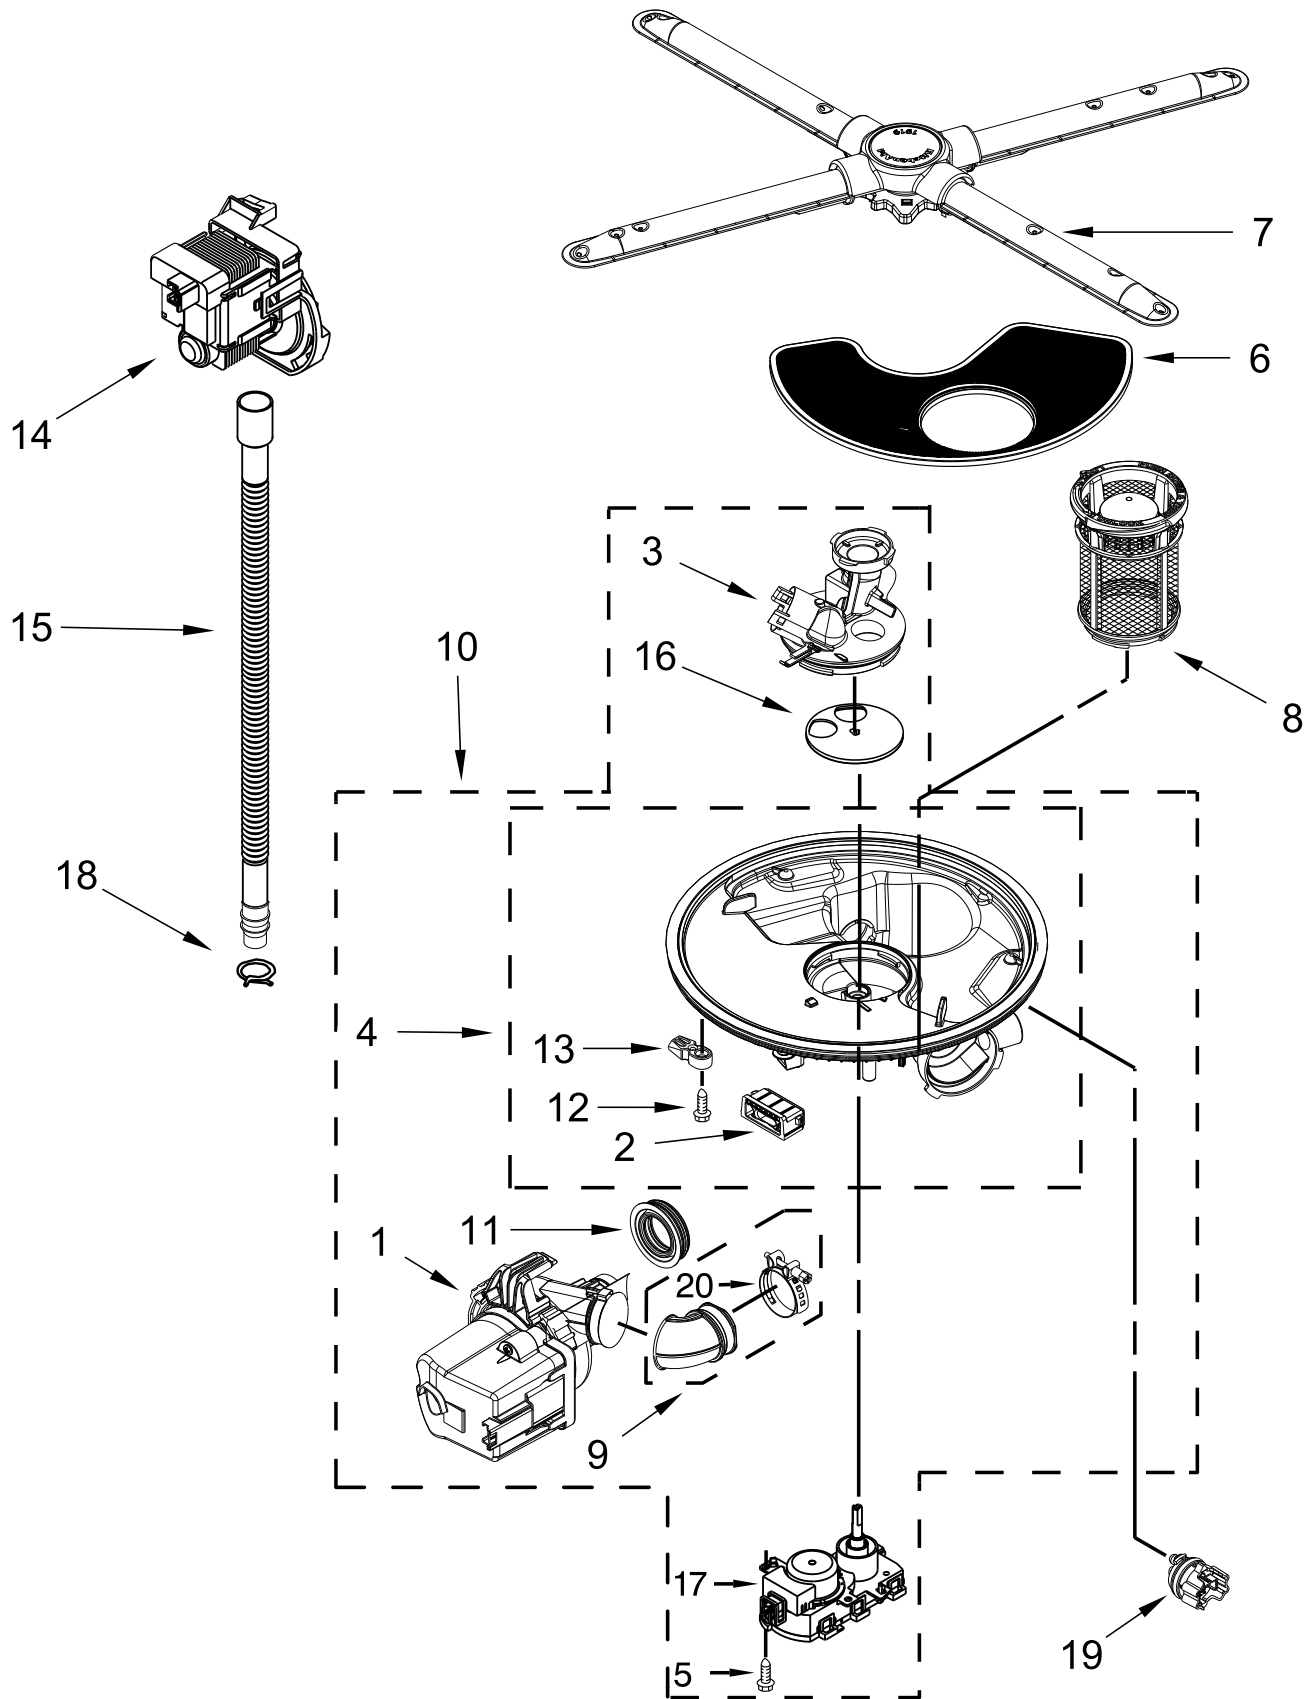

PUMP, WASHARM AND MOTOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10645659	Motor (Also Order Items 9 & 11)	7	W10858786	Wash Arm Assembly	14	W10531320	Motor, Drain
2	W10195086	Motor, Isolator	8	W10789806	Filter Cup Assembly	15	8269144	Hose, Drain
3	W10463894	Cover, Outlet	9	W10445975	Hose Assembly (Includes 2 Clamps)	16	W10476221	Disc, Diverter
4	W10455268	Sump With Seal (Also Order Items 9 & 11)	10	W10909945	Motor & Sump Assembly	17	W10849439	Motor, Diverter
5	9741232	Screw	11	W10538166	Grommet	18	8269146	Clamp, Hose
6	W10463906	Screen	12	W10348407	Screw	19	W10723295	Indicator, Optical Wash
			13	W10372113	Tab, Sump	20	W10763498	Clamp, Hose


UPPER WASH AND RINSE PARTS

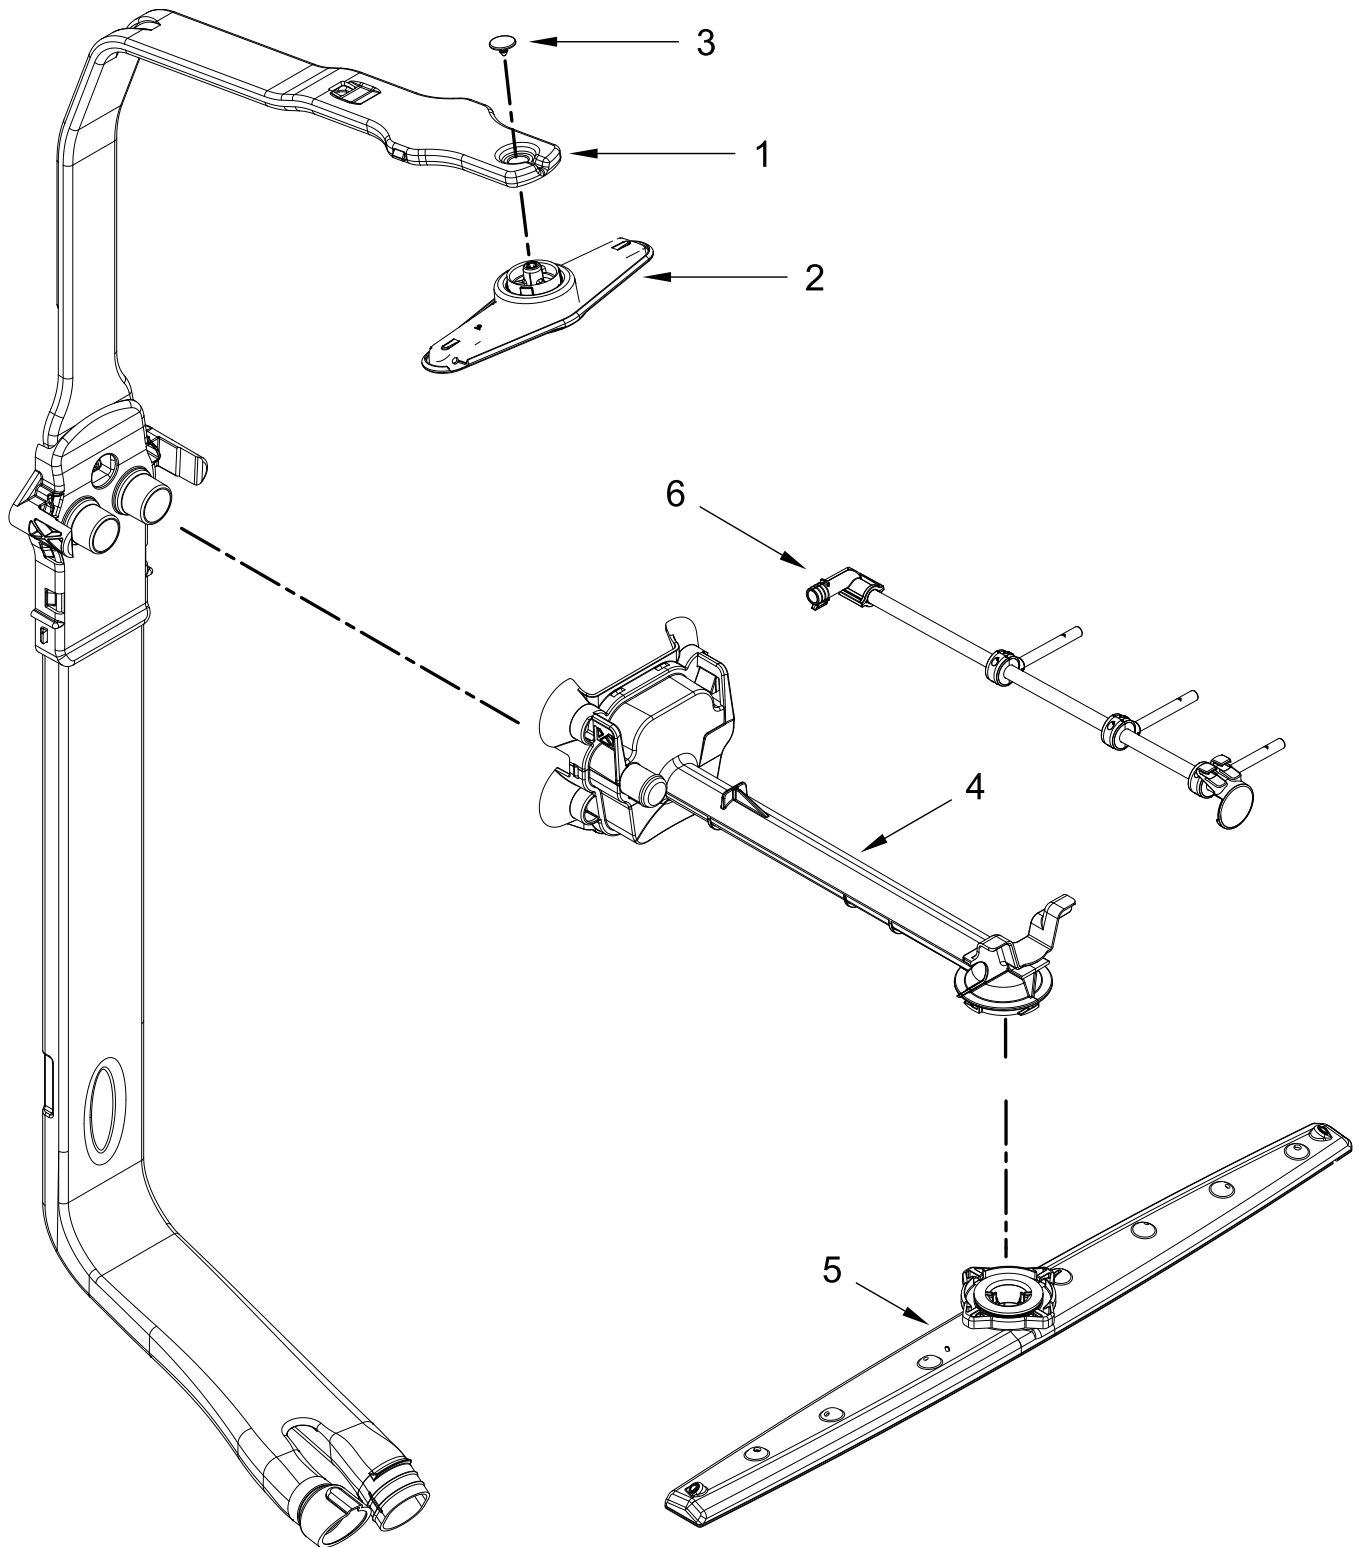

UPPER WASH AND RINSE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10753067	Feed Tube Assembly (Includes Items 2 & 3)	2	W10327455	Sprayarm, Third Level	4	W10900342	Manifold
			3	3400918	Retainer	5	W10448645	Sprayarm, Upper
						6	W10905073	Assembly, Bottle Wash


UPPER RACK AND TRACK PARTS

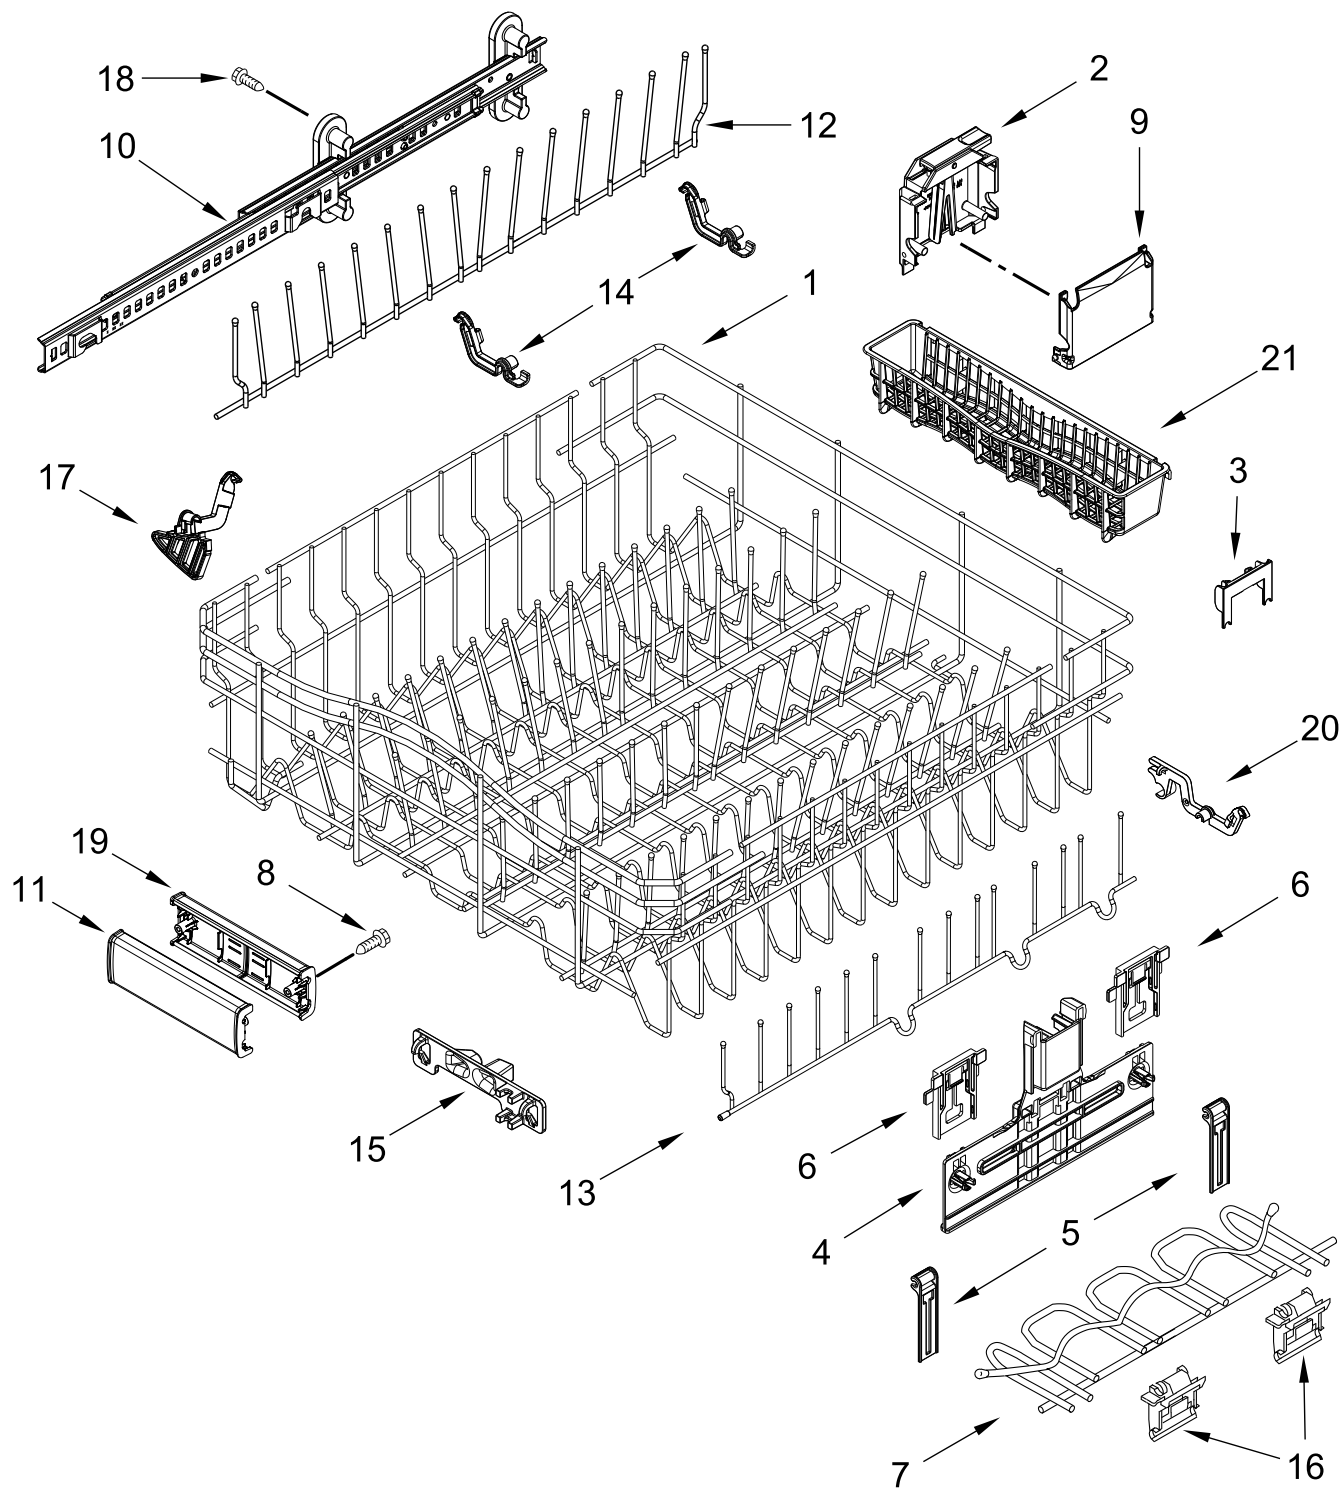

UPPER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10194861	Dishrack, Upper	7	W10669975	Cupshelf	14	W10082853	Clip, Pivot
2		Housing, Adjuster (Includes Spring and Lever)	8	9741232	Screw	15	8539102	Positioner, Dual Dishrack
	W10588164	Left Hand	9	W10250162	Cover, Adjuster	16	8562026	Clip, Cupshelf
	W10588165	Right Hand	10		Track, Assembly	17	W10752617	Clip, Dispenser Guard
3	W10250160	Clip, Adjuster		W11192640	Left Hand	18	W10309090	Screw
4	W10546503	Adjuster Assembly		W11192638	Right Hand	19	W10473792	Handle, Dishrack Rear
5	W10195839	Strap, Tether Adjuster	11	W11253315	Handle, Dishrack Front	20	W10875054	Retainer, Feedtube
6	W10195840	Positioner, Adjuster	12	W10194862	Tine, Fold Down	21	W10702379	Basket, Utensil Row
			13	W10918860	Tine Row, Fold Down			


LOWER RACK AND TRACK PARTS

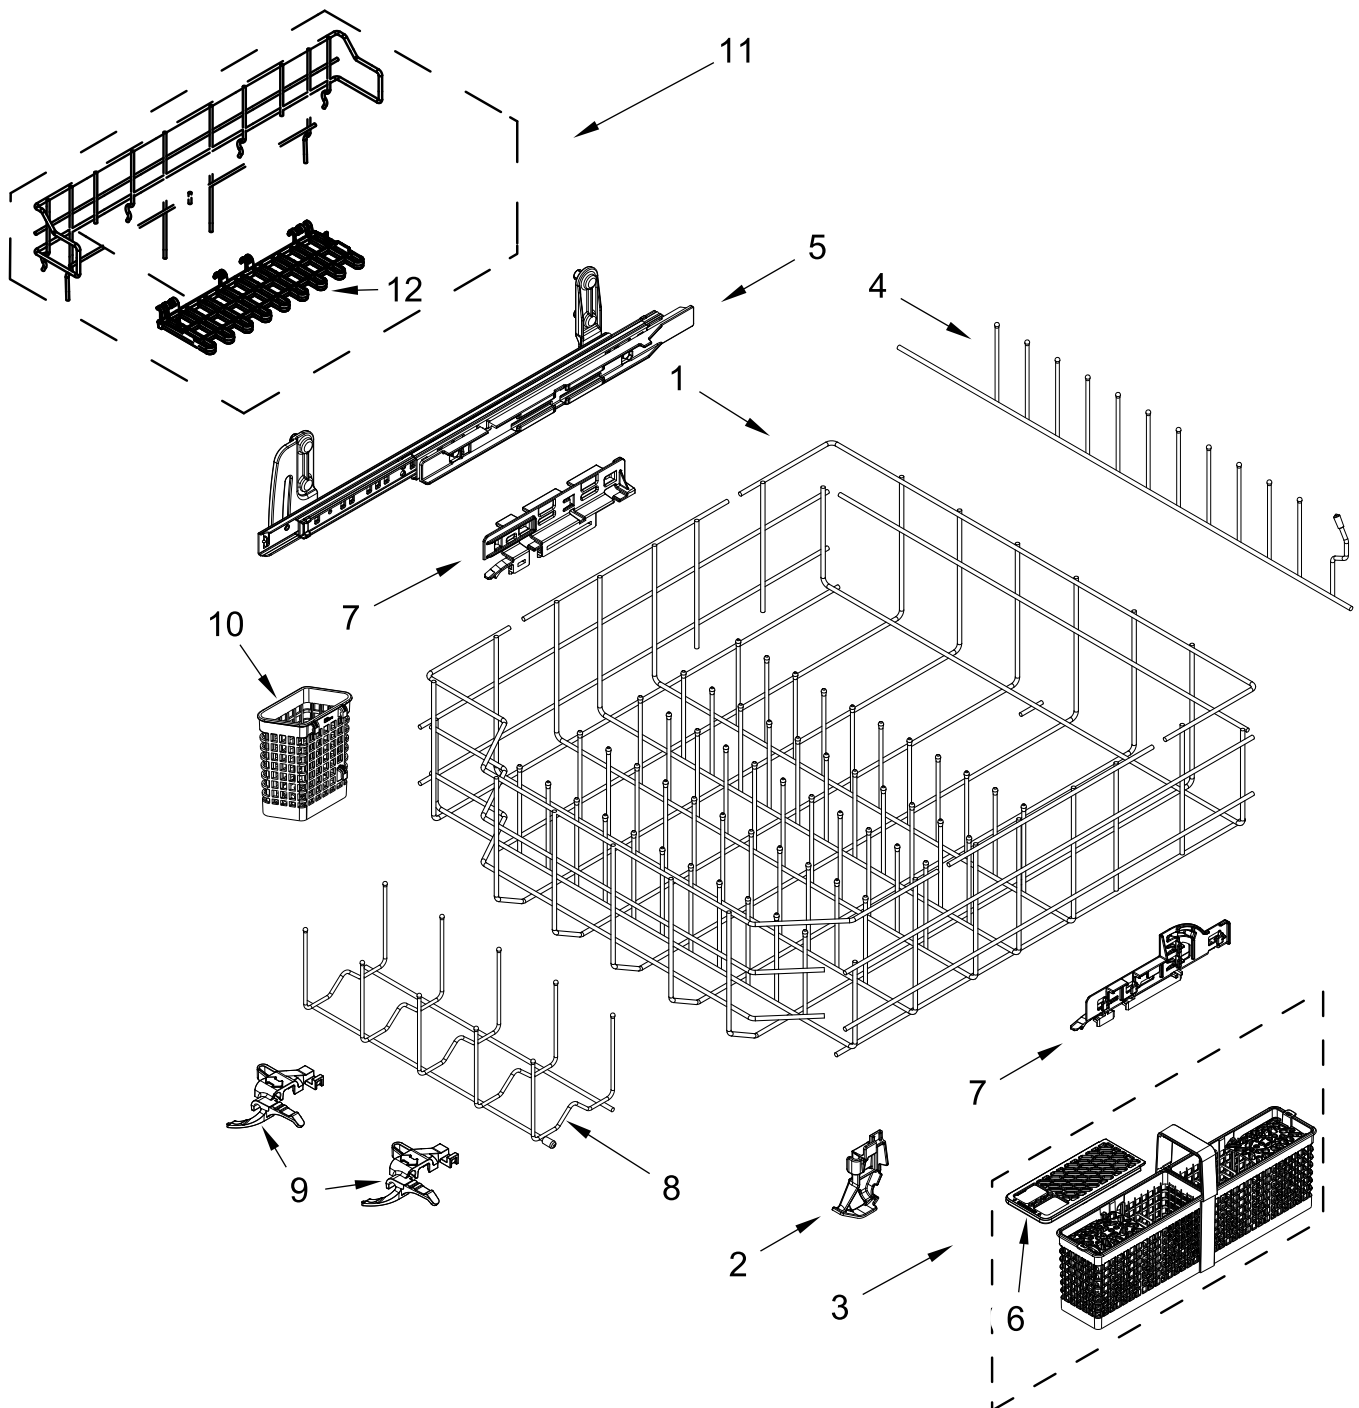

LOWER RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10665650	Dishrack, Lower	6	W10473835	Lid, Silverware Basket	11	W10610905	Cupshelf Assembly, Side
2		Support, Front Ski	7		Support, Rear Carriage	12	W10630204	Cupshelf
	W10473813	Left Hand		W10473807	Left Hand			
	W10473817	Right Hand		W10473809	Right Hand			
3	W10473836	Basket Assembly, Silverware	8	W10610895	Tine Row, Sliding			
4	W10056351	Tinerow	9	W10713283	Retainer, Sliding Tine Row			
5		Track Assembly	10	W10482109	Basket, Utensil			
	W10781307	Left Hand						
	W10781311	Right Hand						

THIRD LEVEL RACK AND TRACK PARTS

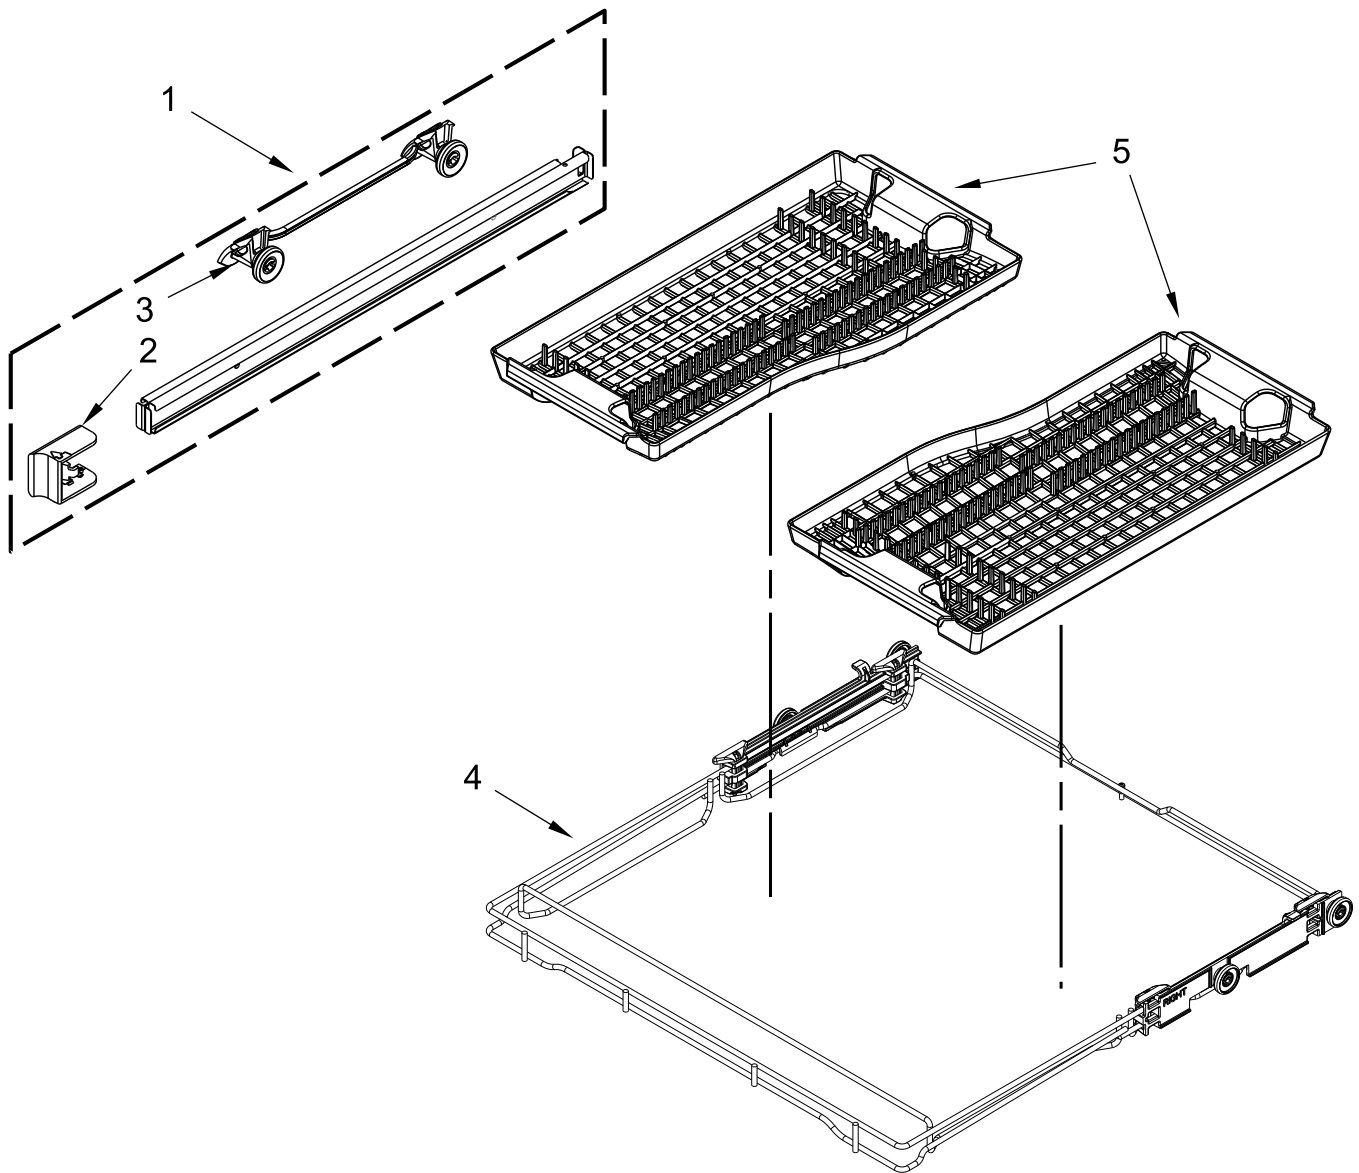

THIRD LEVEL RACK AND TRACK PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Track Assembly	2	8564852	Stop, Track	4	W10409522	Rack Assembly (Third Level)
	W10195240	Right Hand	3	8564899	Mount,Track	5	W10917018	Basket, Third Level
	W10195238	Left Hand						

OPTIONAL PARTS (NOT INCLUDED)

PAINT, PRESSURIZED SPRAY (12 OZ.)			ANTI-TIP KIT		
<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
		DRAIN HOSE			
	W10712310	12 Ft.		8171477	Floor Mount Kit
		VINYL TOUCH-UP (4oz)		8212560	Side Mount Kit
	676453	White			
	676455	Grey			
	4396853	Silver Atlantis			
		MOISTURE BARRIER KIT			
	4396277	Barrier Kit			
PAINT, TOUCH-UP (1/2OZ.)			DISHRACK REPAIR		
<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White		4396838	White
	72032	Black		4396840	Grey
	4392899	Biscuit/Bisque		4396854	Silver Atlantis
	4396603	Meteorite			
PAINT, BULK (1 QT.)			POWER CORD KIT		
<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White			
	285006	Black			
	4392901	Biscuit/Bisque			
	799344	White (Uncut)		4317824	Power Cord Kit (Included Cord & Misc. Hardware)
	4392900	Biscuit/Bisque			