




30" RISE GAS PROFESSIONAL-STYLE RANGE

MODELS:

JGRP430HL00 (Stainless)


BURNER BOX PARTS

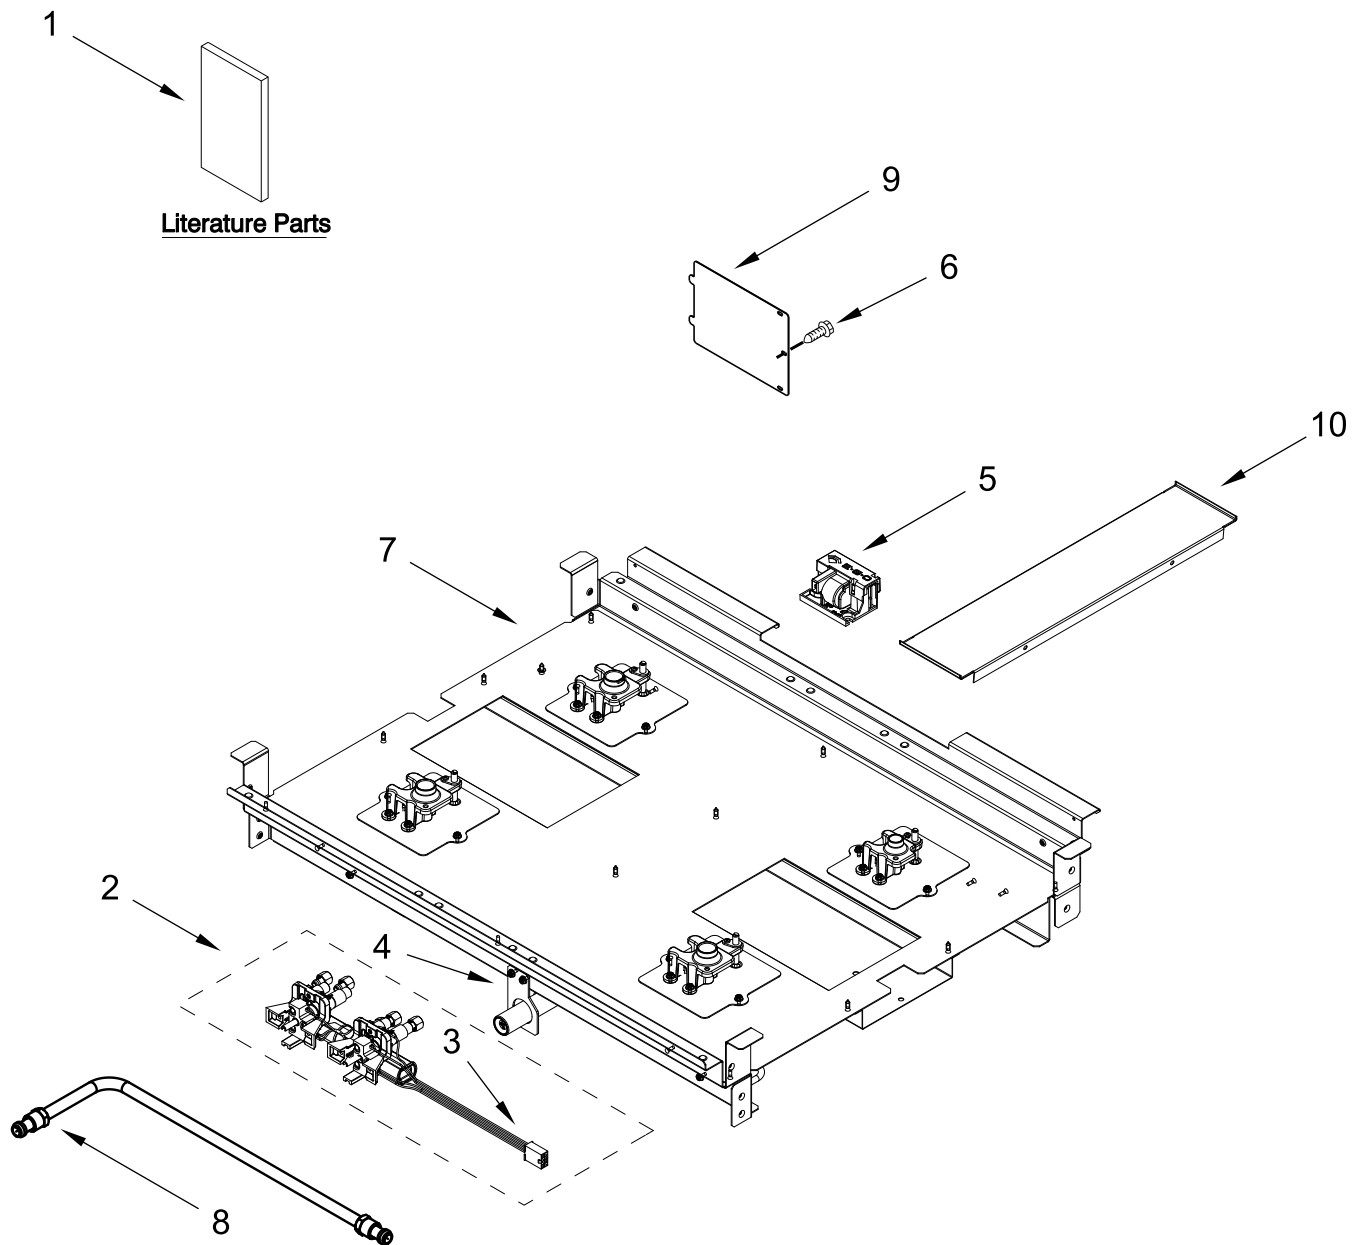

BURNER BOX PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106300	Switch, Harness	10	W11121361	Filler, Cooktop
	W11177275	Guide, Use and Care	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11177278	Instructions, Installation	5	W11121317	Module, Spark		W11200306	Harness, Main (30")
	W11177312	Guide, Quick Start	6	7101P426-60	Screw		W11200328	Harness, Cooktop
	W11184746	Guide, Internet Connectivity	7		Box, Burner (Not Serviced)		W10780278	Harness, Door Lock
	W11202371	Diagram, Wiring (Oven)	8	W10892073	Tube, Manifold Supply (Left)		W11200325	Harness, Communication
	W11202275	Sheet, Tech		W10892076	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
2	W10893051	Assembly, Valve Manifold (Left Front And Left Rear)	9	W10115843	Cover, Ignition		W10624584	Cord, Power
	W10893058	Assembly, Valve Manifold (Right Front and Right Rear)					4450800	Screw, Grounding
							W11311196	Ignitor Wire, Wire-Electrode Bake
							W11311197	Ignitor Wire, Wire-Electrode Broil
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238041	Kit, LP Conversion


COOKTOP, BURNER, AND GRATE PARTS

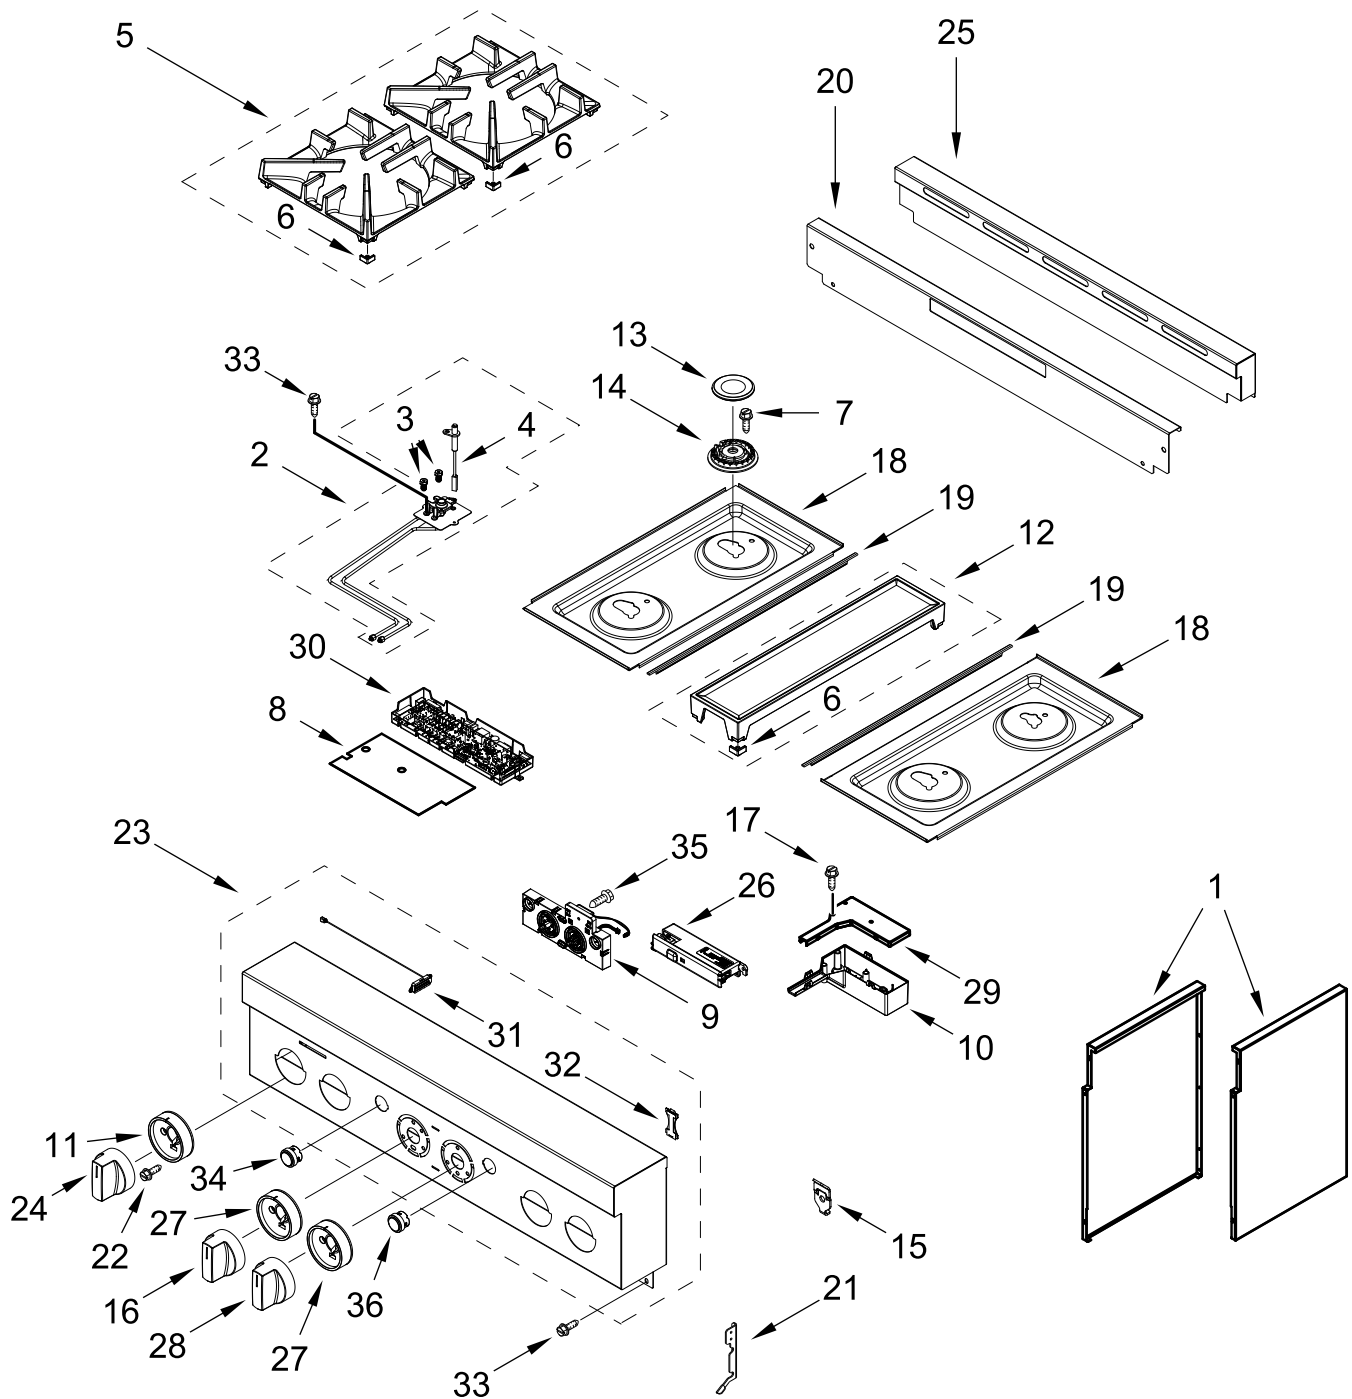

COOKTOP, BURNER, AND GRATE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5		Assembly, Grate Black (Set of 2)	21	W10130760	Bracket, Moving Console (Left)
	W11106880	Panel, Cabinet Side (Right)	6	W11042504	Bumper, Grate		W10130759	Bracket, Moving Console (Right)
2	W10892793	Assembly, Orifice Holder (Left Front)	7	W11196257	Screw	22	W10919387	Screw
	W10892494	Assembly, Orifice Holder (Left Rear)	8	W11281269	Barrier, Appliance Manager	23	W11253776	Panel, Console
	W10892475	Assembly, Orifice Holder (Right Front)	9	W11095712	Interface, User	24		Knob, Burner (For 4 Cooktop Burners)
	W10892730	Assembly, Orifice Holder (Right Rear)	10	W11205795	Cover, WIFI Outer		W10882958	Stainless
3	W10892422	Orifice, Main (17.4K) (Left Front)	11	W11090283	Bezel, Cooktop (For 4 Cooktop Burners)	25	W11183085	Trim, Island
	W10892418	Orifice, Main (15.4K) (Left Rear and Right Front)	12	W11179866	Kit, Grate Filler	26	W11110768	Assembly, WIFI Module
	W10892440	Orifice, Main (7.2K) (Right Rear)	13		Cap, Burner	27		Bezel, Oven (For 2 Oven Knobs)
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	14	W10891987	Spreader, Flame (High)		W10914998	Stainless
	W10892429	Orifice, Simmer (2.0K) (Right Rear)			(Left Front, Left Rear, Right Front)	28		Knob, Oven Temperature
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	15	W10892022	Spreader, Flame (Low) (Right Rear)		W10891871	Stainless
	W11238756	Igniter (Right Rear)	16	W11036559	Spring Clip, Range	29	W11205794	Cover, WIFI Inner
			17		Knob, Oven Mode	30	W11100274	Manager, Appliance (Powermax)
			18	W11092267	Stainless	31	W11130078	Antenna, WIFI
			19	7101P624-60	Screw	32	W10896369	Assembly, Light Pipe
			20		Panel, Cooktop	33	7101P426-60	Screw
				W10803515	Black (Left)	34	W11090651	Button Assembly, Oven Light
				W10804371	Black (Right)	35	3400814	Screw
					Trim, T-Strip	36	W11090650	Button Assembly, Oven Start
				W10271524	Black			
				W10323248	Insert, Island Trim			


CHASSIS PARTS

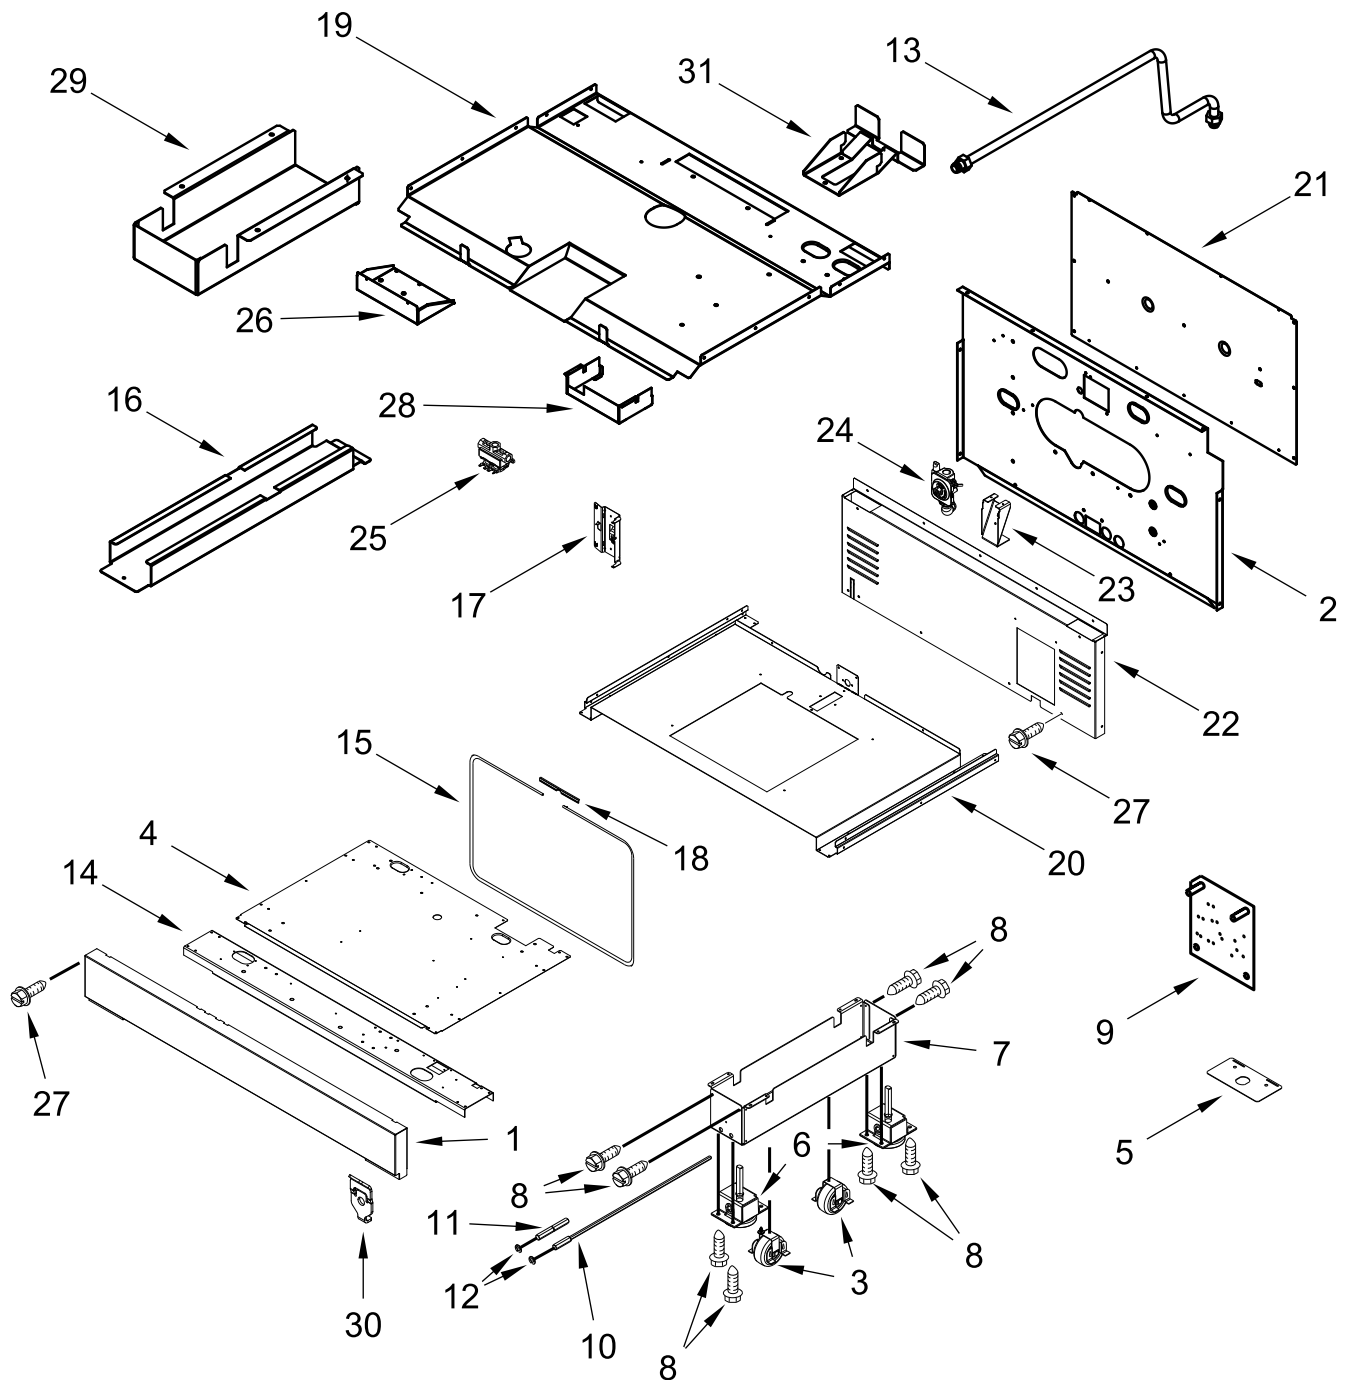

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883795	Kickplate	14	W11087491	Support, Channel	25	W10145680	Valve, Dual
2	W11105911	Back, Chassis	15	W11115328	Gasket, Oven (30")	26	W11106341	Drawer, Appliance Manager
3	W10138054	Assembly, Roller	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
4	W11109583	Duct, Bottom (30")	17	W10145362	Bracket-Board, DSI	28	W11106335	Cabinet, Appliance Manager
5	W10115855	Holder, Strain Relief	18	W10216520	Retainer, Gasket (9" Long)	29	W11084360	Channel, Wire
6	9760860	Leveler	19	W11037137	Top, Chassis	30	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	20	W11040802	Chassis, Bottom	31	W11190223	Bracket, Bake Alignment
8	4449743	Screw	21	W11103334	Panel, Back Top			
9	W10511278	Module, Spark DSI	22	W11034134	Panel, Back Bottom			
10	W10115869	Shaft, Long	23	W11096823	Bracket, Pressure Regulator			
11	W10115793	Shaft, Short	24	W10896959	Regulator, Pressure			
12	489504	E-Ring						
13	W11181648	Tube, Pressure Regulator						


OVEN PARTS

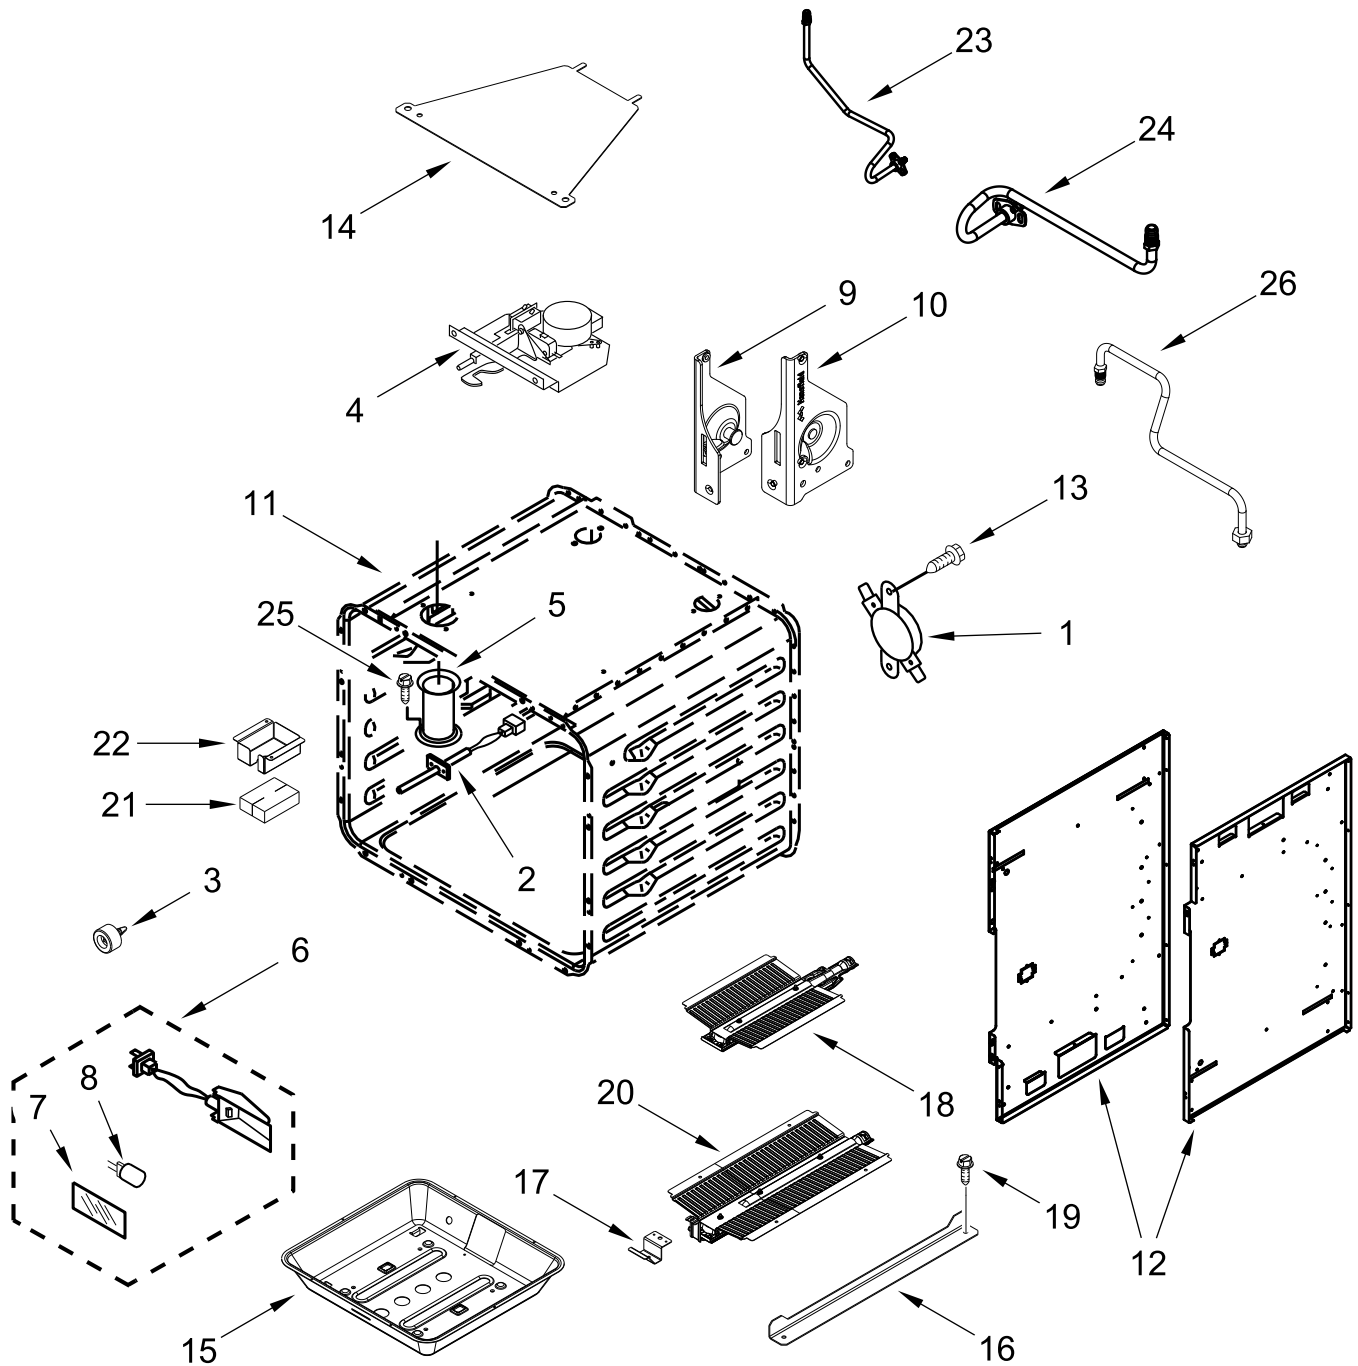

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10310985	Cover, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W11109238	Tube, Broil
3	W10351278	Bumper & Screw	13	7101P426-60	Screw	24	W11106980	Tube, Bake
4	W10830016	Latch, Motorized	14	W10160858	Cover, Latch	25	3196176	Screw
5	W10145743	Tube, Vent	15	W10145744	Support, Bake Pan	26	W11109167	Tube, Gas
6	W11223932	Assembly, Oven Light	16	W10317437	Bracket, Broil Standoff	FOLLOWING PARTS NOT ILLUSTRATED		
7	W10169756	Lens, Light	17	W10308040	Bracket, Bake Burner			
8	W10169757	Bulb, Light	18	W10878504	Burner, Bake	W10282810		Insulation, Wrap, 30"
9	W11096294	Receiver, Hinge (Left)	19	7101P434-60	Screw	W10299350		Insulation, Back, 30"
10	W11096293	Receiver, Hinge (Right)	20	W10311335	Burner, Broil	W10299354		Insulation, Bottom
11		Liner, Oven (Not Serviced)	21	W10311009	Insulation, Broil Cover	3400968		Nut


VENTING PARTS

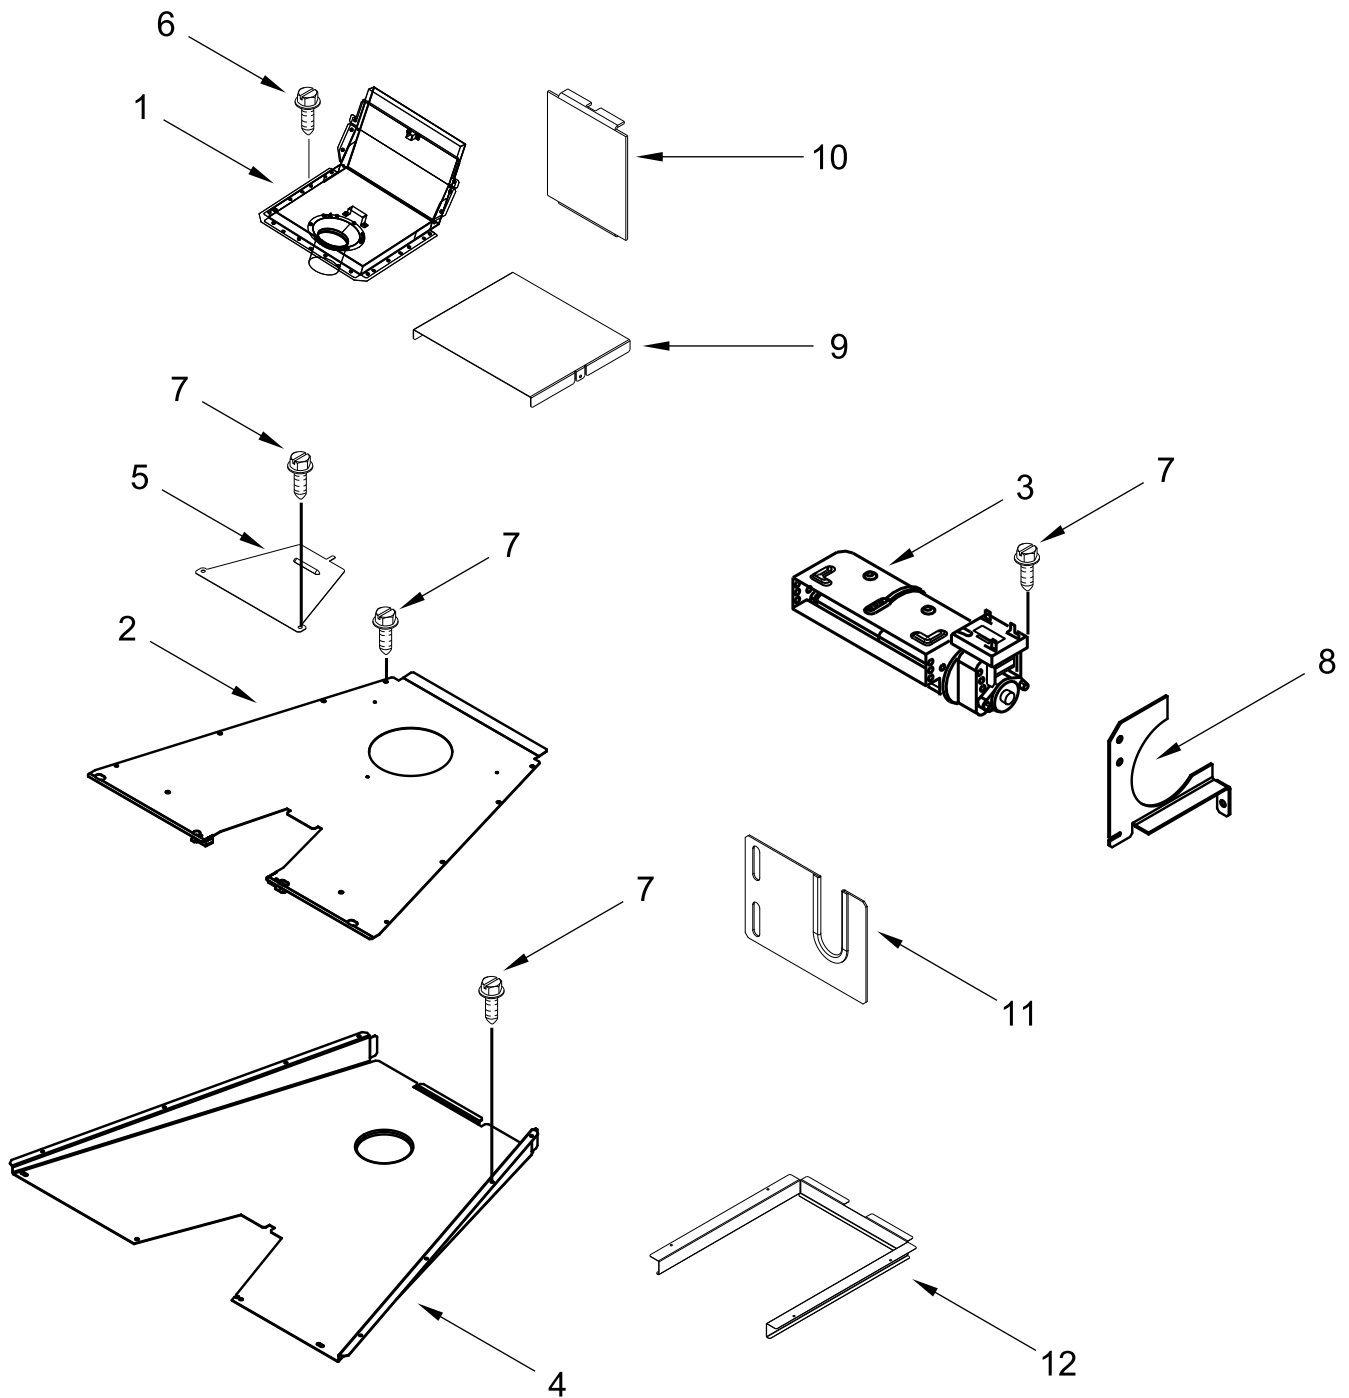

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	9	W10246086	Retainer, Insulation
3	W11200129	Blower	6	3400805	Screw (Zinc)	10	W10246087	Insulation, Chimney
			7	7101P426-60	Screw	11	W11106956	Cover, Channel
						12	W10145363	Duct, Primary Air (30")


OVEN DOOR PARTS

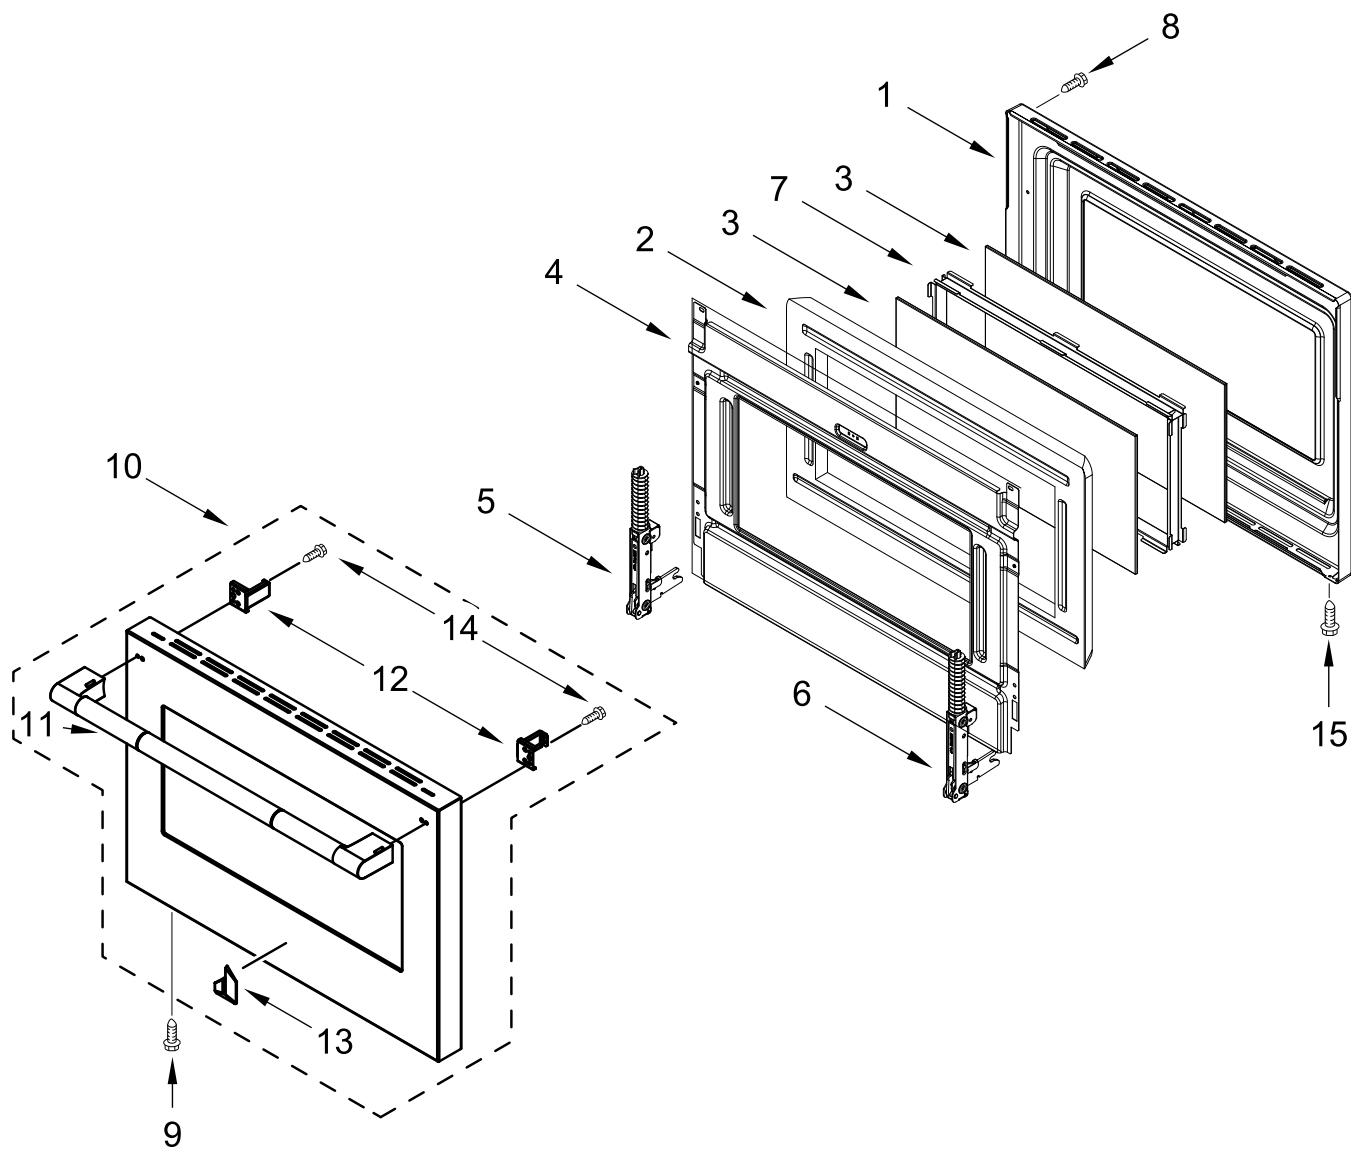

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	8	W10292297	Screw	13		Badge
2	W10321285	Insulation, Door	9	W10162096	Screw		W11238656	Stainless
3	W11184409	Glass, Inner	10	W10799308	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
4	W11194821	Retainer, Glass				15	W10607120	Screw
5	W11096974	Hinge, Door (Left)	11	W11102826	Handle, Door			
6	W11096973	Hinge, Door (Right)	12	W11197830	Bracket, Handle			
7	W10272594	Frame, Glass						

INTERNAL OVEN PARTS

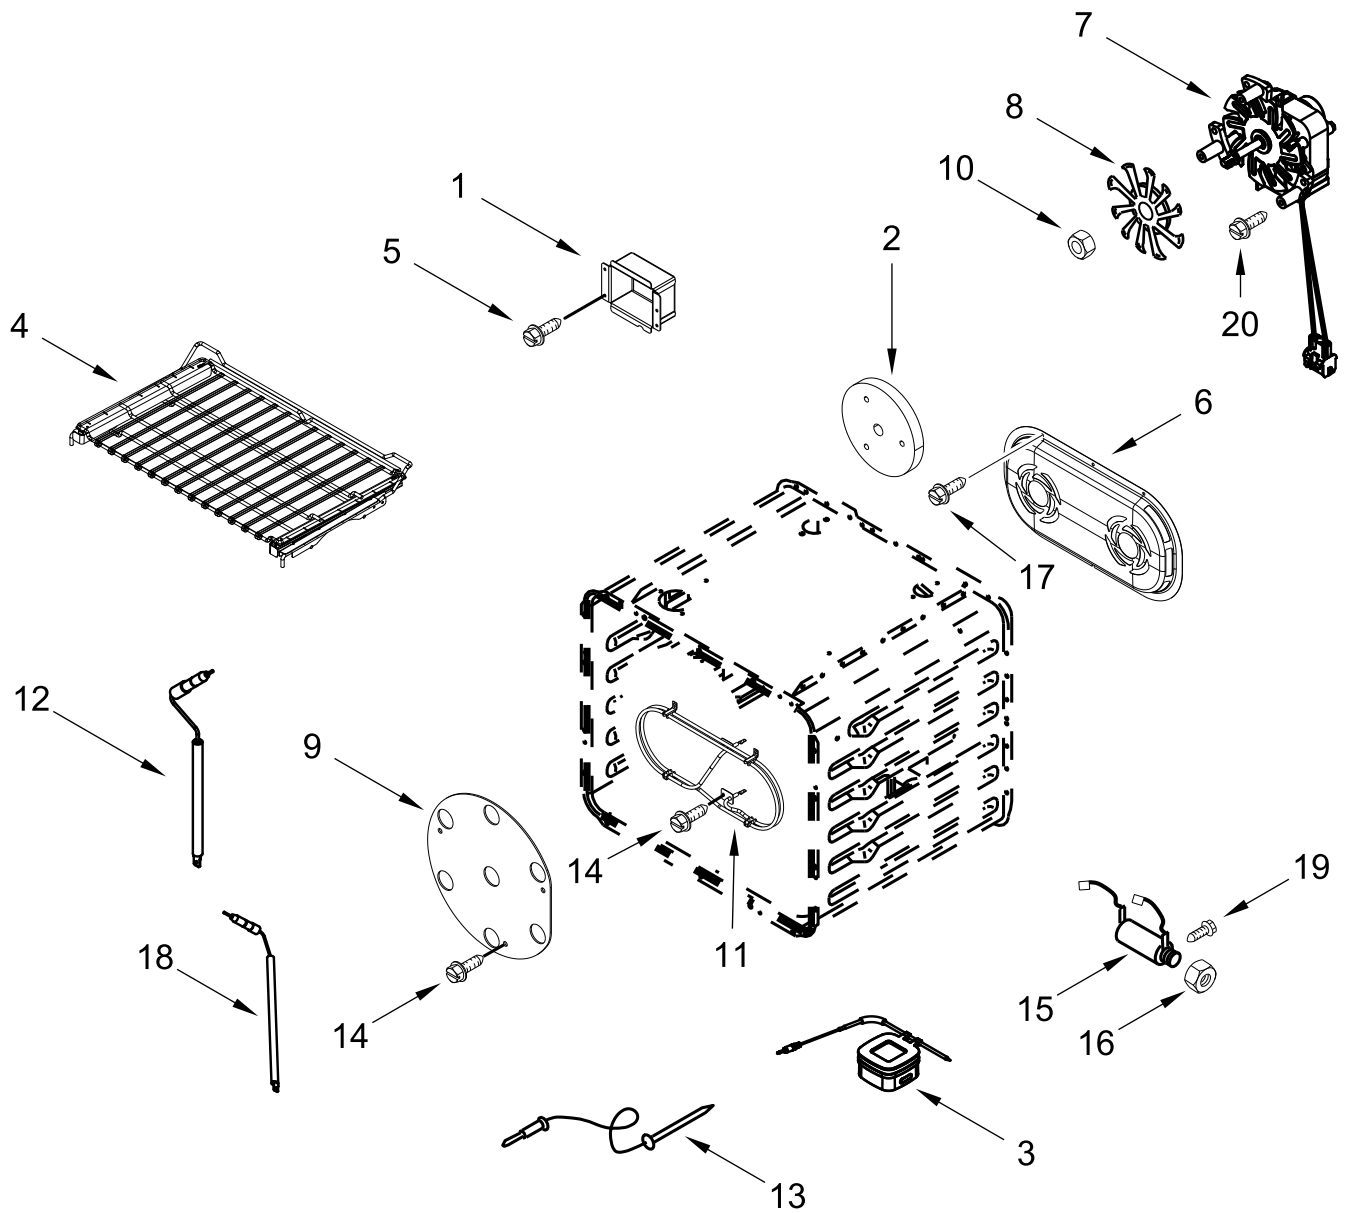

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11111342	Rack, Oven (Sliding)	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill