




36" RISE GAS PROFESSIONAL-STYLE RANGE
Includes Griddle

MODELS:

JGRP536HL00 (Stainless)


BURNER BOX AND GRIDDLE PARTS

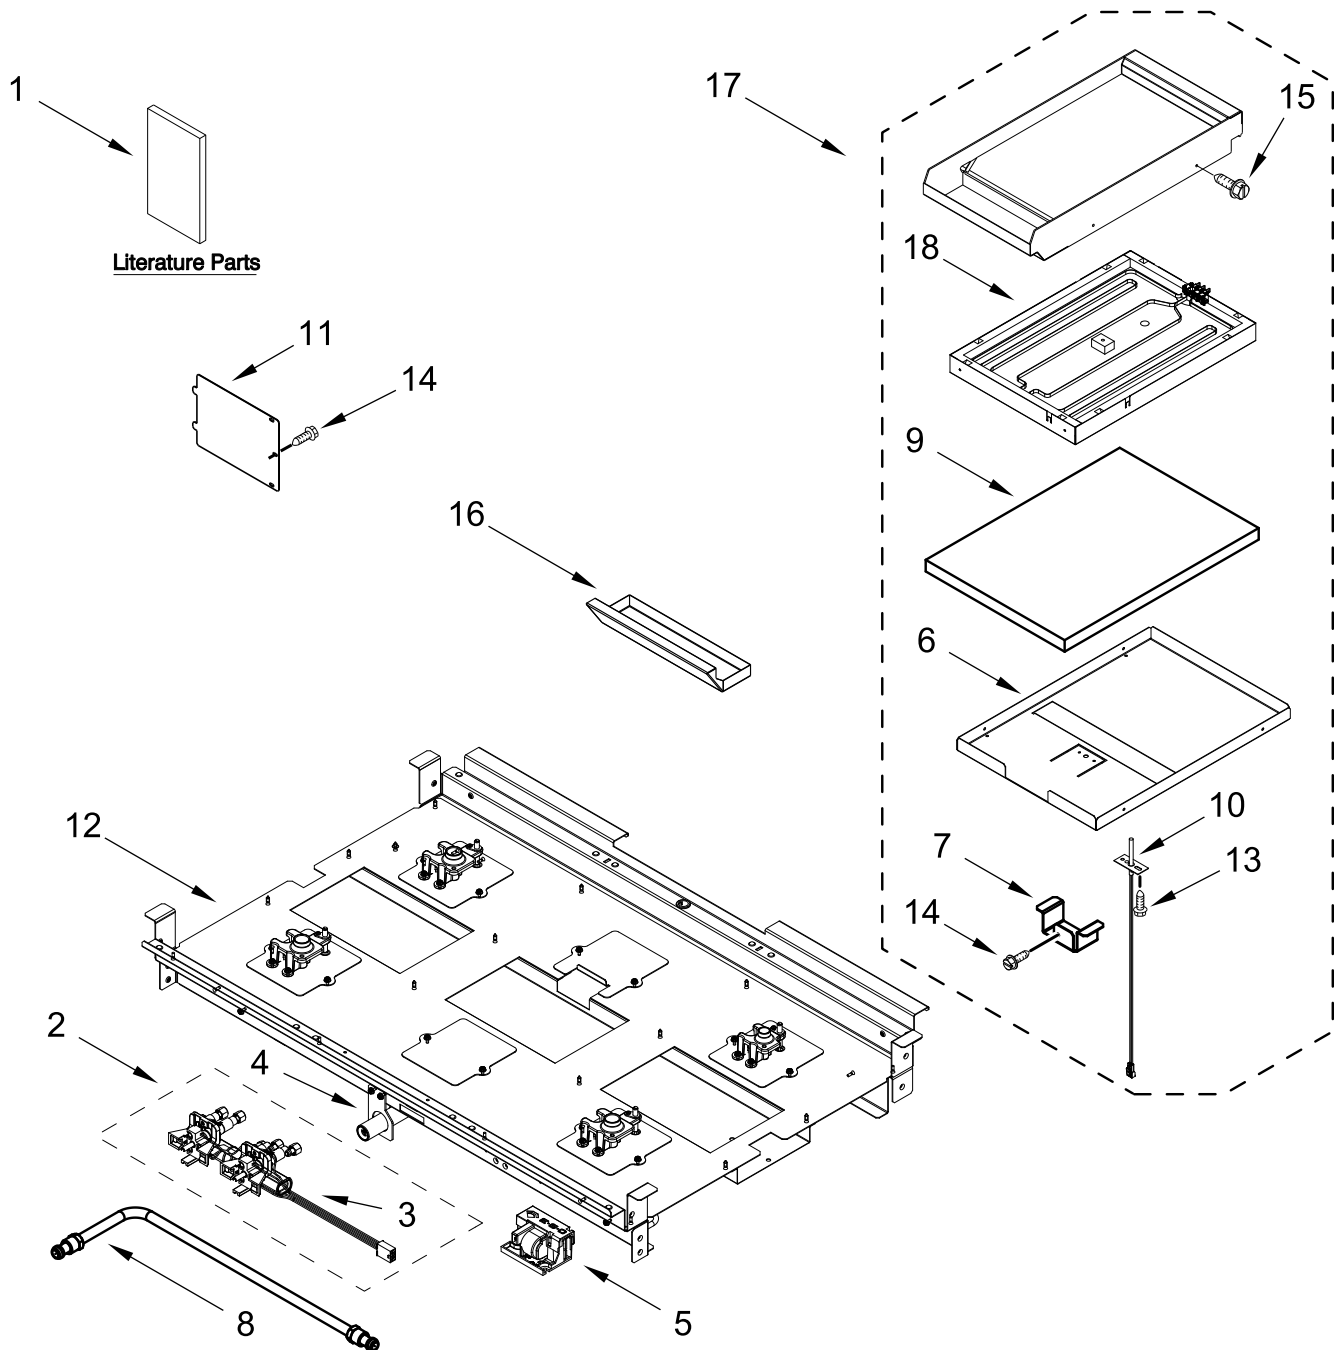

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	18	W10891698	Element, Griddle
	W11177275	Guide, Use and Care	6	W11330430	Tray, Griddle Insulation			FOLLOWING PARTS NOT ILLUSTRATED
	W11177278	Instructions, Installation	7	W11121384	Bracket, Griddle-RTD		W11200308	Harness, Main (36")
	W11177312	Guide, Quick Start	8	W10892370	Tube, Manifold Supply (Left)		W10903727	Harness, Griddle
	W11184746	Guide, Internet Connectivity		W10892443	Tube, Manifold Supply (Right)		W11200326	Harness, Cooktop
	W11202371	Diagram, Wiring (Oven)					W10780278	Harness, Door Lock
	W11202275	Sheet, Tech	9	W11121383	Insulation, Griddle		W11200325	Harness, Communication
2	W10893053	Assembly, Valve Manifold (Left Front and Left Rear)	10	W10891584	Sensor, Griddle		W11242785	Harness, WIFI
			11	W10115843	Cover, Ignition		W10624584	Cord, Power
			12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
	W10893062	Assembly, Valve Manifold (Right Front and Right Rear)	13	3196160	Screw		W11311196	Ignitor Wire, Wire-Electrode Bake
			14	7101P426-60	Screw		W11311197	Ignitor Wire, Wire-Electrode Broil
			15	3196176	Screw		W10253333	Bracket, Anti-Tip
3	W11106300	Switch, Harness	16	W10276497	Tray, Griddle Drip		7101P485-60	Screw, Anti-Tip Kit
4	W11121194	Bracket, Manifold	17	W10891745	Assembly, Griddle Module		W11238041	Kit, LP Conversion


COOKTOP, BURNER, AND GRIDDLE PARTS

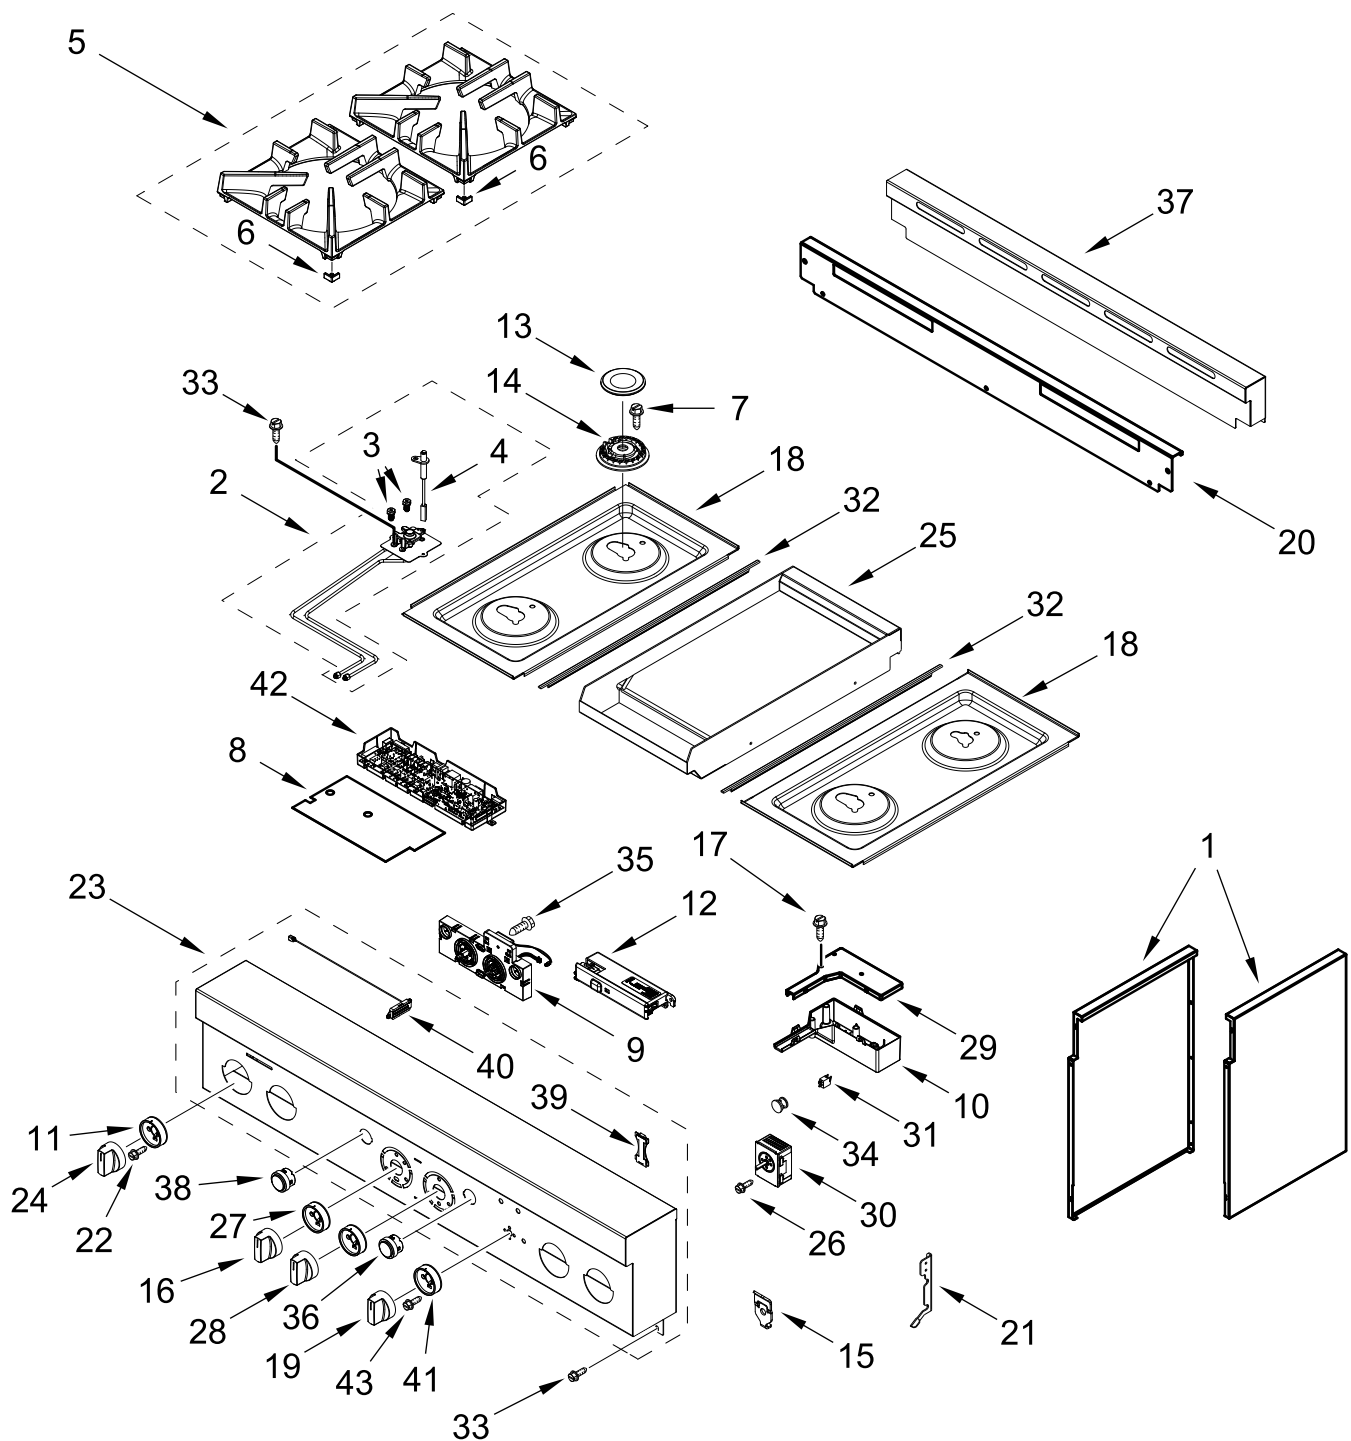

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	7	W11196257	Screw	24		Knob, Burner (For 4 Cooktop Burners)
	W11106880	Panel, Cabinet Side (Right)	8	W11281269	Barrier, Appliance Manager		W10882958	Stainless Assembly, Griddle Module (Part Number Included on Burner Box Page)
2	W10892793	Assembly, Orifice Holder (Left Front)	9	W11095713	Interface, User	25		
	W10892494	Assembly, Orifice Holder (Left Rear)	10	W11205795	Cover, WIFI Outer	26	3196537	Screw
	W10892475	Assembly, Orifice Holder (Right Front)	11	W11090283	Bezel, Cooktop (For 4 Cooktop Burners)	27		Bezel, Oven (For 2 Oven Knobs)
	W10892730	Assembly, Orifice Holder (Right Rear)	12	W11110768	Assembly, WIFI Module		W10914998	Stainless Knob, Oven Temperature
3	W10892422	Orifice, Main (17.4K) (Left Front)	13		Cap, Burner	28	W10891871	Stainless
	W10892418	Orifice, Main (15.4K) (Left Rear and Right Front)	14	W11121391	Black (Set of 4)	29	W11205794	Cover, WIFI Inner
	W10892440	Orifice, Main (7.2K) (Right Rear)		W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)	30	W11033497	Control, Griddle
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	15	W10892022	Spreader, Flame (Low) (Right Rear)	31	W10116114	Light, Indicator Housing
	W10892429	Orifice, Simmer (2.0K) (Right Rear)	16	W11036559	Spring Clip, Range	32	W10291193	Trim, L-Strip
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	17	W11092267	Knob, Oven Mode Stainless	33	7101P426-60	Screw
	W11238756	Igniter (Right Rear)	18	7101P624-60	Screw	34	W10294500	Lens, Indicator Light
5		Assembly, Grate	19		Panel, Cooktop	35	3400814	Screw
6	W11179862	Black (Set of 2)	20	W10803515	Black (Left)	36	W11090650	Button Assembly, Oven Start
	W11042504	Bumper, Grate		W10804371	Black (Right)	37	W11183086	Trim, Island
			21		Knob, Griddle	38	W11090651	Button Assembly, Oven Light
				W10884943	Stainless	39	W10896369	Assembly, Light Pipe
			22	W10323250	Insert, Island Trim	40	W11130078	Antenna, WIFI
			23	W10130760	Bracket, Moving Console (Left)	41	W11104966	Bezel, Griddle
				W10130759	Bracket, Moving Console (Right)	42	W11100276	Manager, Appliance (Powermax)
						43	7101P309-60	Screw


CHASSIS PARTS

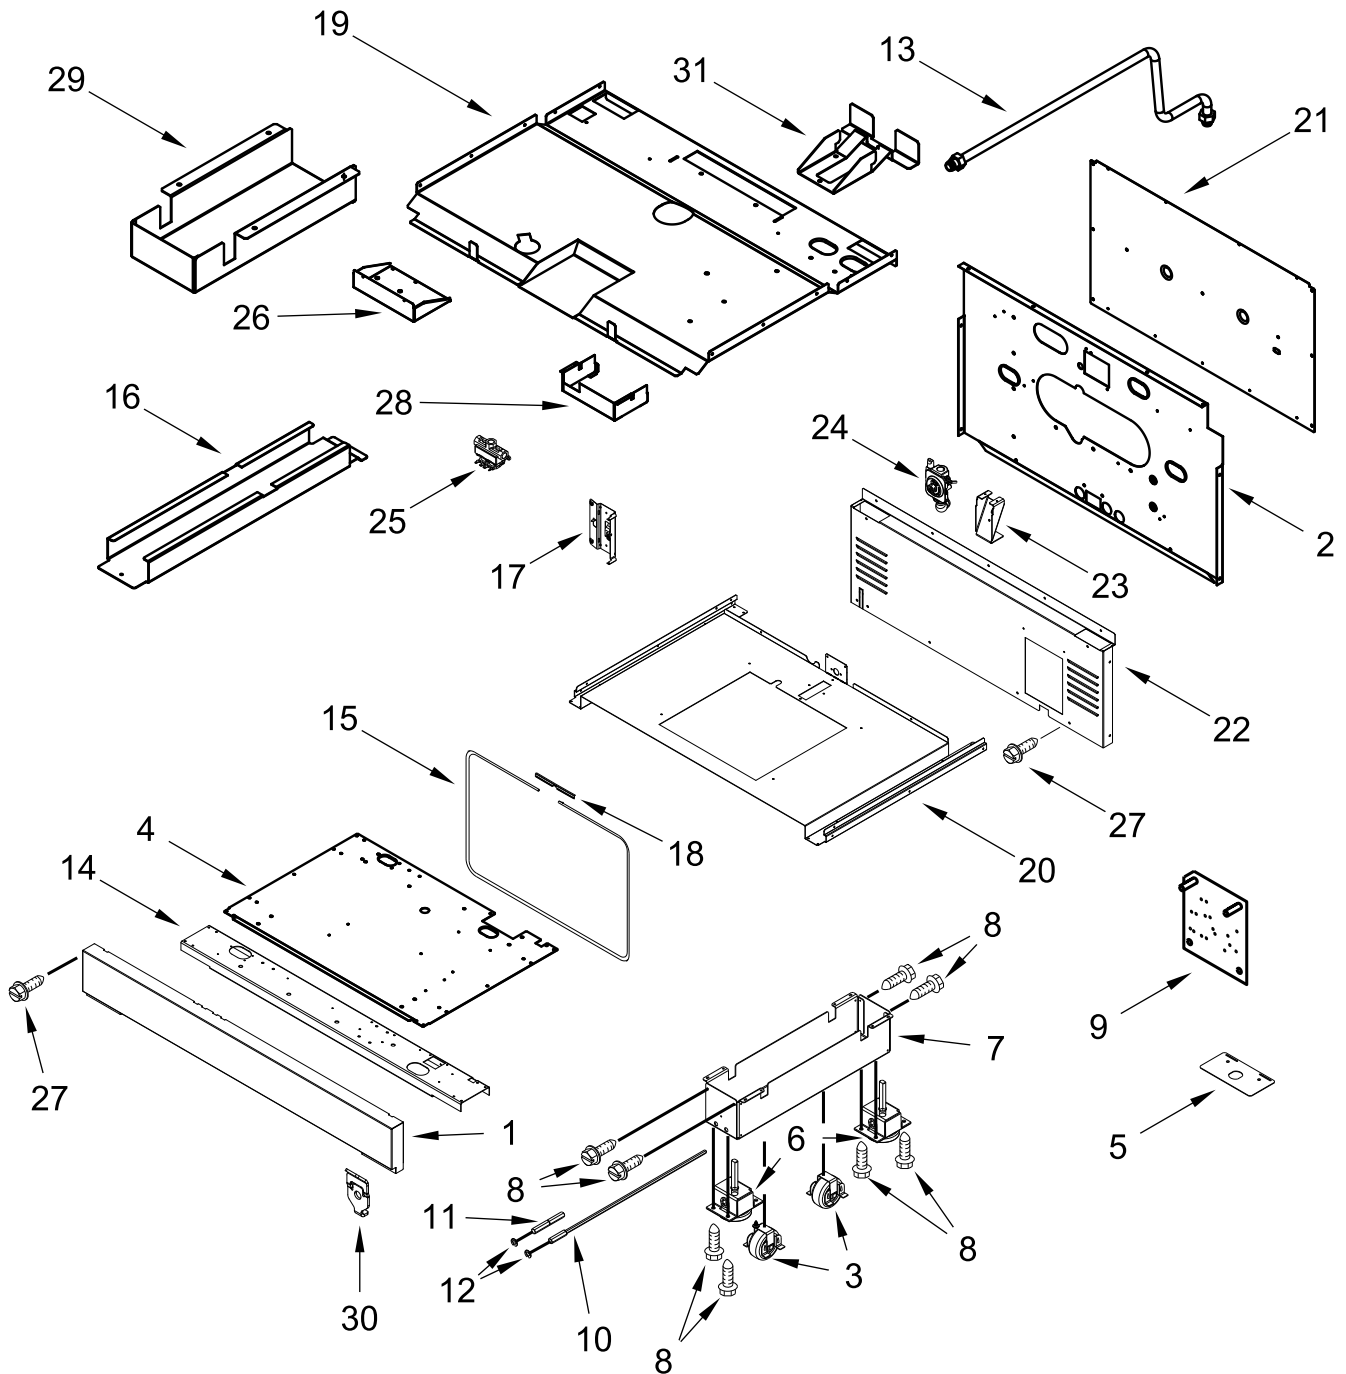

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	14	W11087493	Support, Channel	25	W10145680	Valve, Dual
2	W11089589	Back, Chassis	15	W11115330	Gasket, Oven (36")	26	W11106341	Drawer, Appliance Manager
3	W10138054	Assembly, Roller	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
4	W11095572	Duct, Bottom (36")	17	W10145362	Bracket-Board, DSI	28	W11106335	Cabinet, Appliance Manager
5	W10115855	Holder, Strain Relief	18	W10216520	Retainer, Gasket (9" Long)	29	W11084360	Channel, Wire
6	9760860	Leveler	19	W11037135	Top, Chassis	30	W11036559	Spring Clip, Range
7	W10908710	Base, Leveling Leg	20	W11040801	Chassis, Bottom	31	W11190223	Bracket, Bake Alignment
8	4449743	Screw	21	W11103333	Panel, Back Top			
9	W10511278	Module, Spark DSI	22	W11034133	Panel, Back Bottom			
10	W10115869	Shaft, Long	23	W11096823	Bracket, Pressure Regulator			
11	W10115793	Shaft, Short	24	W10896959	Regulator, Pressure			
12	489504	E-Ring						
13	W11181648	Tube, Pressure Regulator						


OVEN PARTS

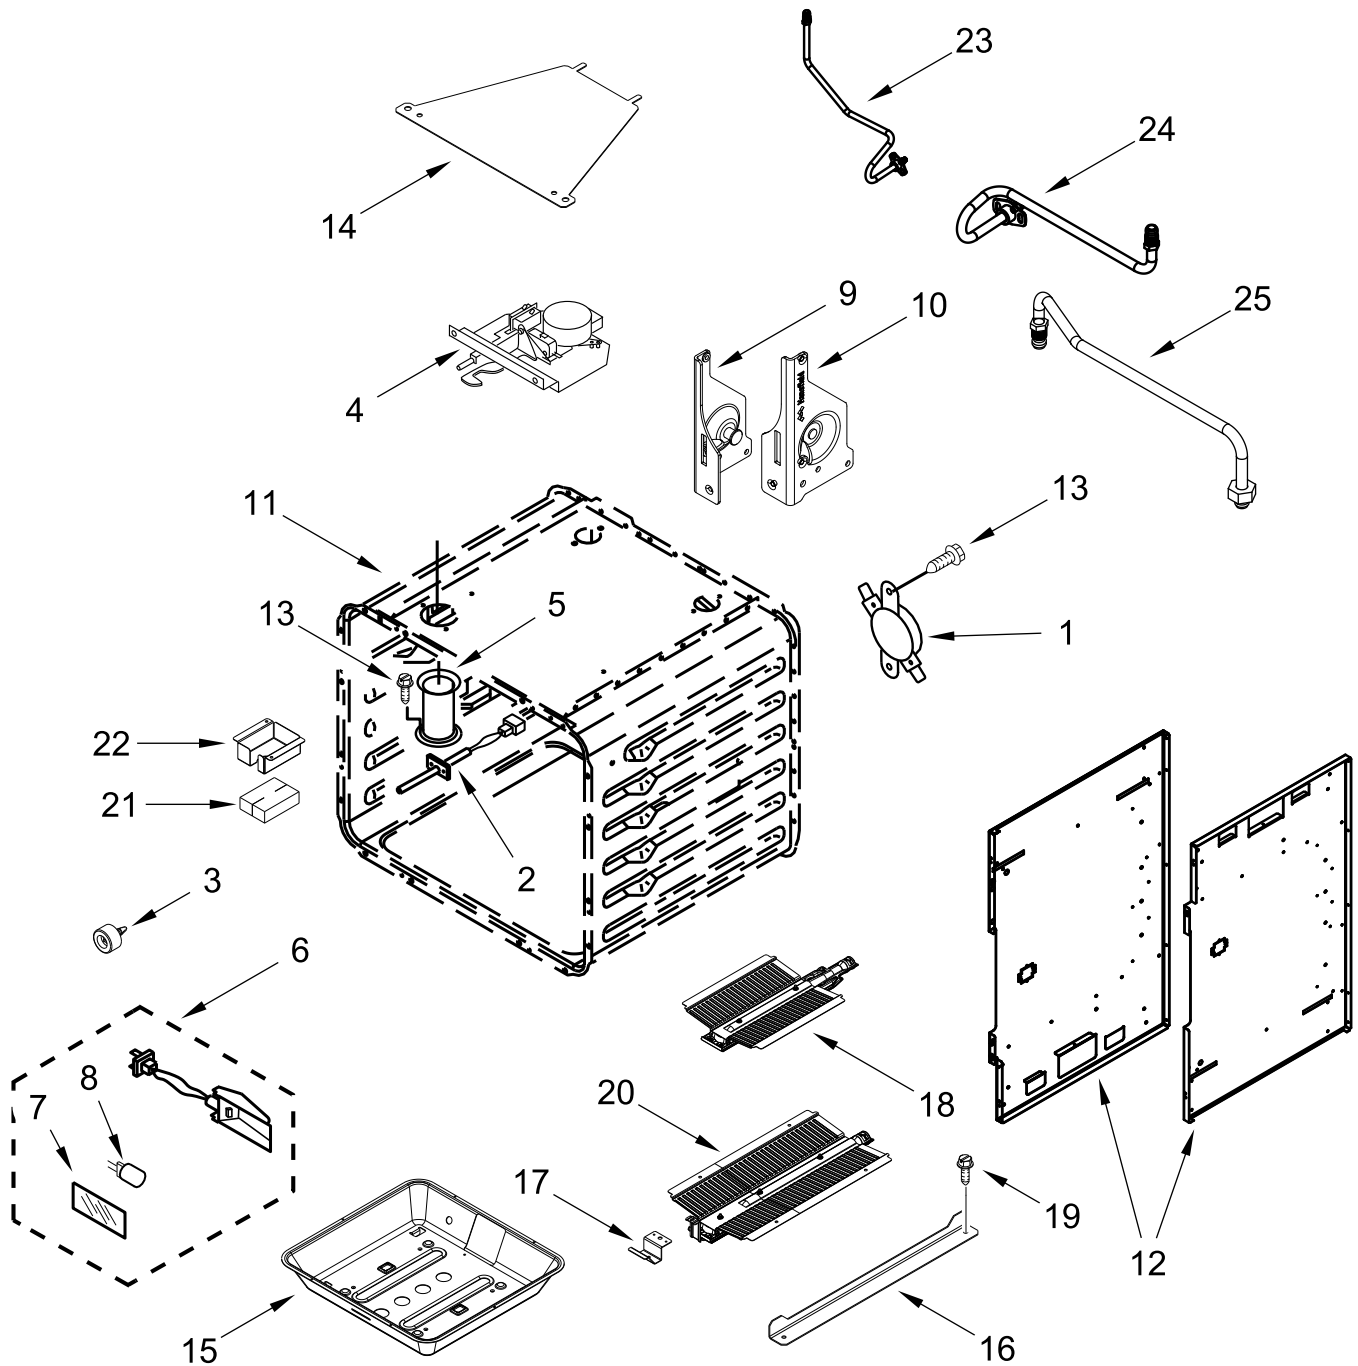

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10310985	Cover, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W11109238	Tube, Broil
3	W10351278	Bumper & Screw	13	7101P426-60	Screw	24	W11106980	Tube, Bake
4	W10830016	Latch, Motorized	14	W10160858	Cover, Latch	25	W11107279	Tube, Gas
5	W10145743	Tube, Vent	15	W10145744	Support, Bake Pan			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	16	W10317437	Bracket, Broil Standoff		W10282811	Insulation, Wrap
7	W10169756	Lens, Light	17	W10308040	Bracket, Bake Burner		W10299351	Insulation, Back
8	W10169757	Bulb, Light	18	W10878504	Burner, Bake		W10299356	Insulation, Bottom
9	W11096294	Receiver, Hinge (Left)	19	7101P434-60	Screw		3400968	Nut
10	W11096293	Receiver, Hinge (Right)	20	W10311335	Burner, Broil			
11		Liner, Oven (Not Serviced)	21	W10311009	Insulation, Broil Cover			


VENTING PARTS

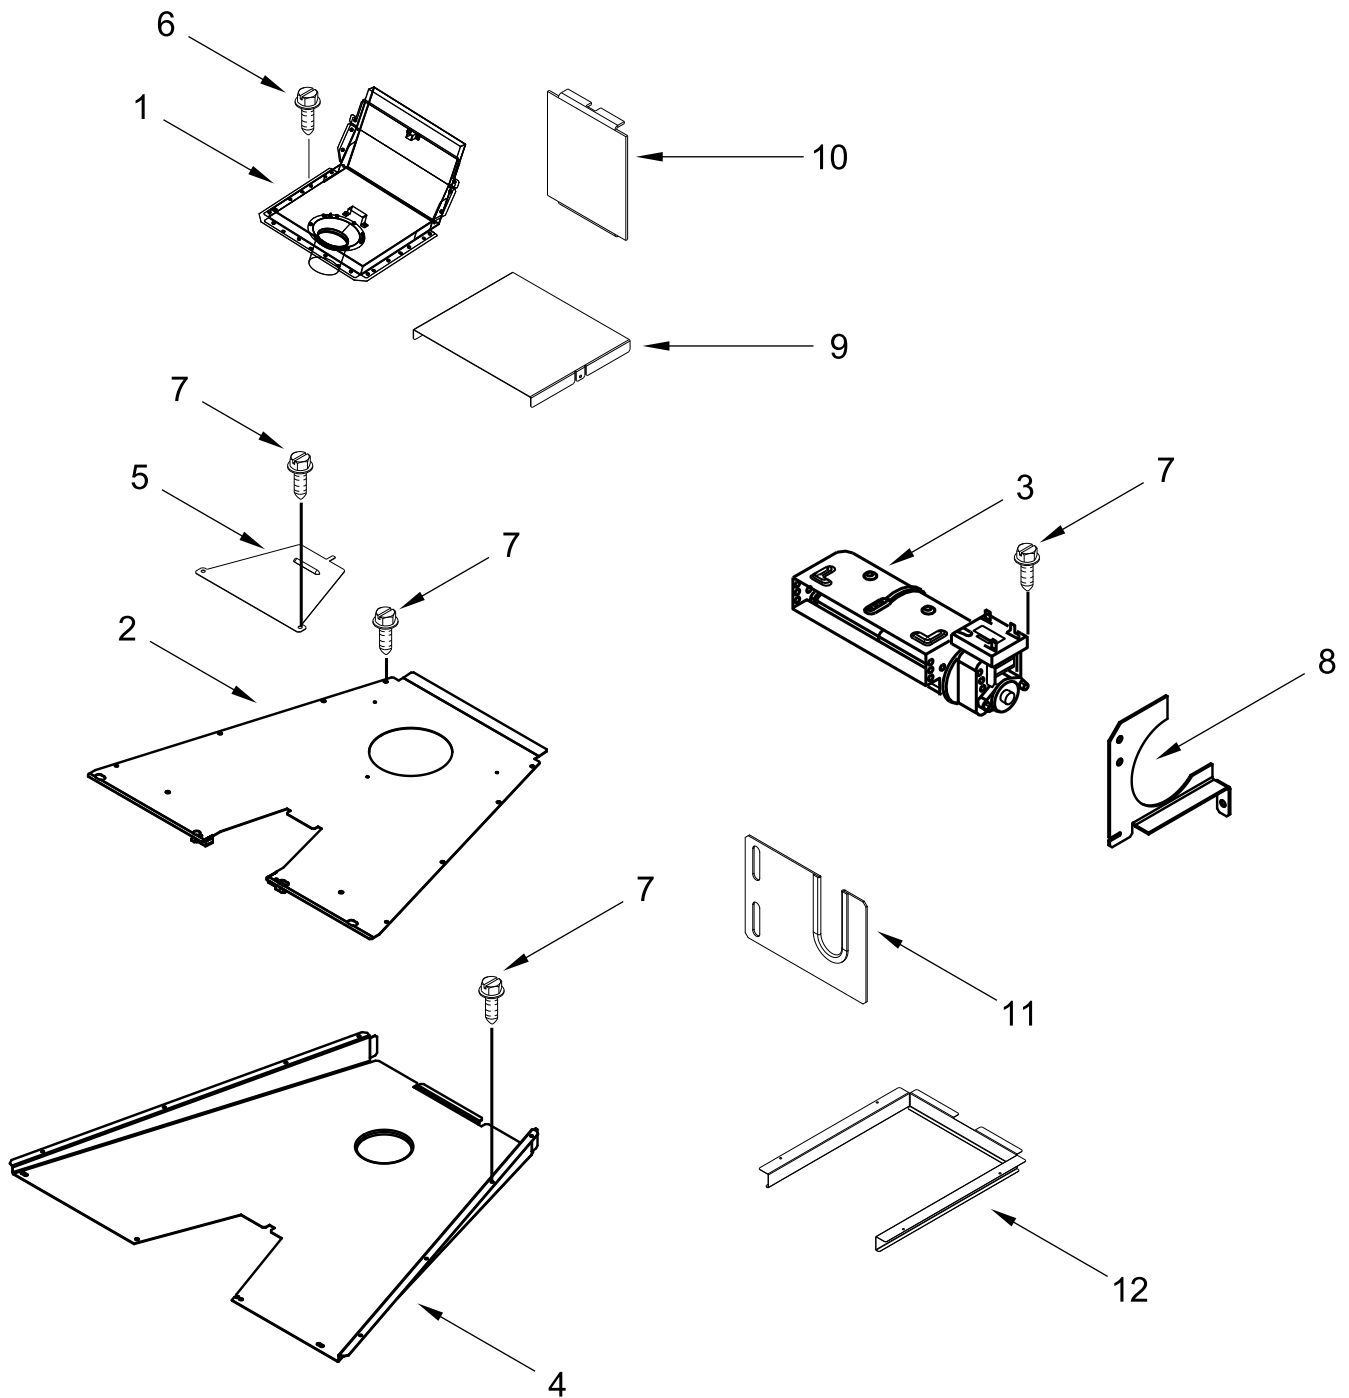

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	9	W10246086	Retainer, Insulation
3	W11200129	Blower	6	3400805	Screw (Zinc)	10	W10246087	Insulation, Chimney
			7	7101P426-60	Screw	11	W11106956	Cover, Channel
						12	W10145363	Duct, Primary Air (30")


OVEN DOOR PARTS

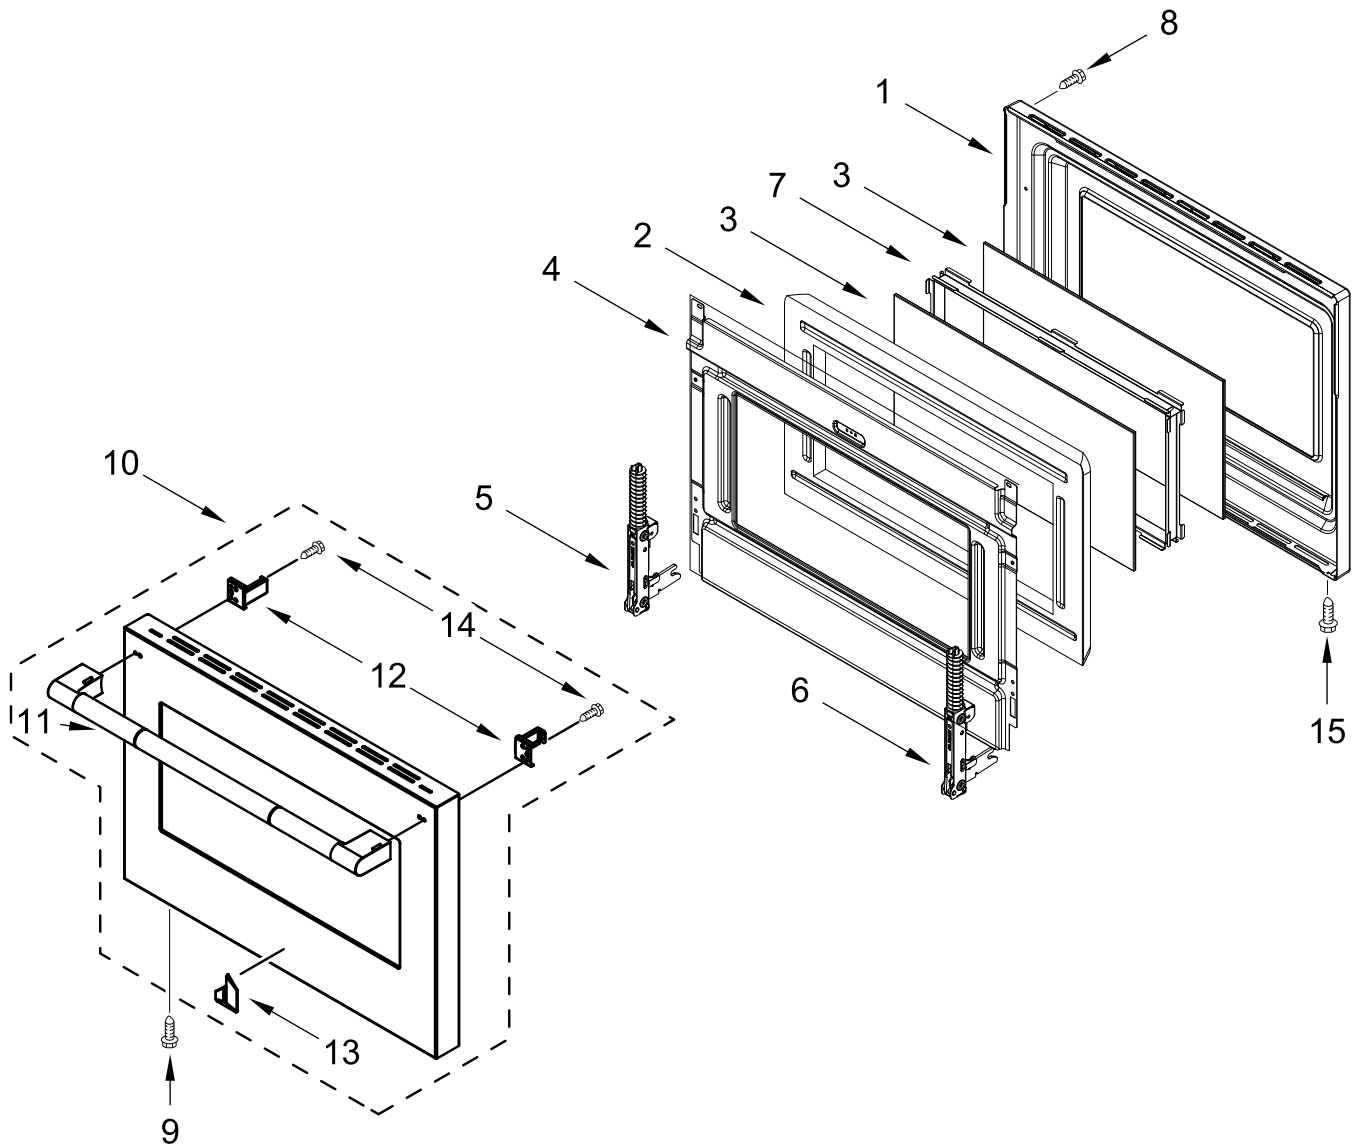

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10292297	Screw	13		Badge
2	W10884823	Insulation, Door	9	W10162096	Screw		W11238656	Stainless
3	W11036791	Glass, Inner	10	W10799310	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
4	W11194820	Retainer, Glass				15	W10607120	Screw
5	W11096978	Hinge, Door (Left)	11	W11102828	Handle, Door			
6	W11096977	Hinge, Door (Right)	12	W11197830	Bracket, Handle			
7	W11194814	Frame, Glass						

INTERNAL OVEN PARTS

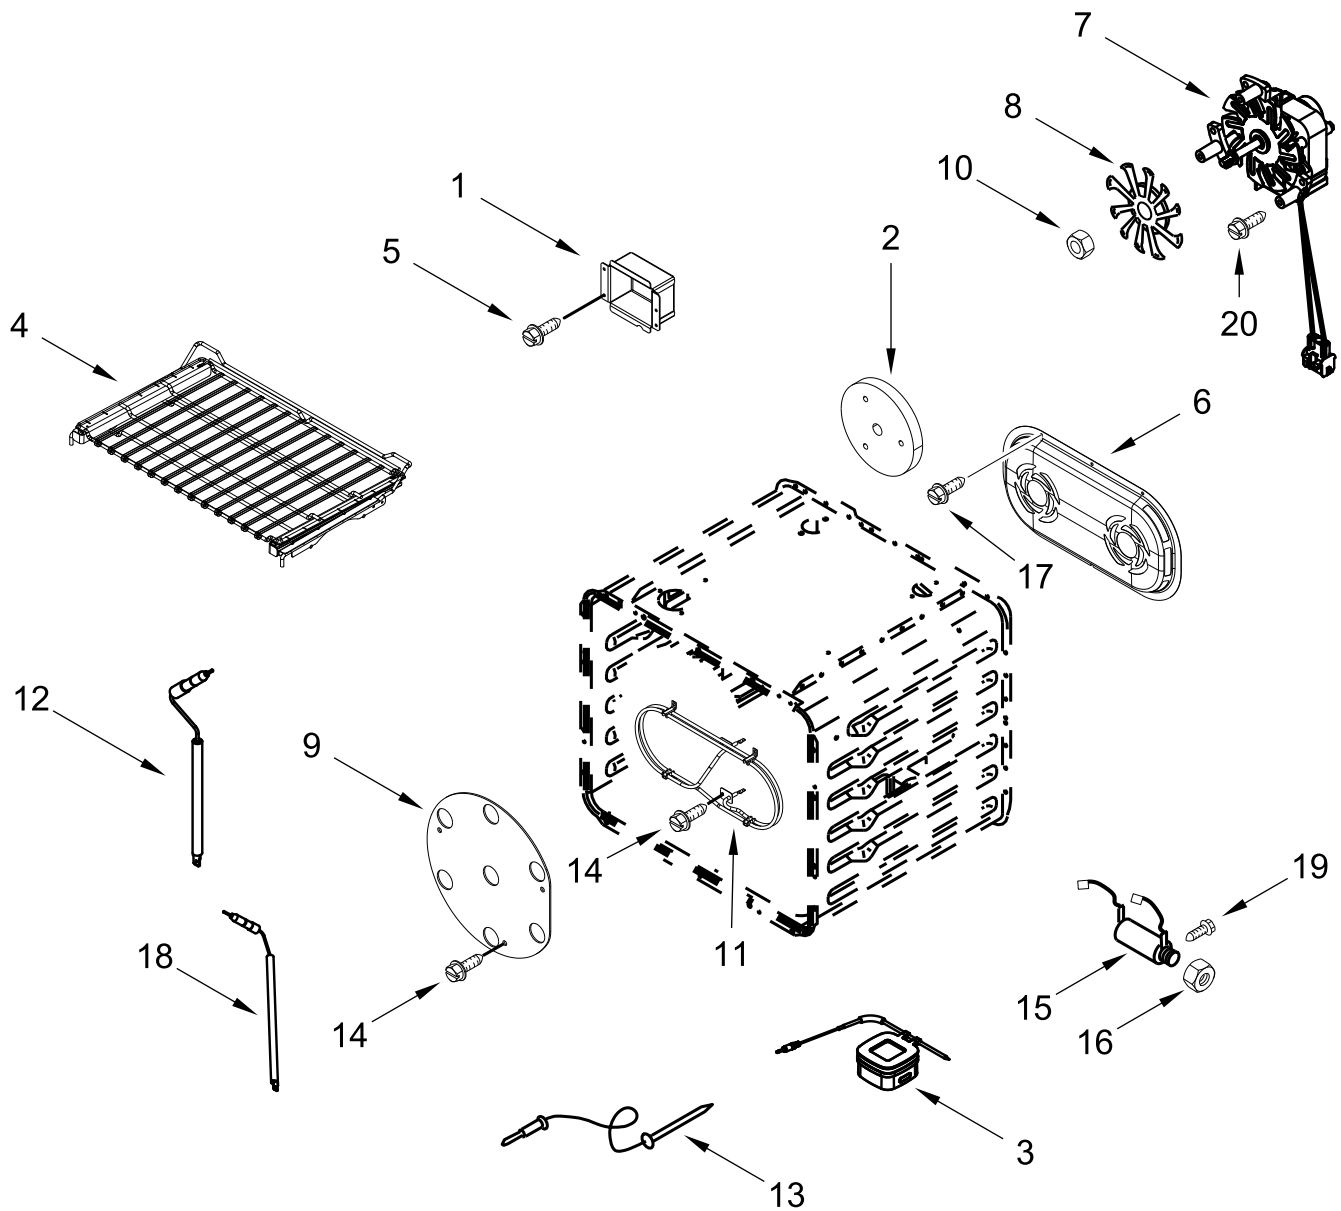

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11111356	Rack, Oven (Sliding)	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill