




NOIR 48" GAS PROFESSIONAL-STYLE RANGE
Includes Griddle

MODELS:

JGRP548HM00 (Stainless)


BURNER BOX AND GRIDDLE PARTS

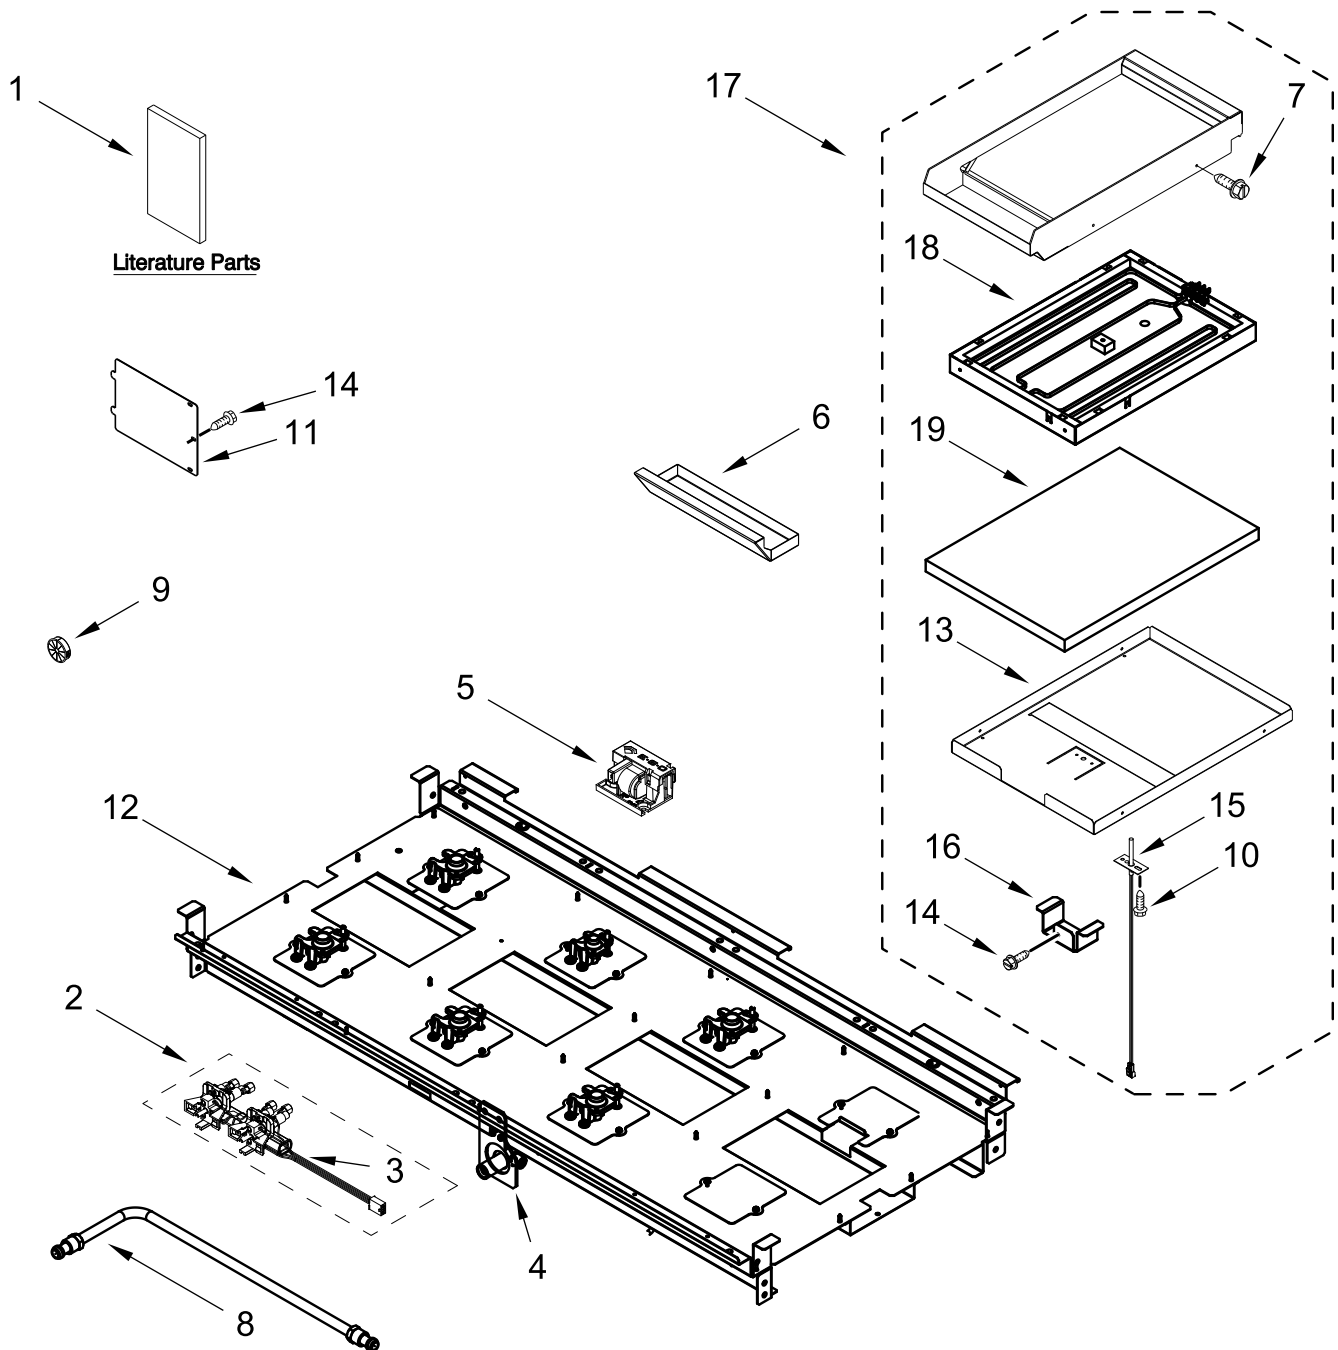

BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	W11121317	Module, Spark	19	W11121383	Insulation, Griddle
	W11177275	Guide, Use and Care	6	W10276497	Tray, Griddle Drip			FOLLOWING PARTS NOT ILLUSTRATED
	W11177278	Instructions, Installation	7	3196176	Screw		W11200305	Harness, Main (48")
	W11184746	Guide, Internet Connectivity	8	W10892784	Tube, Manifold Supply (Left)		W10903727	Harness, Griddle
	W11177312	Guide, Quick Start		W10892775	Tube, Manifold Supply (Left Center)		W11200329	Harness, Cooktop
	W11202375	Diagram, Wiring		W10892789	Tube, Manifold Supply (Right Center)		W10780278	Harness, Door Lock
	W11202275	Sheet, Tech					W11200318	Harness, Communication
2	W11183722	Assembly, Valve Manifold (Left Front and Left Rear)	9	W10189097	Bushing, Burner Box		W11242785	Harness, WIFI
	W10893058	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	10	3196160	Screw		W10624584	Cord, Power
			11	W10115843	Cover, Ignition		9759877	Retainer, Strain Relief
			12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
	W10893051	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	13	W11330430	Tray, Griddle Insulation		W11311196	Ignitor Wire, Wire-Electrode Bake
			14	7101P426-60	Screw		W11311197	Ignitor Wire, Wire-Electrode Broil
			15	W10891584	Sensor, Griddle		W10253333	Bracket, Anti-Tip
			16	W11121384	Bracket, Griddle-RTD		7101P485-60	Screw, Anti-Tip Kit
			17	W10891745	Assembly, Griddle Module		W11238041	Kit, LP Conversion
3	W11106300	Switch, Harness	18	W10891698	Element, Griddle			
4	W11121194	Bracket, Manifold						


COOKTOP, BURNER, AND GRIDDLE PARTS

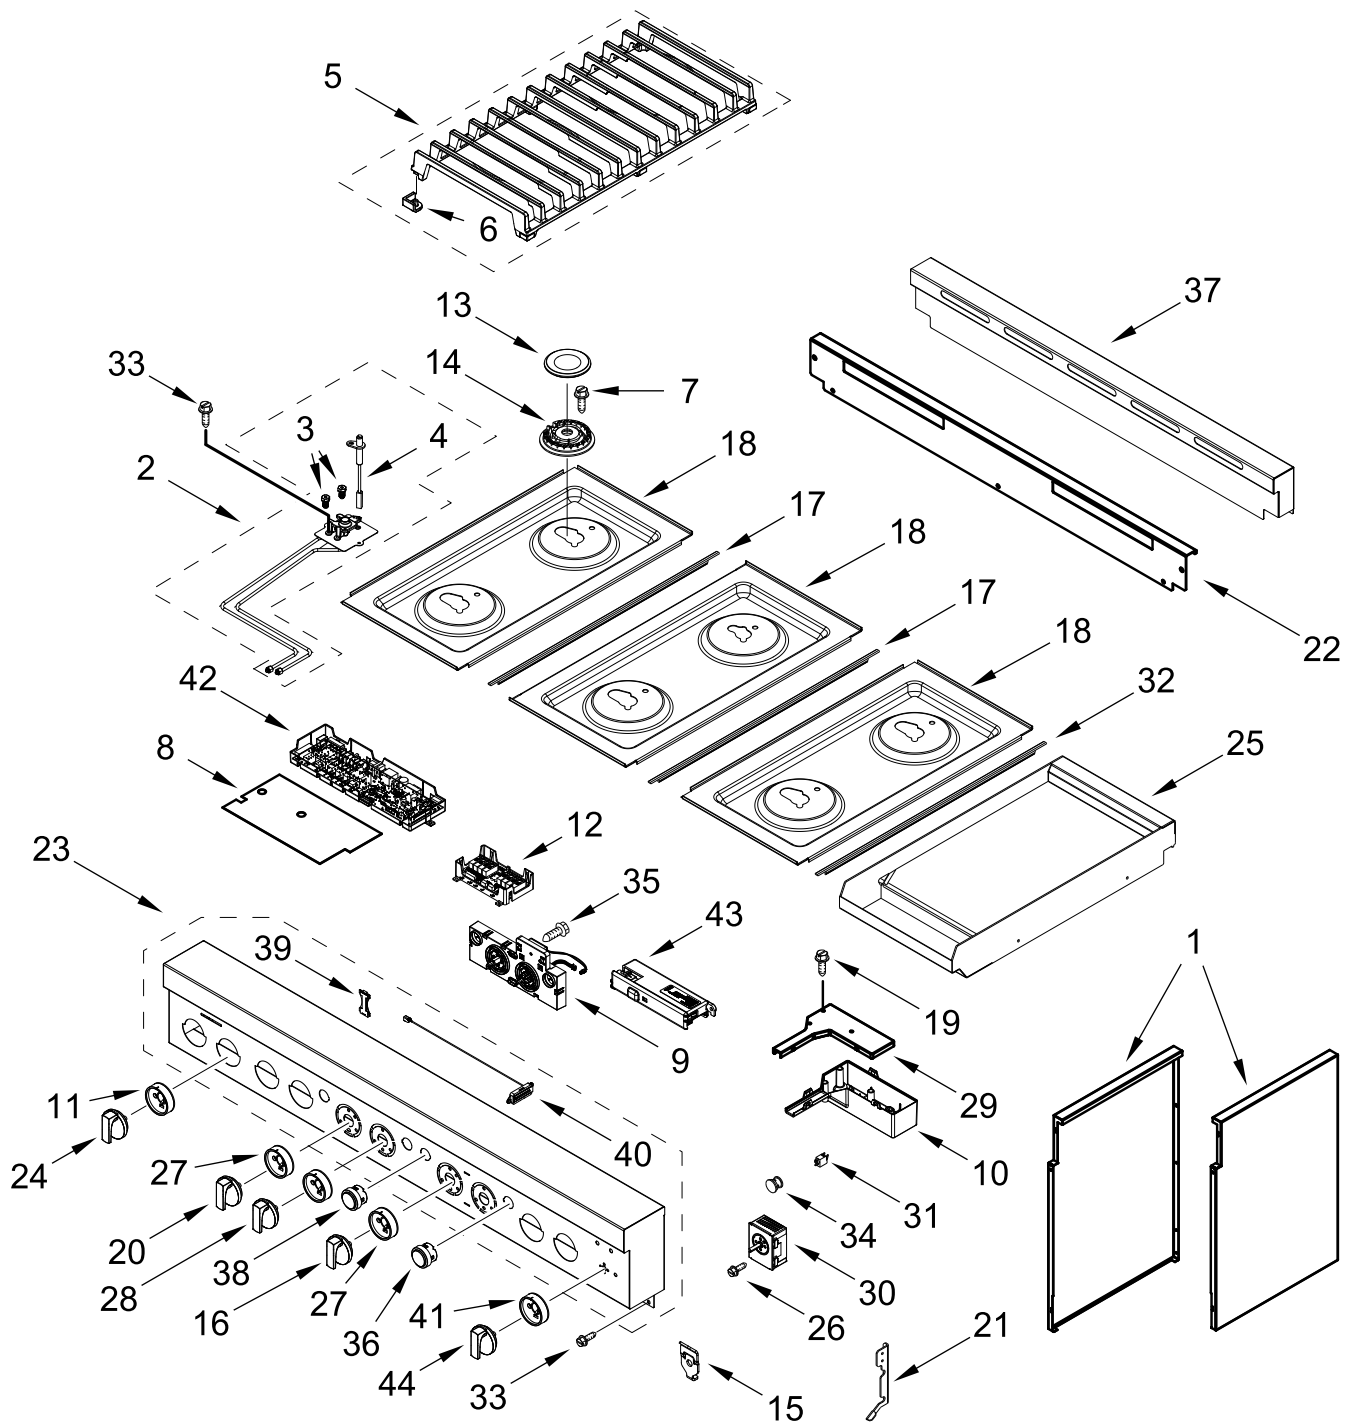

COOKTOP, BURNER, AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	5		Assembly, Grate	22	W10323252	Trim, Island Insert
	W11111428	Panel, Cabinet Side (Right)		W11172289	Black	23	W11253772	Panel, Control
				W11172654	Black	24		Knob, Burner
2	W10892807	Assembly, Orifice Holder			(Left Center)			(For 6 Cooktop Burners)
		(Left Front)		W11172625	Black		W10887596	Stainless
	W10892495	Assembly, Orifice Holder	6	W11042504	Bumper, Grate	25		Assembly, Griddle Module
		(Left Rear)	7	W11323260	Screw			(Part Number Included on Burner Box Page)
	W11114338	Assembly, Orifice Holder	8	W11281269	Barrier, Appliance Manager	26	W10674068	Screw
		(Left Center Front)	9	W11219188	Interface, User	27		Bezel, Oven
	W10892810	Assembly, Orifice Holder	10	W11205795	Cover, WIFI Outer			(For 4 Oven Knobs)
		(Left Center Rear)	11	W11090284	Bezel, Cooktop		W11042375	Stainless
					(For 6 Cooktop Burners)	28		Knob, Oven Temperature
	W10892505	Assembly, Orifice Holder	12	W10871065	Manager, Appliance (Expansion)		W11325047	Stainless
		(Right Center Front)	13		Cap, Burner			(For 18" Oven)
				W11121392	Black (Set of 6)		W10891868	Stainless
	W10892444	Assembly, Orifice Holder	14	W10891987	Spreader, Flame (High)	29	W11205794	Cover, WIFI Inner
		(Right Center Rear)			(All But Left Center Rear)	30	W11033497	Control, Griddle
3	W10892422	Orifice, Main (17.4K)		W10892022	Spreader, Flame (Low)	31	W10116114	Light, Indicator Housing
		(Left Front And Right Center Front)			(Left Center Rear)	32	W10291193	Trim, L-Strip
	W10892418	Orifice, Main (15.4K)	15	W11036559	Spring Clip, Range	33	7101P426-60	Screw
		(Left Rear, Left Center Front, Right Center Rear)	16		Knob, 30" Oven Mode	34	W10294500	Lens, Indicator Light
				W11317854	Stainless	35	3400814	Screw
	W10892440	Orifice, Main (7.2K)	17		Trim, T-Strip	36	W11090650	Button Assembly, Oven Start
		(Left Center Rear)		W10271524	Black	37	W11183087	Trim, Island
	W10892435	Orifice, Simmer (2.6K)	18		Panel, Cooktop	38	W11090651	Button Assembly, Oven Light
		(All But Left Center Rear)		W11038237	Black	39	W10896369	Assembly, Light Pipe
					(Left)	40	W11130078	Antenna, WIFI
	W10892429	Orifice, Simmer (2.0K)		W11038241	Black	41	W11104967	Bezel, Griddle
		(Left Center Rear)			(Left Center)	42	W11100277	Manager, Appliance (Powermax)
				W11038249	Black			
					(Right Center)			
4	W11238757	Igniter	19	7101P624-60	Screw	43	W11110768	Assembly, WIFI Module
		(Left Front, Left Rear, Right Center Front)	20		Knob, 18" Oven Mode Gas	44		Knob, Griddle
	W11238758	Igniter		W11325046	Stainless		W10891923	Stainless
		(Left Center Front, Right Center Rear)	21	W10130760	Bracket, Moving Console (Left)			
	W11238756	Igniter		W10130759	Bracket, Moving Console (Right)			
		(Left Center Rear)						


48" CHASSIS PARTS

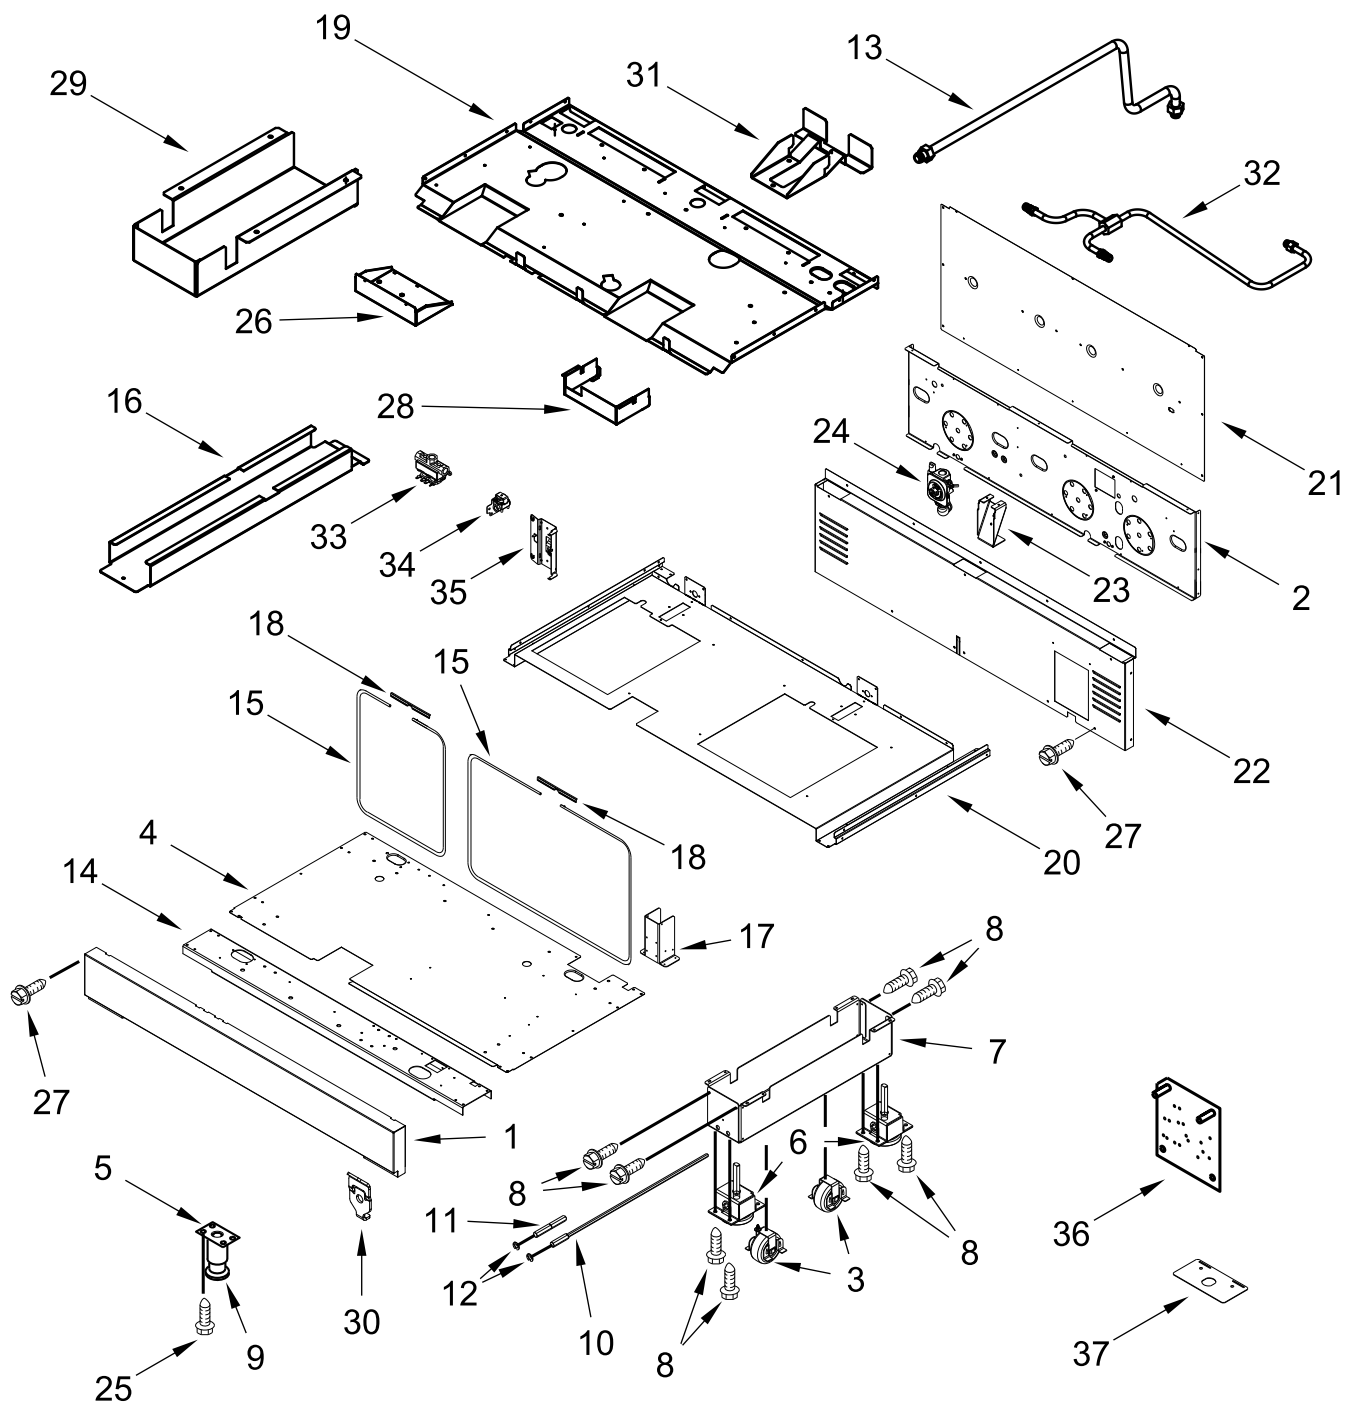

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11084360	Channel, Wire
2	W11105913	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48")	19	W11037132	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11106335	Cabinet, Appliance Manager			
14	W11087494	Support, Channel						
15	W11115328	Gasket, Oven (30")						
	W11115326	Gasket, Oven (18")						


30" OVEN PARTS

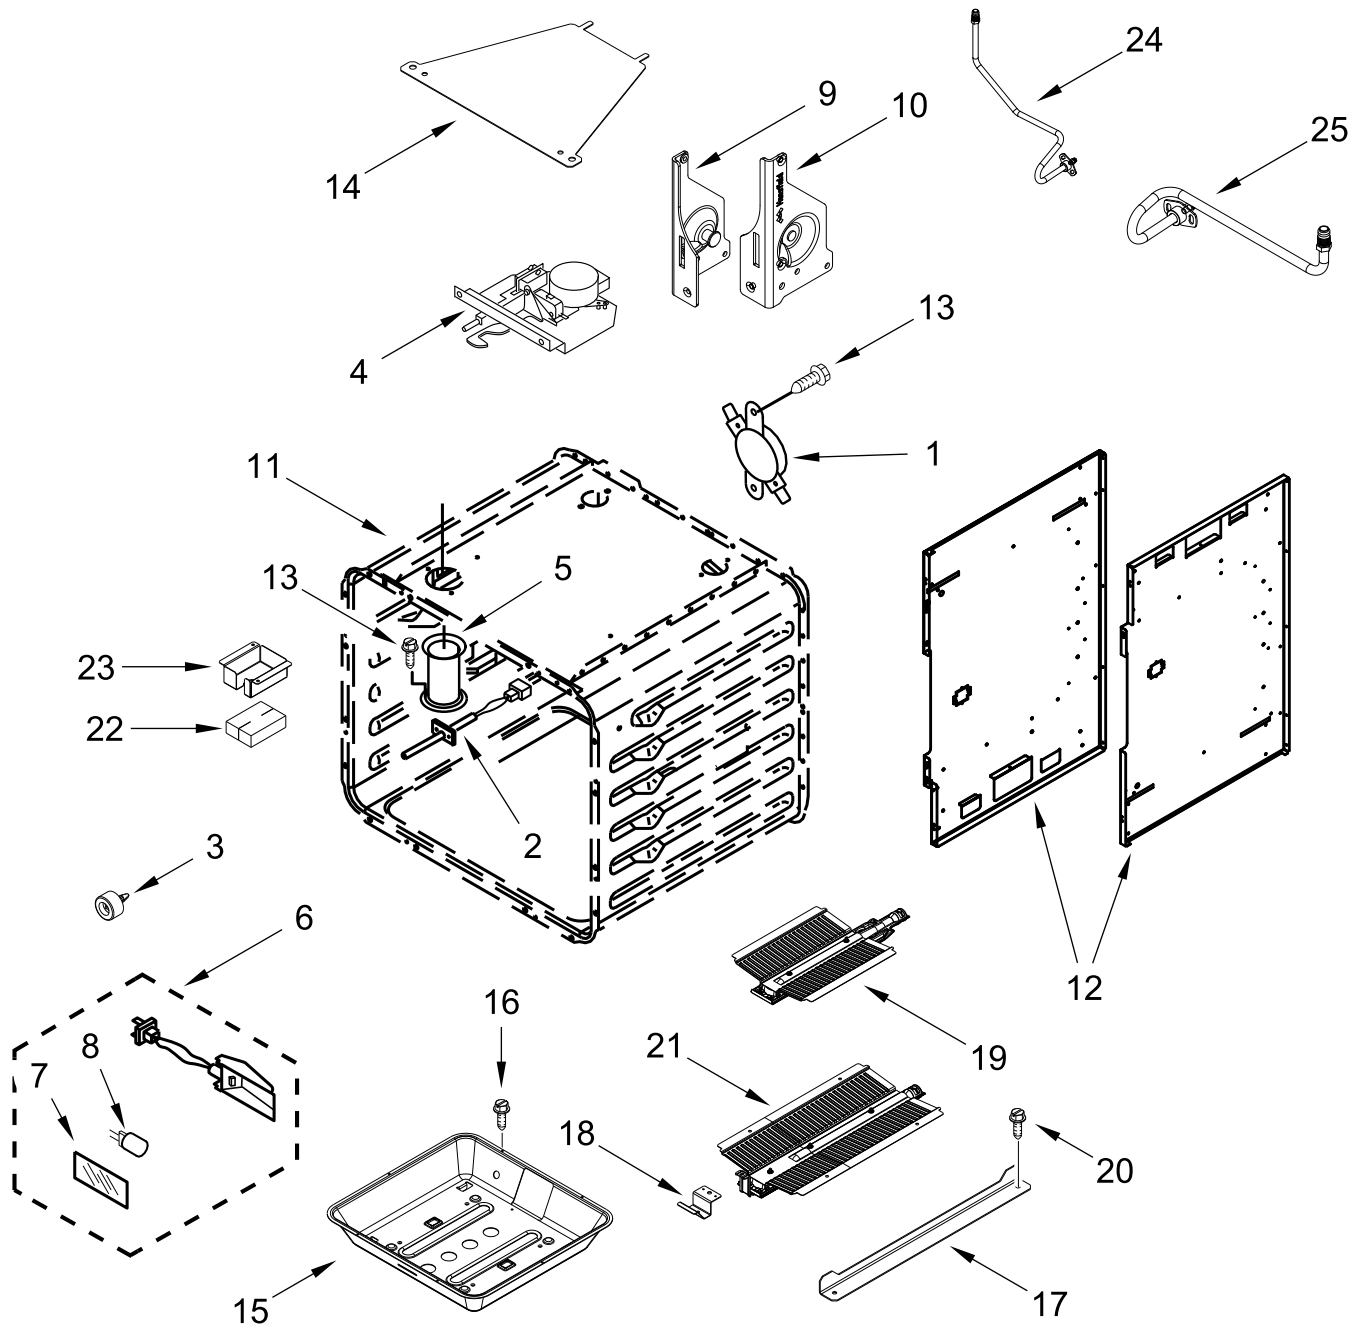

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10311009	Insulation, Broil Cover
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W10310985	Cover, Broil
3	W10351278	Bumper & Screw				24	W11109238	Tube, Broil
4	W10830016	Latch, Motorized	13	7101P426-60	Screw	25	W11106980	Tube, Bake
5	W10145743	Tube, Vent	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	15	W10145744	Support, Bake Pan			
7	W10169756	Lens, Light	16	12992902	Screw		W10282810	Insulation, Wrap, 30"
8	W10169757	Bulb, Light	17	W10317437	Bracket, Broil Standoff		W10299350	Insulation, Back, 30"
9	W11096294	Receiver, Hinge (Left)	18	W10308040	Bracket, Bake Burner		W10299354	Insulation, Bottom
10	W11096293	Receiver, Hinge (Right)	19	W10878504	Burner, Bake			
			20	7101P434-60	Screw		3400968	Nut
11		Liner, Oven (Not Serviced)	21	W10311335	Burner, Broil			


18" OVEN PARTS

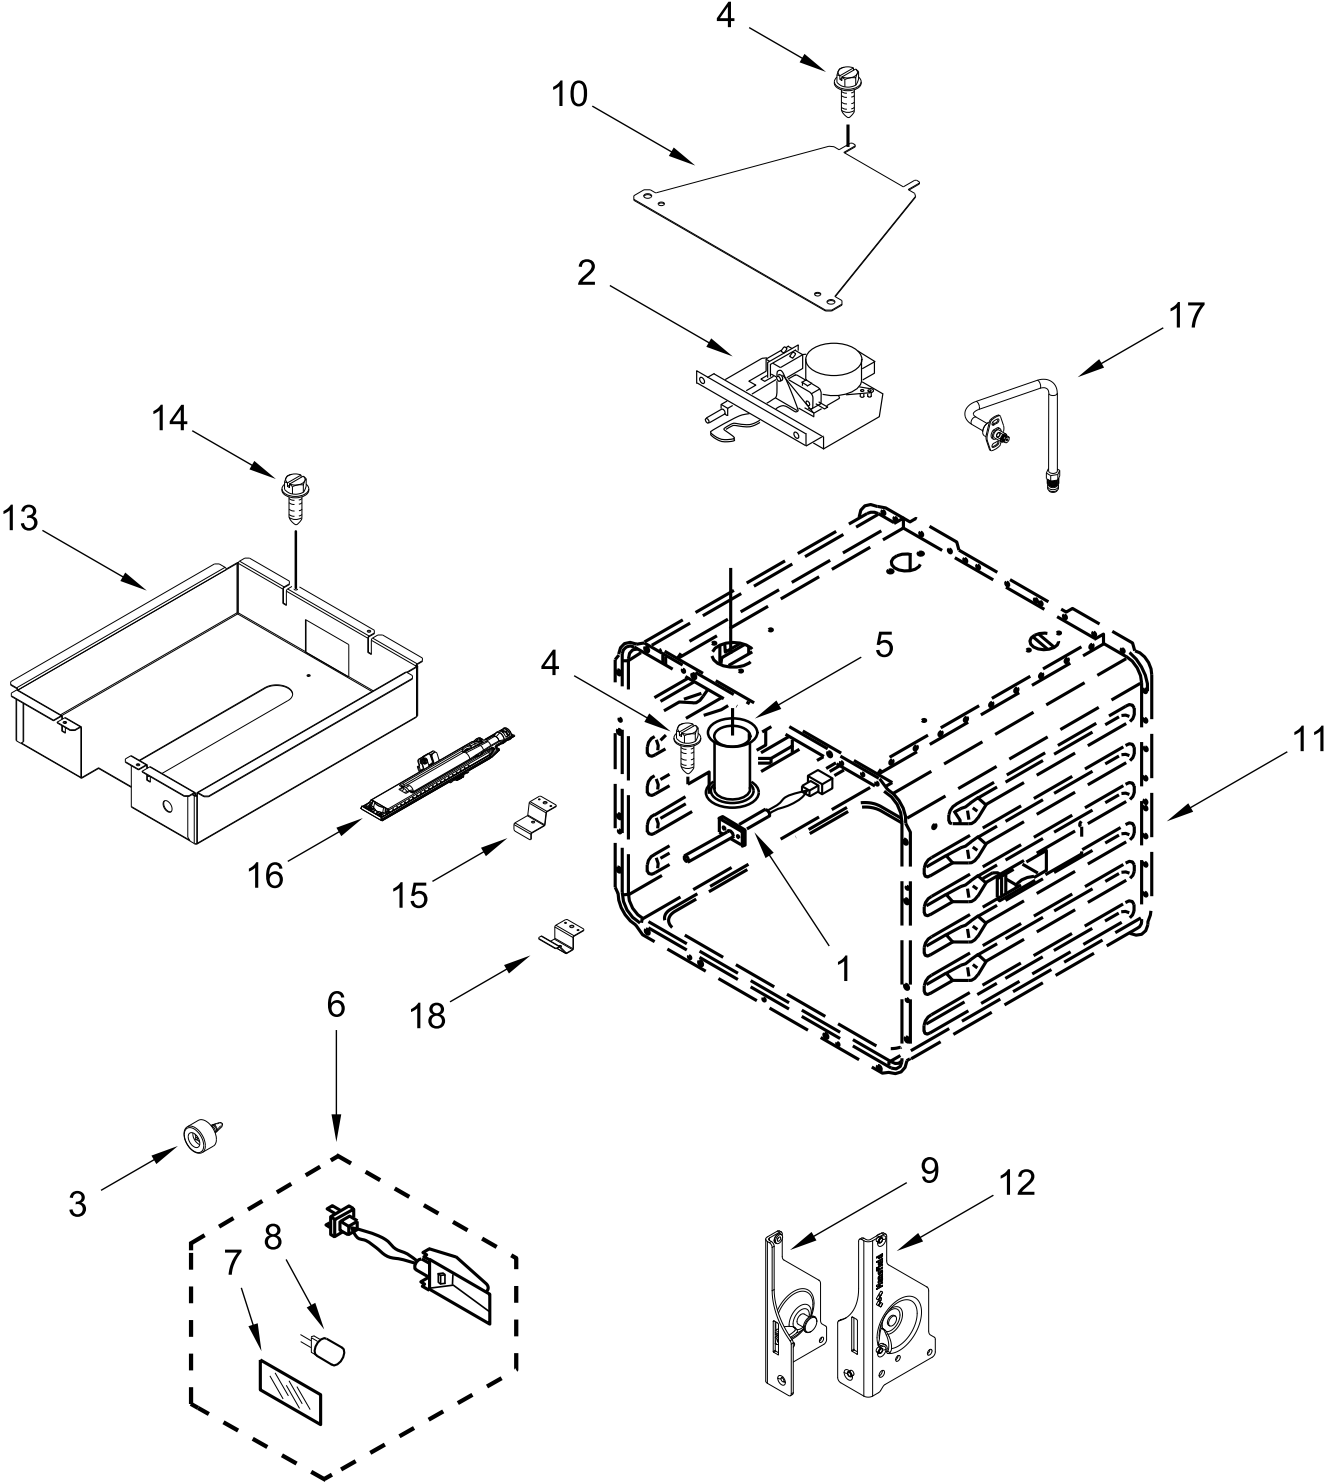

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	18	W10308040	Bracket, Bake Burner
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	13	W10145651	Support, Bake Pan			
4	7101P426-60	Screw	14	12992902	Screw		W10282820	Insulation, Wrap, 18"
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner 18" Cavity		W10299353	Insulation, Back, 18"
6	W11223932	Assembly, Oven Light					W10299355	Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader		3400968	Nut
8	W10169757	Bulb, Light	17	W10145706	Tube, Bake			
9	W11096294	Receiver, Hinge (Left)						
10	W10160858	Cover, Latch						
11		Liner, Oven (Not Serviced)						


VENTING PARTS

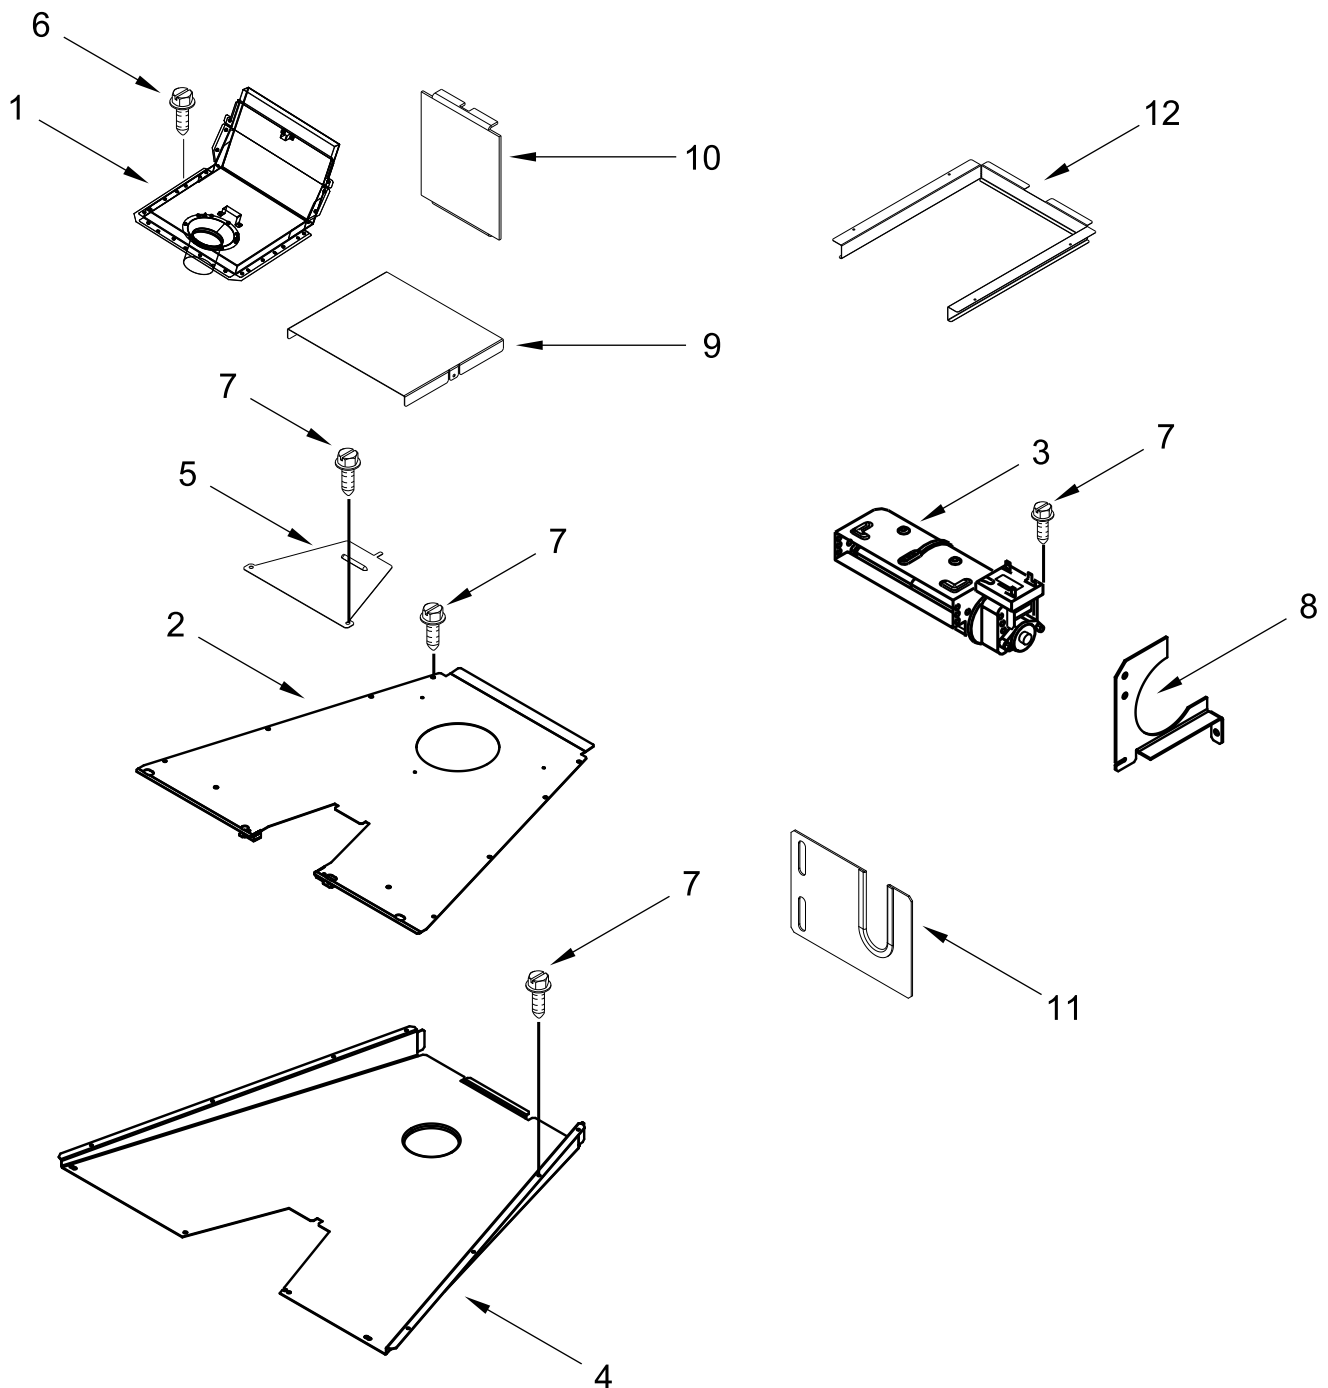

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	9	W10246086	Retainer, Insulation
	W10340583	Vent, Chimney Box (18")		W11113377	Vent, Cooling Bottom (18")	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18")	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30")
3	W11200129	Blower	7	7101P426-60	Screw		W10145364	Duct, Primary Air (18")
			8	W11047754	Bracket, Blower Mount			


30" OVEN DOOR PARTS

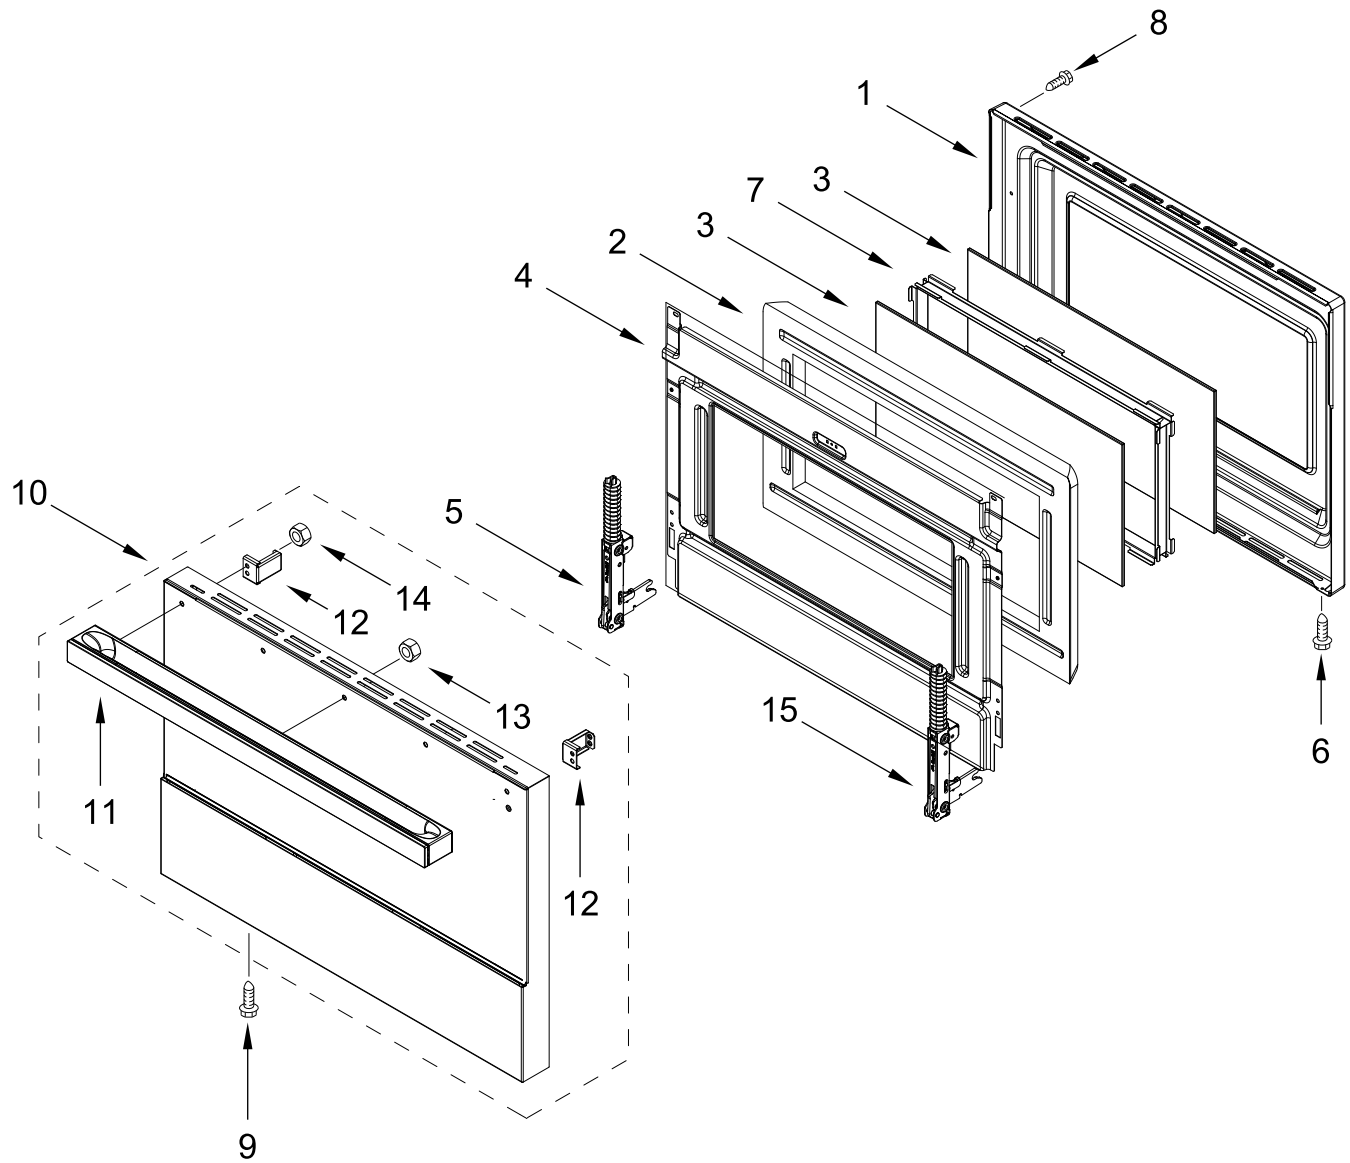

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	8	W10284411	Screw with Washer	13	W11198435	Nut
2	W10321285	Insulation, Door	9	W10162096	Screw	14	999299	Nut
3	W11184409	Glass, Inner	10	W10870221	Assembly, Outer Door Glass (Includes Handle)	15	W11096979	Hinge, Door (Right)
4	W11194821	Retainer, Glass						
5	W11096980	Hinge, Door (Left)	11	W11125541	Handle, Door			
6	W10607120	Screw	12	W11194816	Bracket, Handle			
7	W10272594	Frame, Glass						


18" OVEN DOOR PARTS

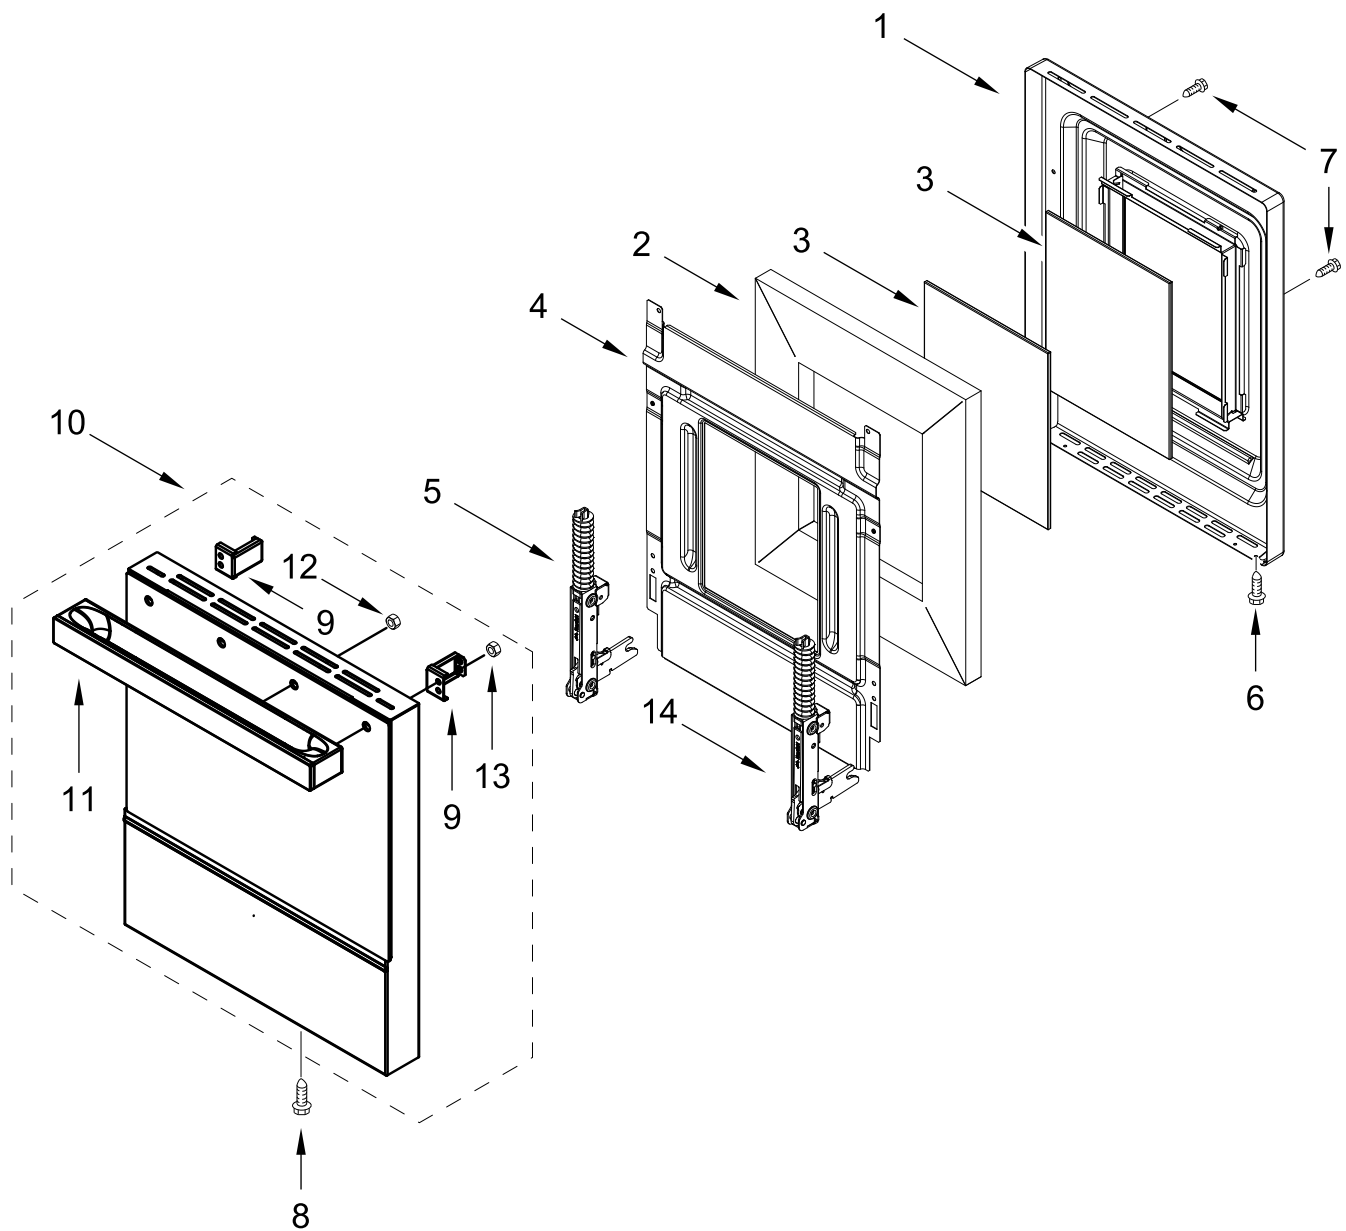

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10284411	Screw with Washer	11	W11125539	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W11198435	Nut
3	W11036789	Glass, Inner	9	W11194816	Bracket, Handle	13	999299	Nut
4	W11194818	Retainer, Glass	10	W10870212	Assembly, Outer Door Glass (Includes Handle)	14	W11096981	Hinge, Door (Right)
5	W11096982	Hinge, Door (Left)						
6	W10607120	Screw						


30" INTERNAL OVEN PARTS

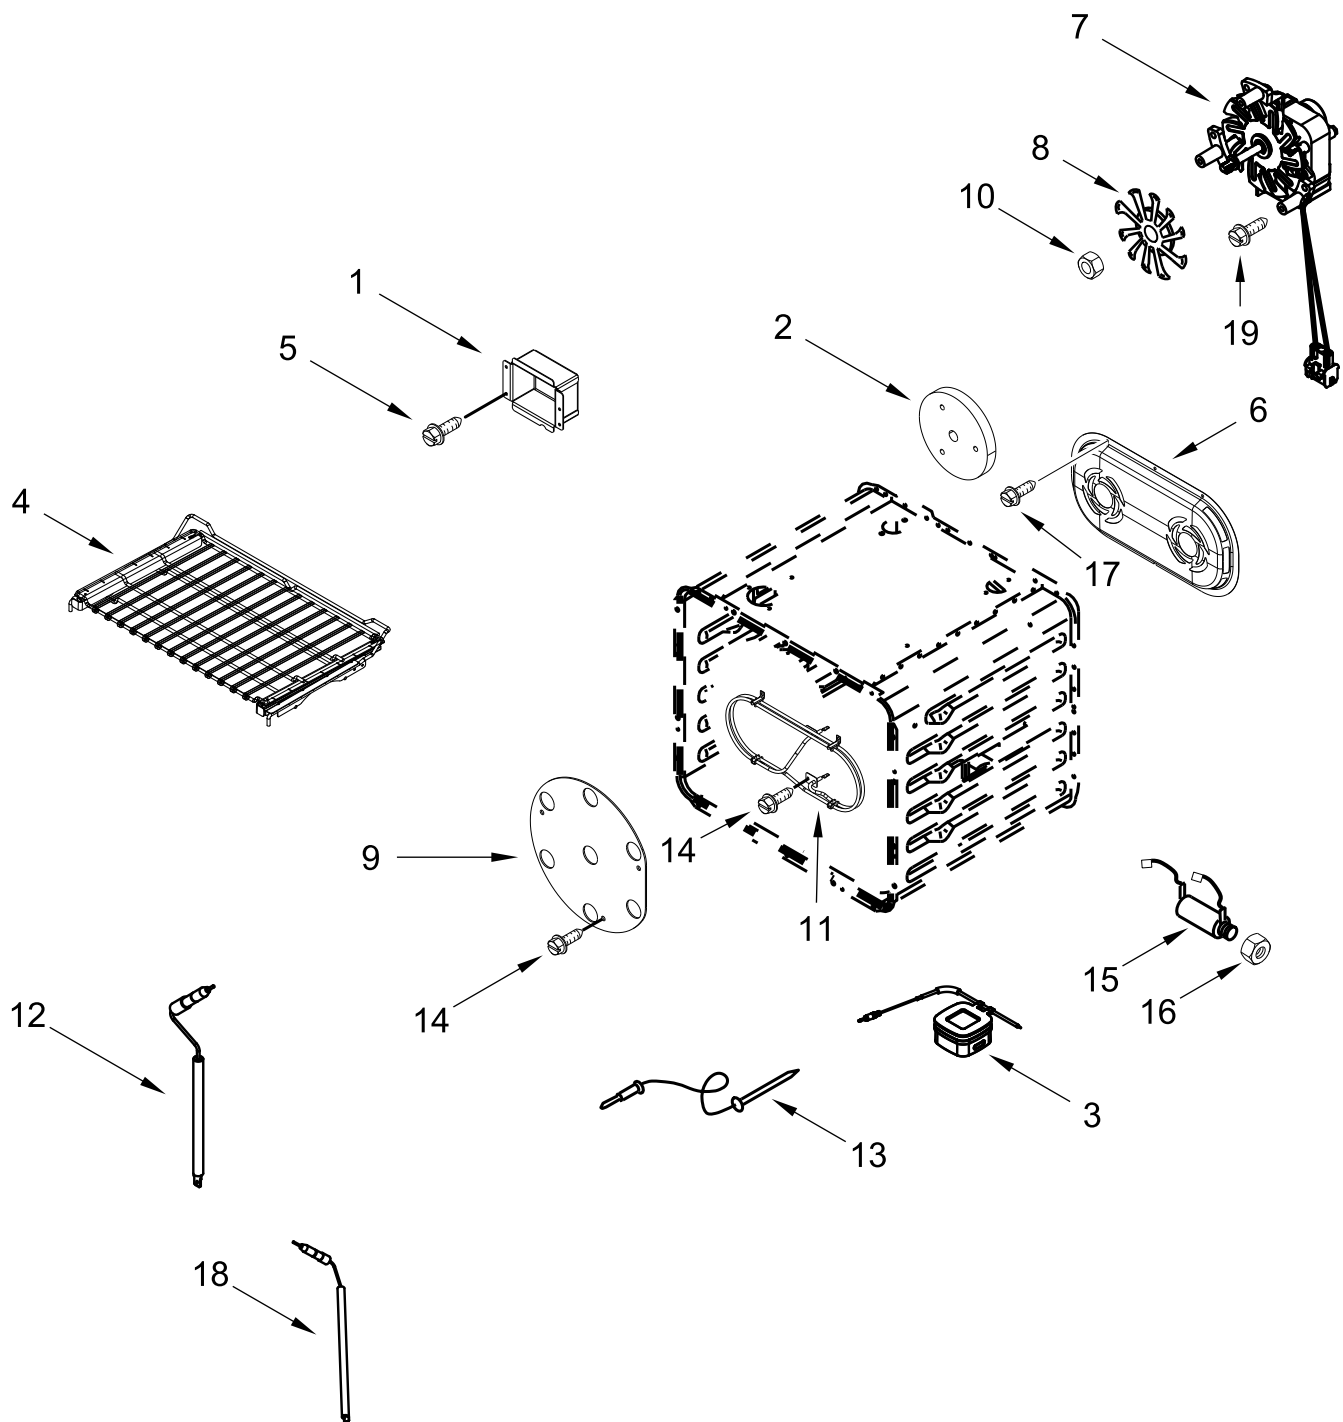

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11111342	Rack, Oven (Sliding)	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	W10720084	Screw
			13	9755542	Probe, Temperature			

18" INTERNAL OVEN PARTS

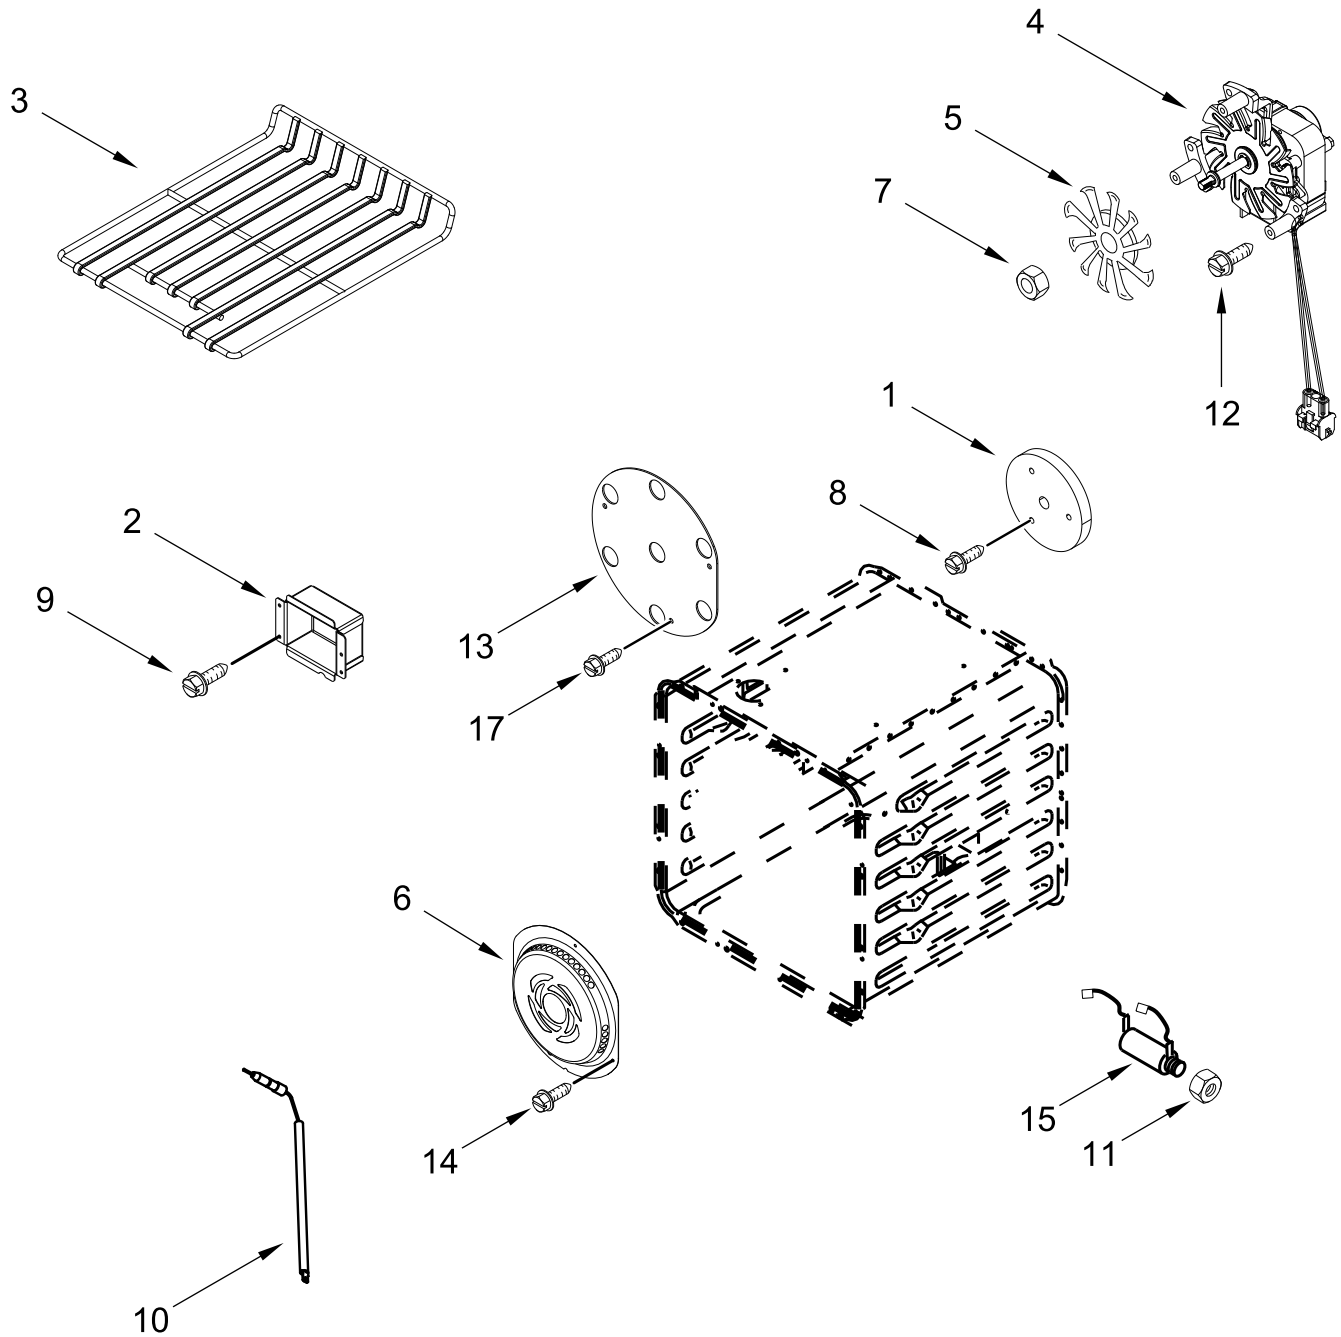

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake
2	W10308051	Box, Broil	6	W11113808	Cover, Fan	11	W11033111	Nut, Locking
3	W11111351	Rack, Oven (18")	7	W10631504	Nut, Acorn (LH)	12	W10720084	Screw
4	W10631506	Motor, Convection	8	4449154	Screw	13	W10261523	Plate, Fan
			9	7101P434-60	Screw	14	W10739592	Screw
						15	9755543	Jack, Meat Probe

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill