




RISE 36" PROFESSIONAL-STYLE GAS RANGE
Includes Infrared Grill

MODELS:

JGRP636HL00 (Stainless)


BURNER BOX AND GRILL PARTS

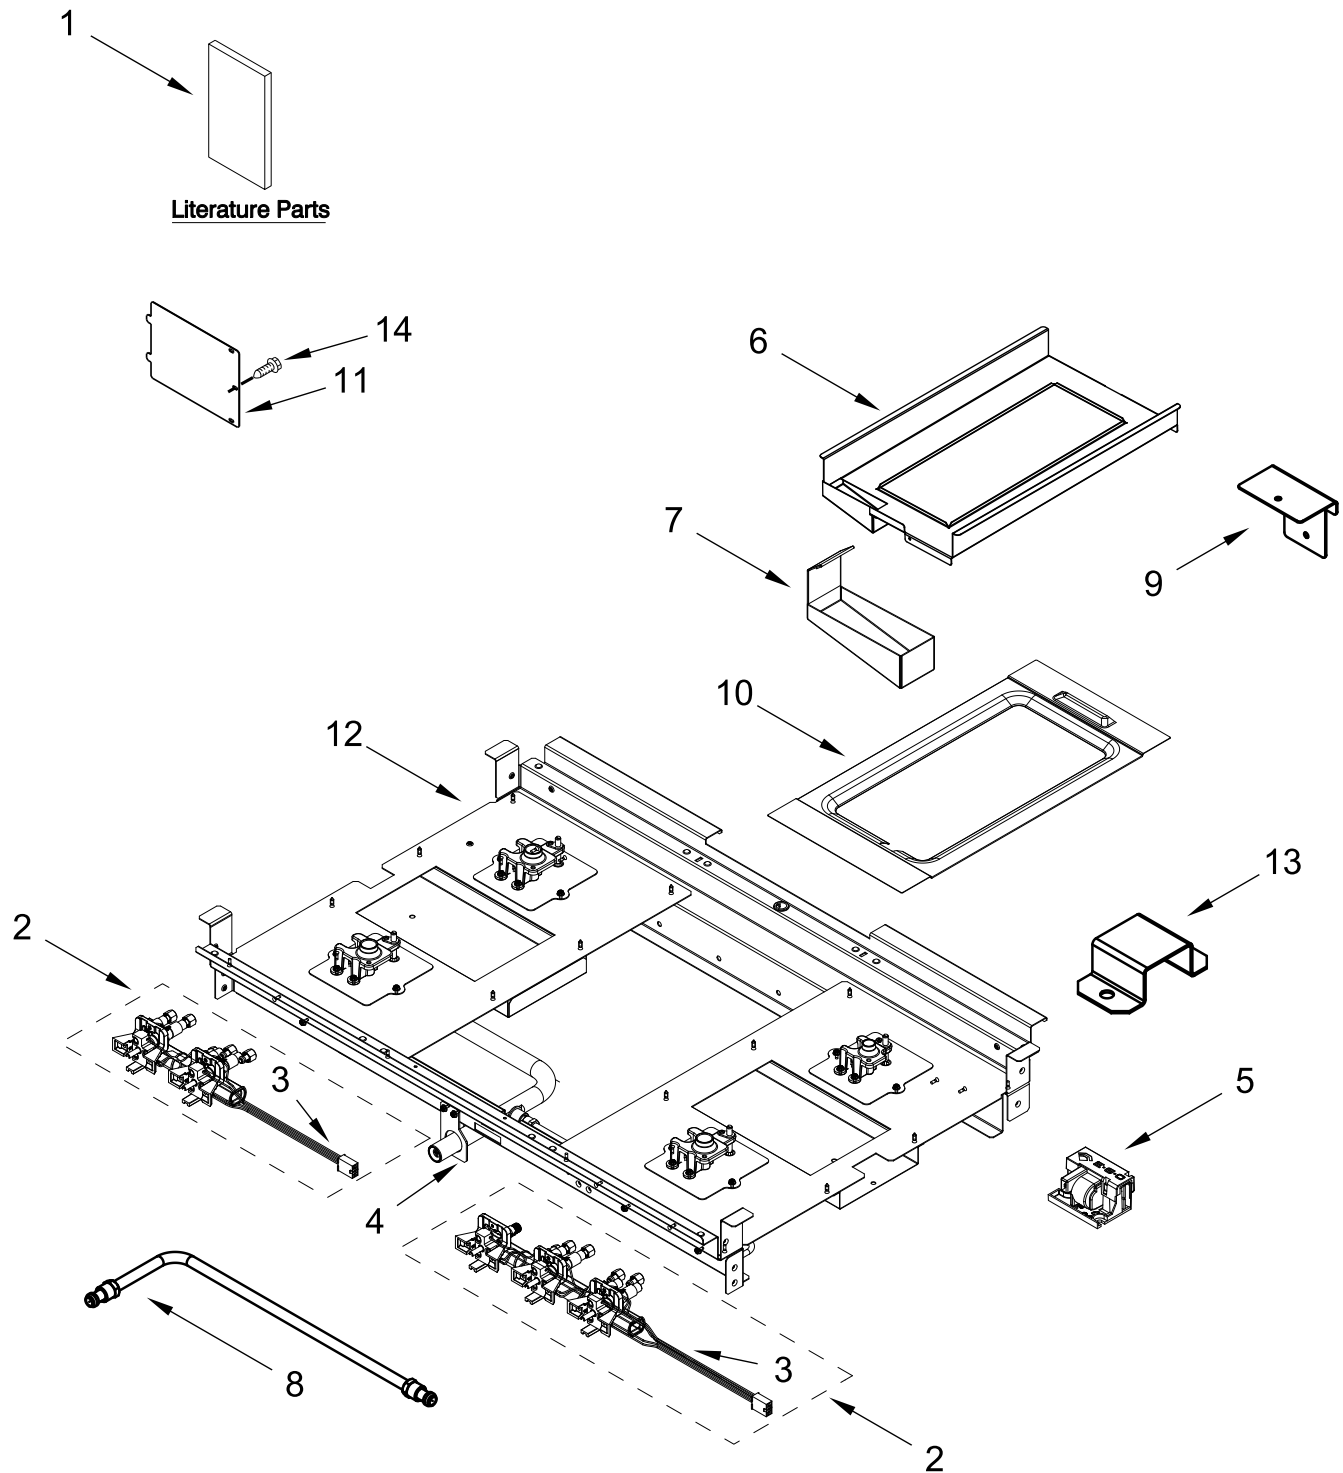

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106300	Switch, Harness (Left Front and Left Rear)	13	W11174418	Bracket, Grill Orifice Holder
	W11177275	Guide, Use and Care				14	7101P426-60	Screw
	W11177278	Instructions, Installation		W11106302	Switch, Harness (Grill, Right Front, Right Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11184746	Guide, Internet Connectivity					W11200310	Harness, Main (36")
	W11202371	Diagram, Wiring (Oven)	4	W11121194	Bracket, Manifold		W11212328	Harness, Cooktop
	W11202275	Sheet, Tech	5	W11121317	Module, Spark		W10780278	Harness, Door Lock
	W11177312	Guide, Quick Start	6	W11120957	Capture, Grill Grease		W11200325	Harness, Communication
2	W10893053	Assembly, Valve Manifold (Left Front and Left Rear)	7	W11174414	Tray, Grill Drip		W11242785	Harness, WIFI
			8	W10892370	Tube, Manifold Supply (Left)		W10624584	Cord, Power
	W10893077	Assembly, Valve Manifold (Grill, Right Front, Right Rear)		W10892417	Tube, Manifold Supply (Right)		4450800	Screw, Grounding
			9	W11285353	Bracket, Grill Grease Capture		W10253333	Bracket, Anti-Tip
			10	W11120965	Deflector, Grill Heat		7101P485-60	Screw, Anti-Tip Kit
			11	W10115843	Cover, Ignition		W11238041	Kit, LP Conversion
			12		Box, Burner (Not Serviced)		W11311196	Ignitor Wire, Wire-Electrode Bake
							W11311197	Ignitor Wire, Wire-Electrode Broil


COOKTOP, BURNER, AND GRILL PARTS

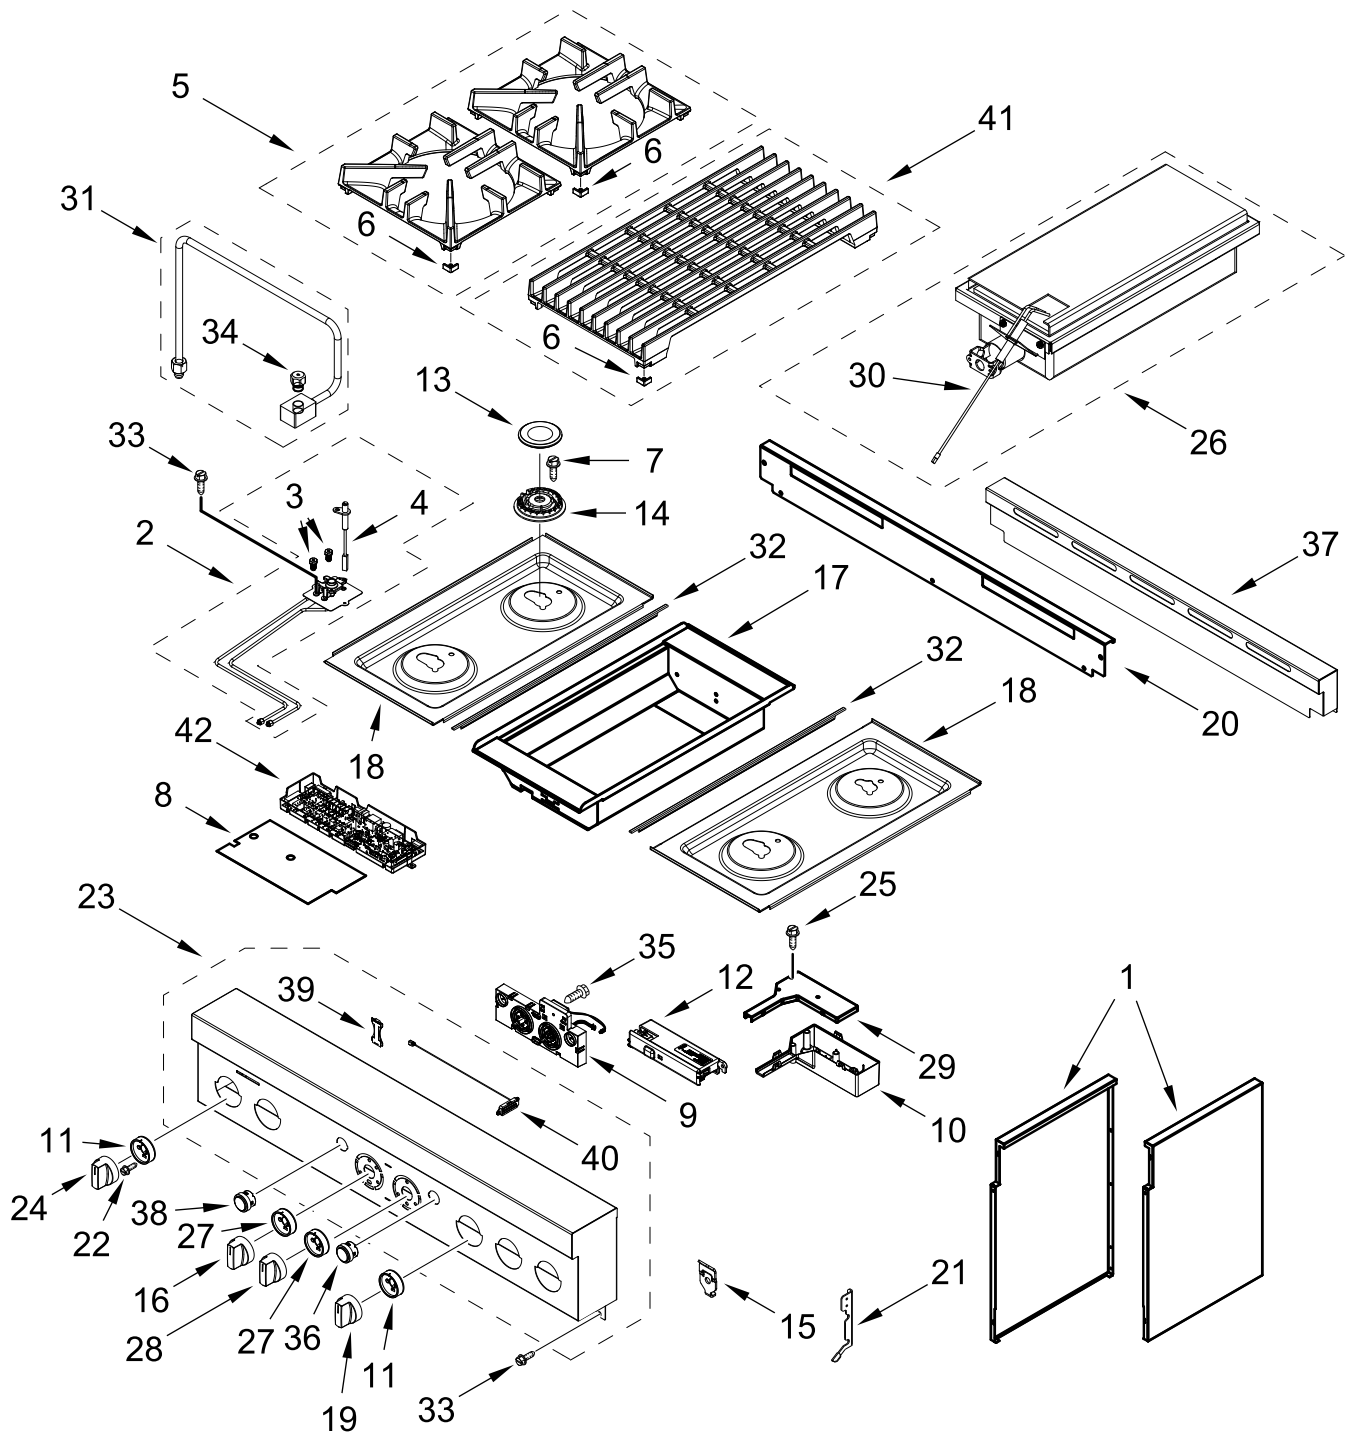

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	6	W11042504	Bumper, Grate	23	W11253773	Panel, Console
	W11106880	Panel, Cabinet Side (Right)	7	W11323260	Screw	24		Knob, Burner (For 4 Cooktop Burners)
2	W10892793	Assembly, Orifice Holder (Left Front)	8	W11281269	Barrier, Appliance Manager		W10882958	Stainless
	W10892494	Assembly, Orifice Holder (Left Rear)	9	W11095713	Interface, User	25	7101P624-60	Screw
	W10892475	Assembly, Orifice Holder (Right Front)	10	W11205795	Cover, WIFI Outer	26	W11120976	Assembly, Grill Burner
	W10892730	Assembly, Orifice Holder (Right Rear)	11	W11090283	Bezel, Cooktop (For 4 Cooktop Burners and Grill)	27		Bezel, Oven (For 2 Oven Knobs)
3	W10892422	Orifice, Main (17.4K) (Left Front)	12	W11110768	Assembly, WIFI Module		W10914998	Stainless
	W10892418	Orifice, Main (15.4K) (Left Rear and Right Front)	13		Cap, Burner	28		Knob, Oven Temperature
	W10892440	Orifice, Main (7.2K) (Right Rear)		W11121391	Black (Set of 4)		W10891871	Stainless
	W10892435	Orifice, Simmer (2.6K) (Left Front, Left Rear, Right Front)	14	W10891987	Spreader, Flame (High) (Left Front, Left Rear, Right Front)	29	W11205794	Cover, WIFI Inner
	W10892429	Orifice, Simmer (2.0K) (Right Rear)		W10892022	Spreader, Flame (Low) (Right Rear)	30	W11174598	Electrode, Grill
4	W11238757	Igniter (Left Front, Left Rear, Right Front)	15	W11036559	Spring Clip, Range	31	W11197931	Assembly, Grill Orifice Holder (Center)
	W11238756	Igniter (Right Rear)	16		Knob, Oven Mode	32	W10291193	Trim, L-Strip
5		Assembly, Grate		W11092267	Stainless	33	7101P426-60	Screw
	W11179862	Black (Set of 2) (Right)	17	W11174429	Assembly, Grill Box	34	W10892423	Orifice, Grill (18K) (Center)
			18		Panel, Cooktop	35	3400814	Screw
				W10803515	Black (Left)	36	W11090650	Button Assembly, Oven Start
				W10804371	Black (Right)	37	W11183086	Trim, Island
			19		Knob, Grill	38	W11090651	Button Assembly, Oven Light
				W10894925	Stainless	39	W10896369	Assembly, Light Pipe
			20	W10323250	Insert, Island Trim	40	W11130078	Antenna, WIFI
			21	W10130760	Bracket, Moving Console (Left)	41	W11179894	Assembly, Grill Grate
				W10130759	Bracket, Moving Console (Right)	42	W11100275	Manager, Appliance (Powermax)
			22	W10919387	Screw			


CHASSIS PARTS

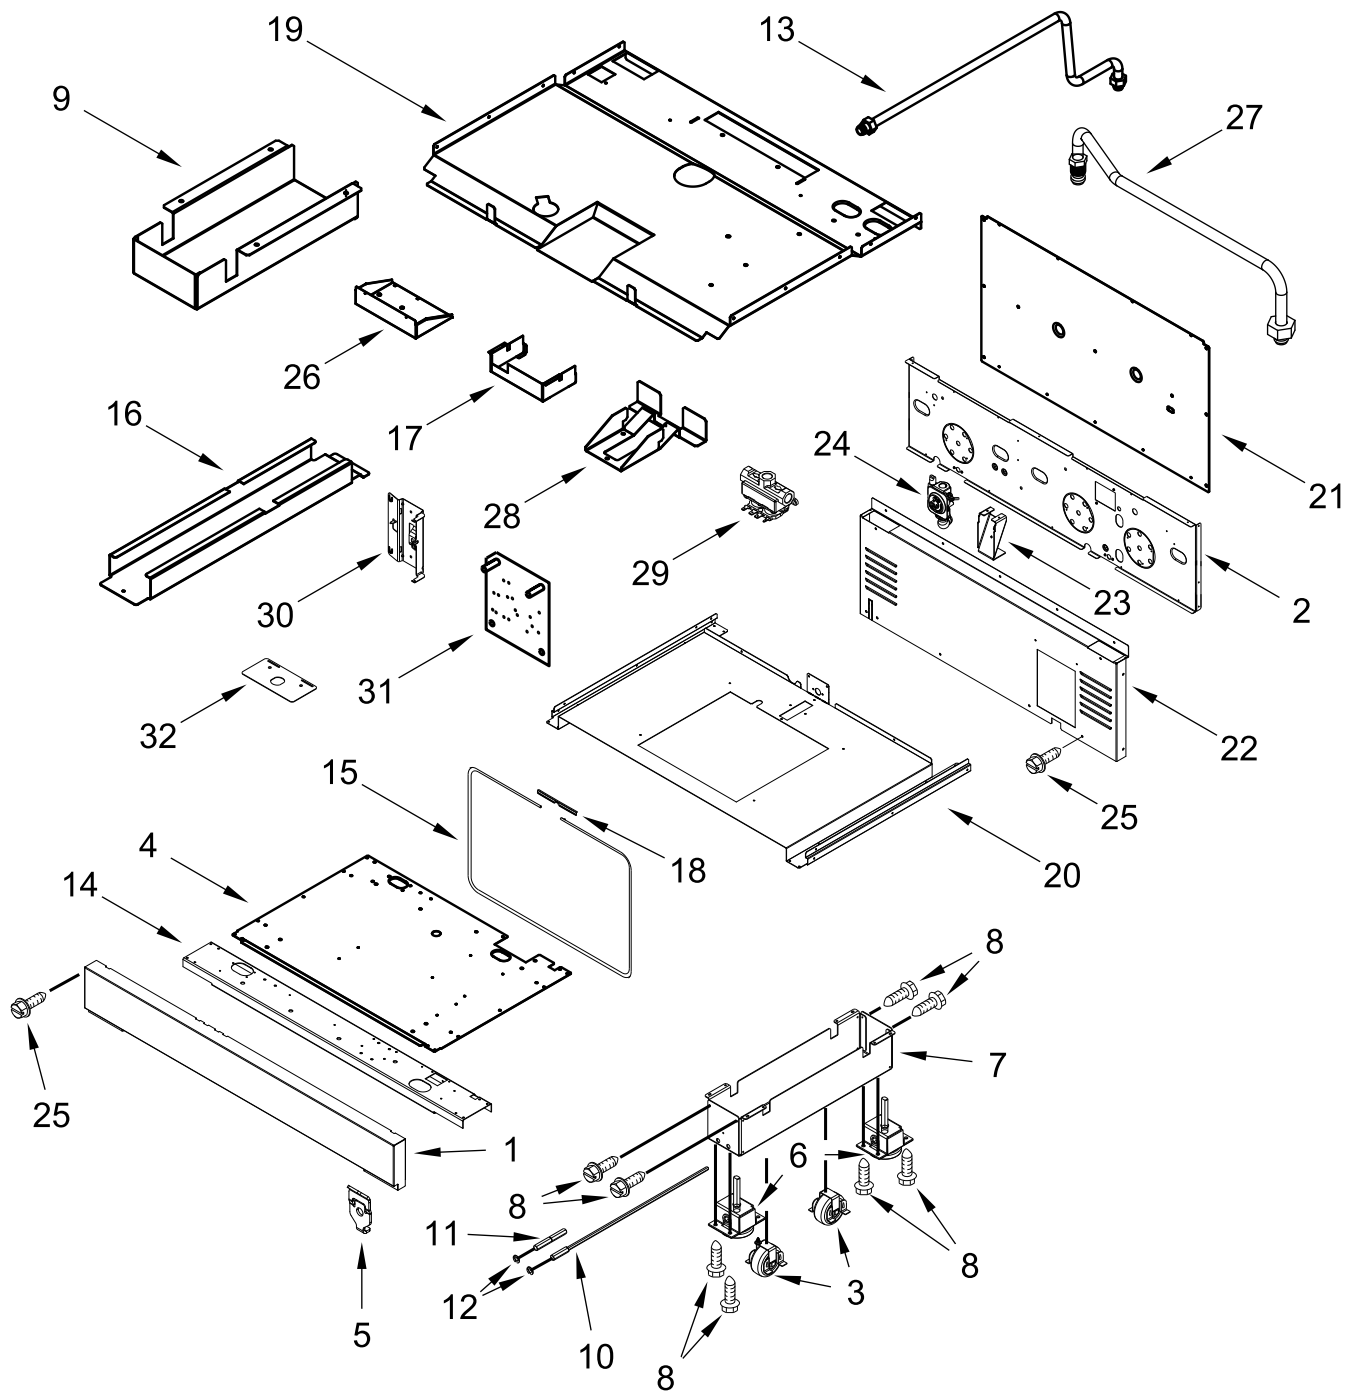

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883794	Kickplate	16	W11050145	Duct-Chassis, Rear	28	W11190223	Bracket, Bake Alignment
2	W11089589	Back, Chassis	17	W11106335	Cabinet, Appliance Manager	29	W10145680	Valve, Dual
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)	30	W10145362	Bracket-Board, DSI
4	W11095572	Duct, Bottom (36")	19	W11037135	Top, Chassis	31	W10511278	Module, Spark DSI
5	W11036559	Spring Clip, Range	20	W11040801	Chassis, Bottom	32	W10115855	Holder, Strain Relief
6	9760860	Leveler	21	W11103333	Panel, Back Top			
7	W10908710	Base, Leveling Leg	22	W11034133	Panel, Back Bottom			
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator			
9	W11084360	Channel, Wire	24	W10896959	Regulator, Pressure			
10	W10115869	Shaft, Long	25	7101P426-60	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	W11107279	Tube, Gas			
13	W11181648	Tube, Pressure Regulator						
14	W11087493	Support, Channel						
15	W11115330	Gasket, Oven (36")						


OVEN PARTS

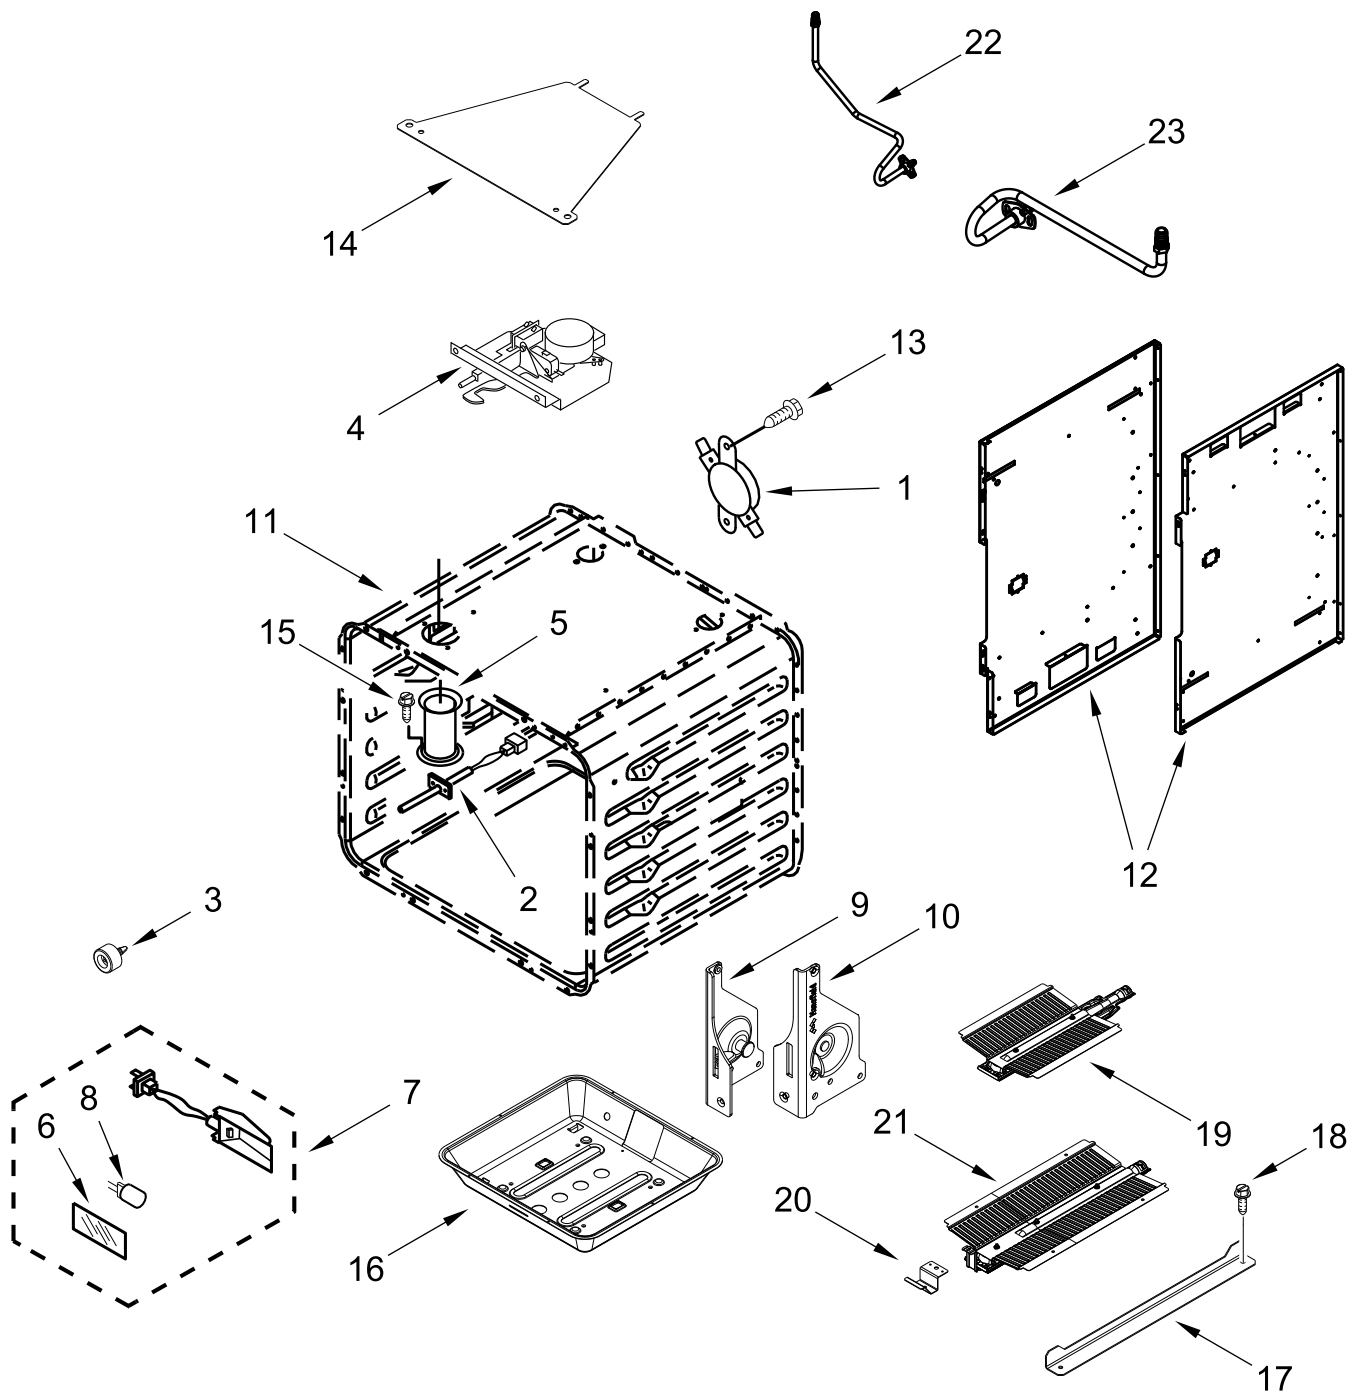

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	11		Liner, Oven (Not Serviced)	19	W10878504	Burner, Bake
2	W10622170	Probe, Sensor				20	W10308040	Bracket, Bake Burner
3	W10351278	Bumper & Screw	12	W11102297	Chassis, Side (Left)	21	W10311335	Burner, Broil
4	W10830016	Latch, Motorized		W11102296	Chassis, Side (Right)	22	W11109238	Tube, Broil
5	W10145743	Tube, Vent				23	W11106980	Tube, Bake
6	W10169756	Lens, Light	13	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
7	W11223932	Assembly, Oven Light	14	W10160858	Cover, Latch			
8	W10169757	Bulb, Light	15	3196176	Screw		W10282811	Insulation, Wrap
9	W11096294	Receiver, Hinge (Left)	16	W10145744	Support, Bake Pan		W10299351	Insulation, Back
10	W11096293	Receiver, Hinge (Right)	17	W10317437	Bracket, Broil Standoff		W10299356	Insulation, Bottom
			18	7101P434-60	Screw		3400968	Nut


VENTING PARTS

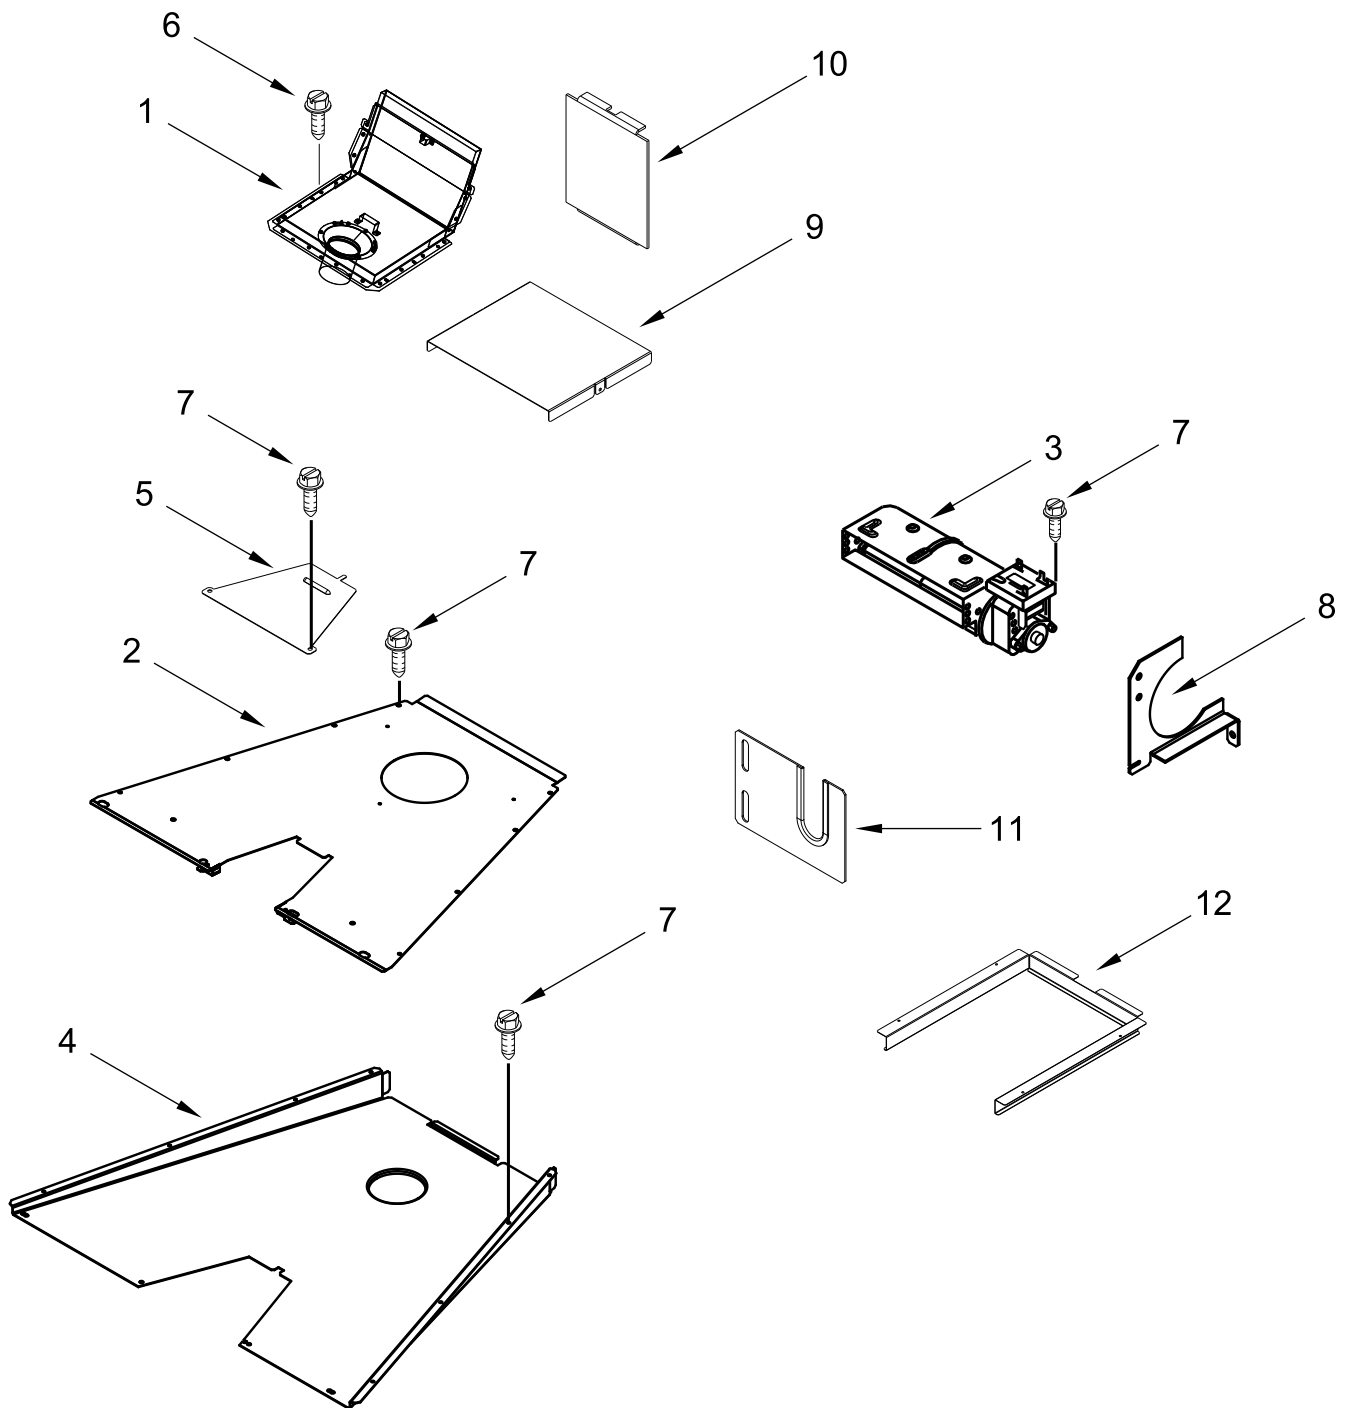

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	9	W10246086	Retainer, Insulation
3	W11200129	Blower	6	3400805	Screw (Zinc)	10	W10246087	Insulation, Chimney
			7	7101P426-60	Screw	11	W11106956	Cover, Channel
						12	W10145363	Duct, Primary Air (30")


OVEN DOOR PARTS

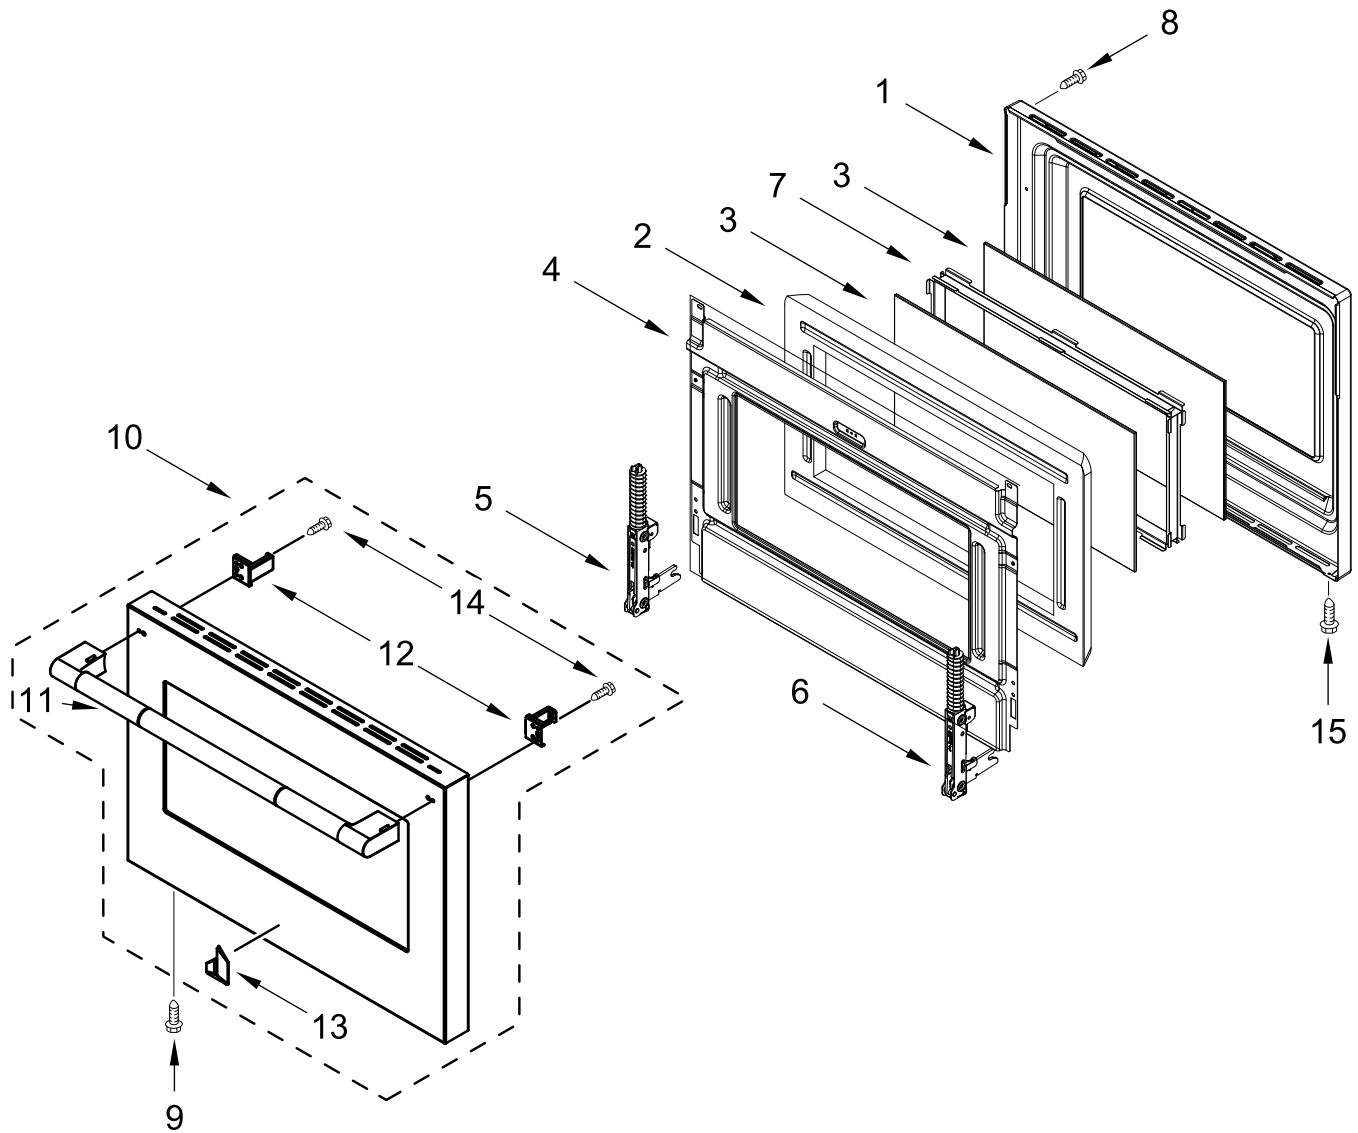

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	8	W10292297	Screw	13		Badge
2	W10884823	Insulation, Door	9	W10162096	Screw		W11238656	Stainless
3	W11036791	Glass, Inner	10	W10799310	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
4	W11194820	Retainer, Glass				15	W10607120	Screw
5	W11096978	Hinge, Door (Left)	11	W11102828	Handle, Door			
6	W11096977	Hinge, Door (Right)	12	W11197830	Bracket, Handle			
7	W11194814	Frame, Glass						

INTERNAL OVEN PARTS

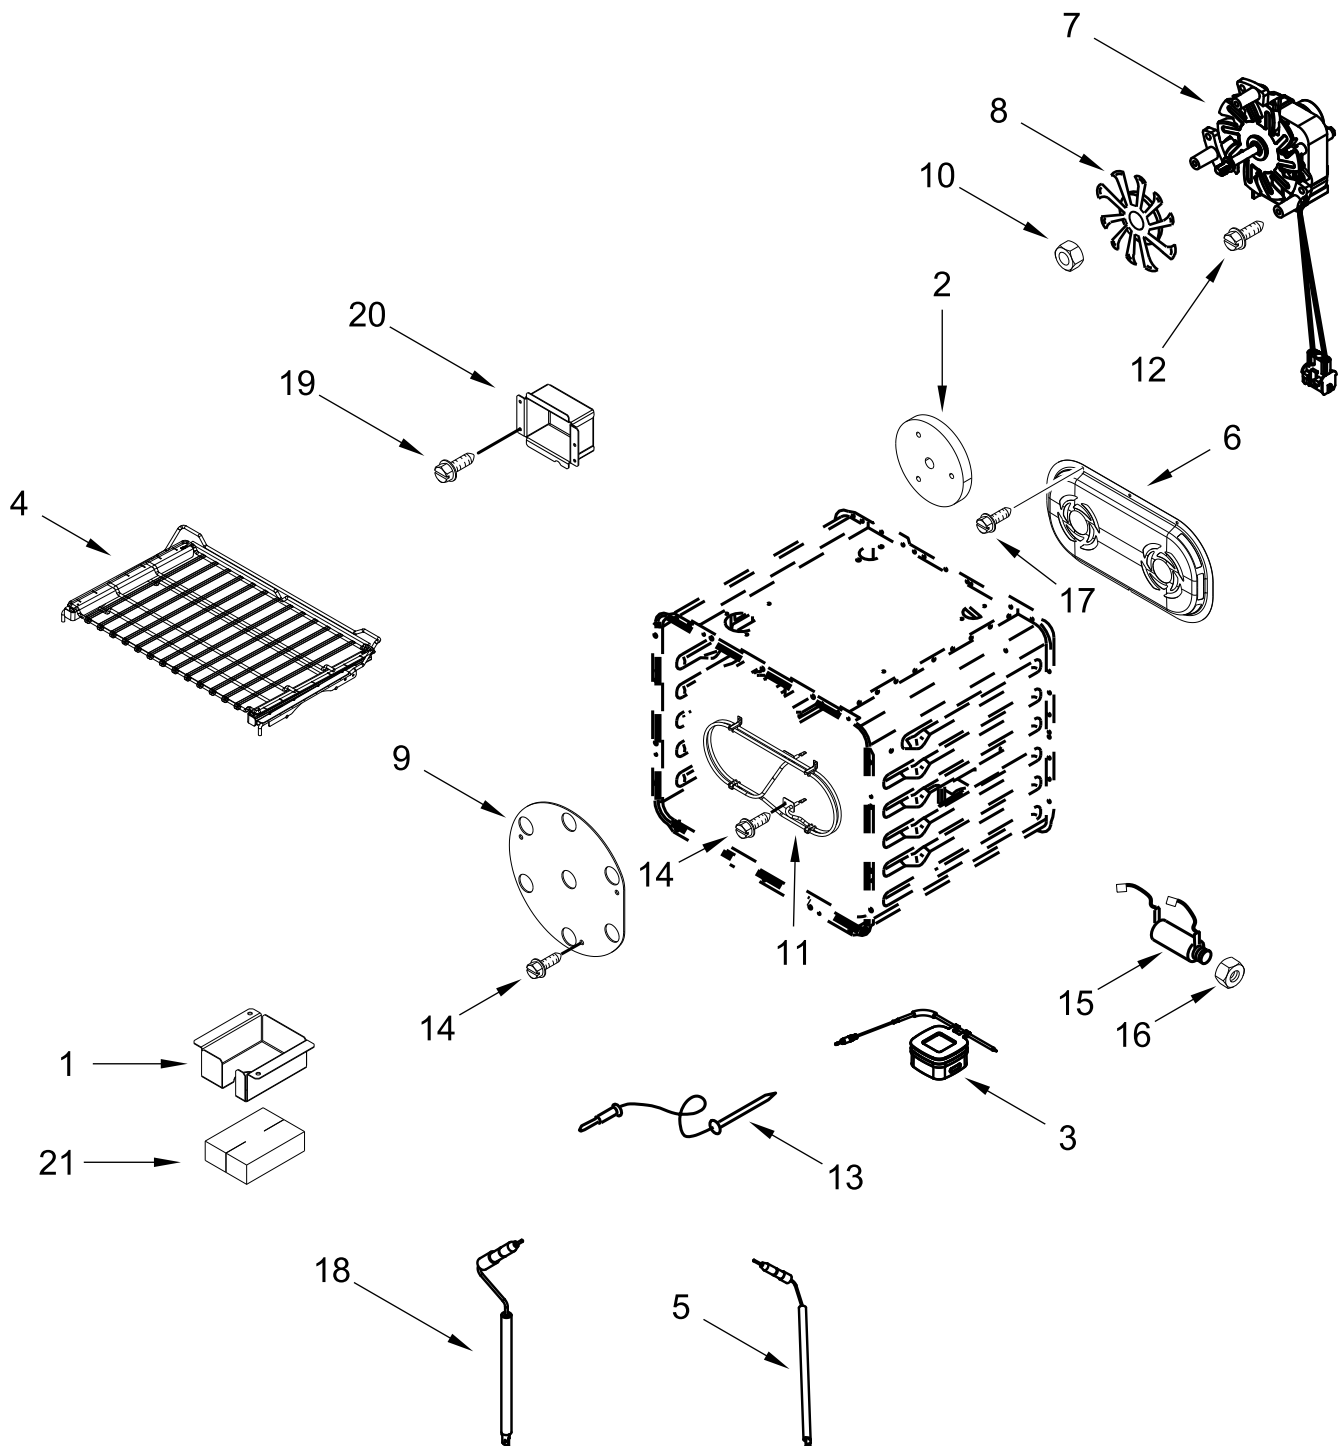

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10310985	Cover, Broil	9	W10261523	Plate, Fan	19	7101P434-60	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	20	W10308051	Box, Broil
3	W11186918	Probe, Wireless Meat	11	W10145949	Element, Convection	21	W10311009	Insulation, Broil Cover
4	W11111356	Rack, Oven (Sliding)	12	W10720084	Screw			
5	W11205400	Electrode, Bake	13	9755542	Probe, Temperature			
6	W11232487	Baffle, Convection	14	4449154	Screw			
7	W10631506	Motor, Convection	15	9755543	Jack, Meat Probe			
8	W11108376	Blade, Fan	16	W11033111	Nut, Locking			
			17	W10739592	Screw			
			18	W11182863	Electrode, Broil			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill