




48" RISE GAS PROFESSIONAL-STYLE RANGE
Includes Infrared Grill

MODELS:

JGRP648HL00 (Stainless)


BURNER BOX AND GRILL PARTS

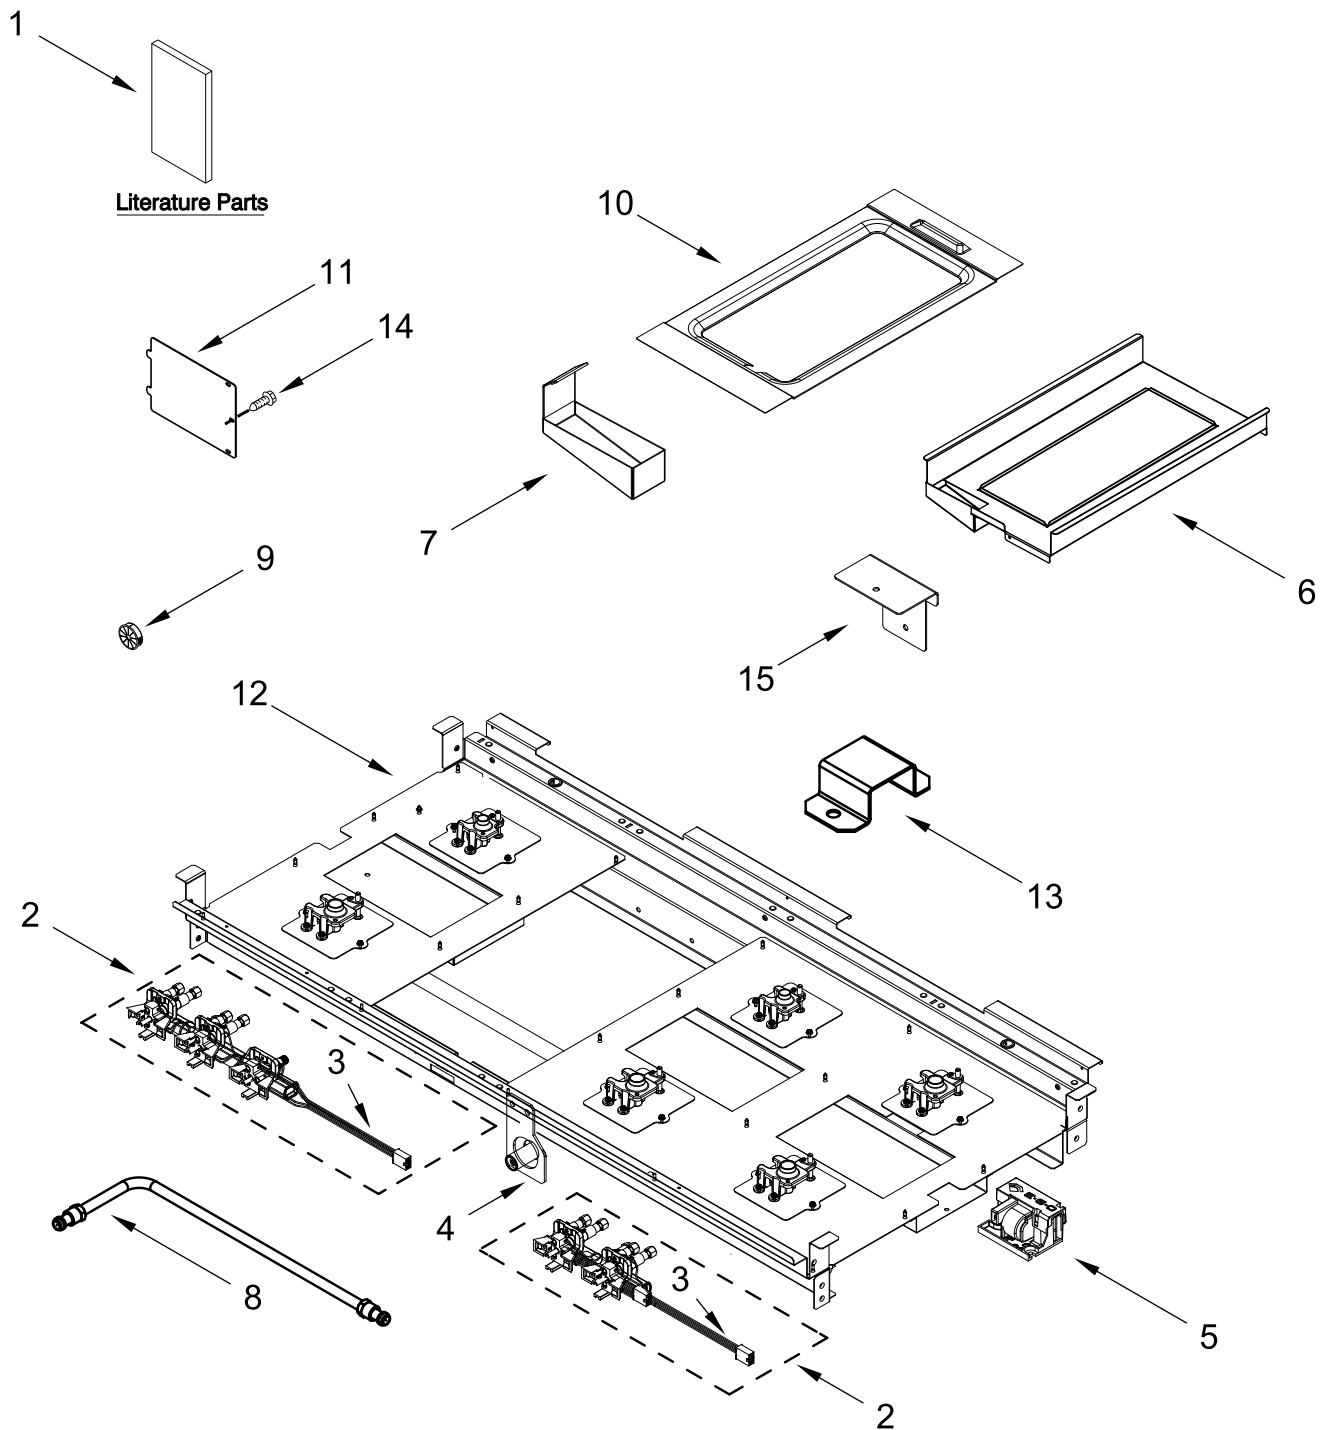

BURNER BOX AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	13	W11174418	Bracket, Grill Orifice Holder
	W11177275	Guide, Use and Care				14	7101P426-60	Screw
	W11177278	Instructions, Installation		W11106300	Switch, Harness (Right Center Front, Right Center Rear, Right Front, Right Rear)	15	W11285353	Bracket, Grill Grease Capture
	W11177312	Guide, Quick Start						FOLLOWING PARTS NOT ILLUSTRATED
	W11184746	Guide, Internet Connectivity						
	W11202375	Diagram, Wiring	4	W11121194	Bracket, Manifold		W11311895	Harness, Main (48")
	W11202275	Sheet, Tech	5	W11121317	Module, Spark		W11200330	Harness, Cooktop
2	W10893054	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	6	W11120957	Capture, Grill Grease		W10780278	Harness, Door Lock
			7	W11174414	Tray, Grill Drip		W11200318	Harness, Communication
	W10893058	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	8	W10892803	Tube, Manifold Supply (Left)		W11242785	Harness, WIFI
				W10892801	Tube, Manifold Supply (Right Center)		W10624584	Cord, Power
				W10892802	Tube, Manifold Supply (Right)		4450800	Screw, Grounding
	W11183722	Assembly, Valve Manifold (Right Front and Right Rear)	9	W10189097	Bushing, Burner Box		W11311196	Ignitor Wire, Wire-Electrode Bake
			10	W11120965	Deflector, Grill Heat		W11311197	Ignitor Wire, Wire-Electrode Broil
			11	W10115843	Cover, Ignition		W10253333	Bracket, Anti-Tip
			12		Box, Burner (Not Serviced)		7101P485-60	Screw, Anti-Tip Kit
							W11238041	Kit, LP Conversion


COOKTOP, BURNER, AND GRILL PARTS

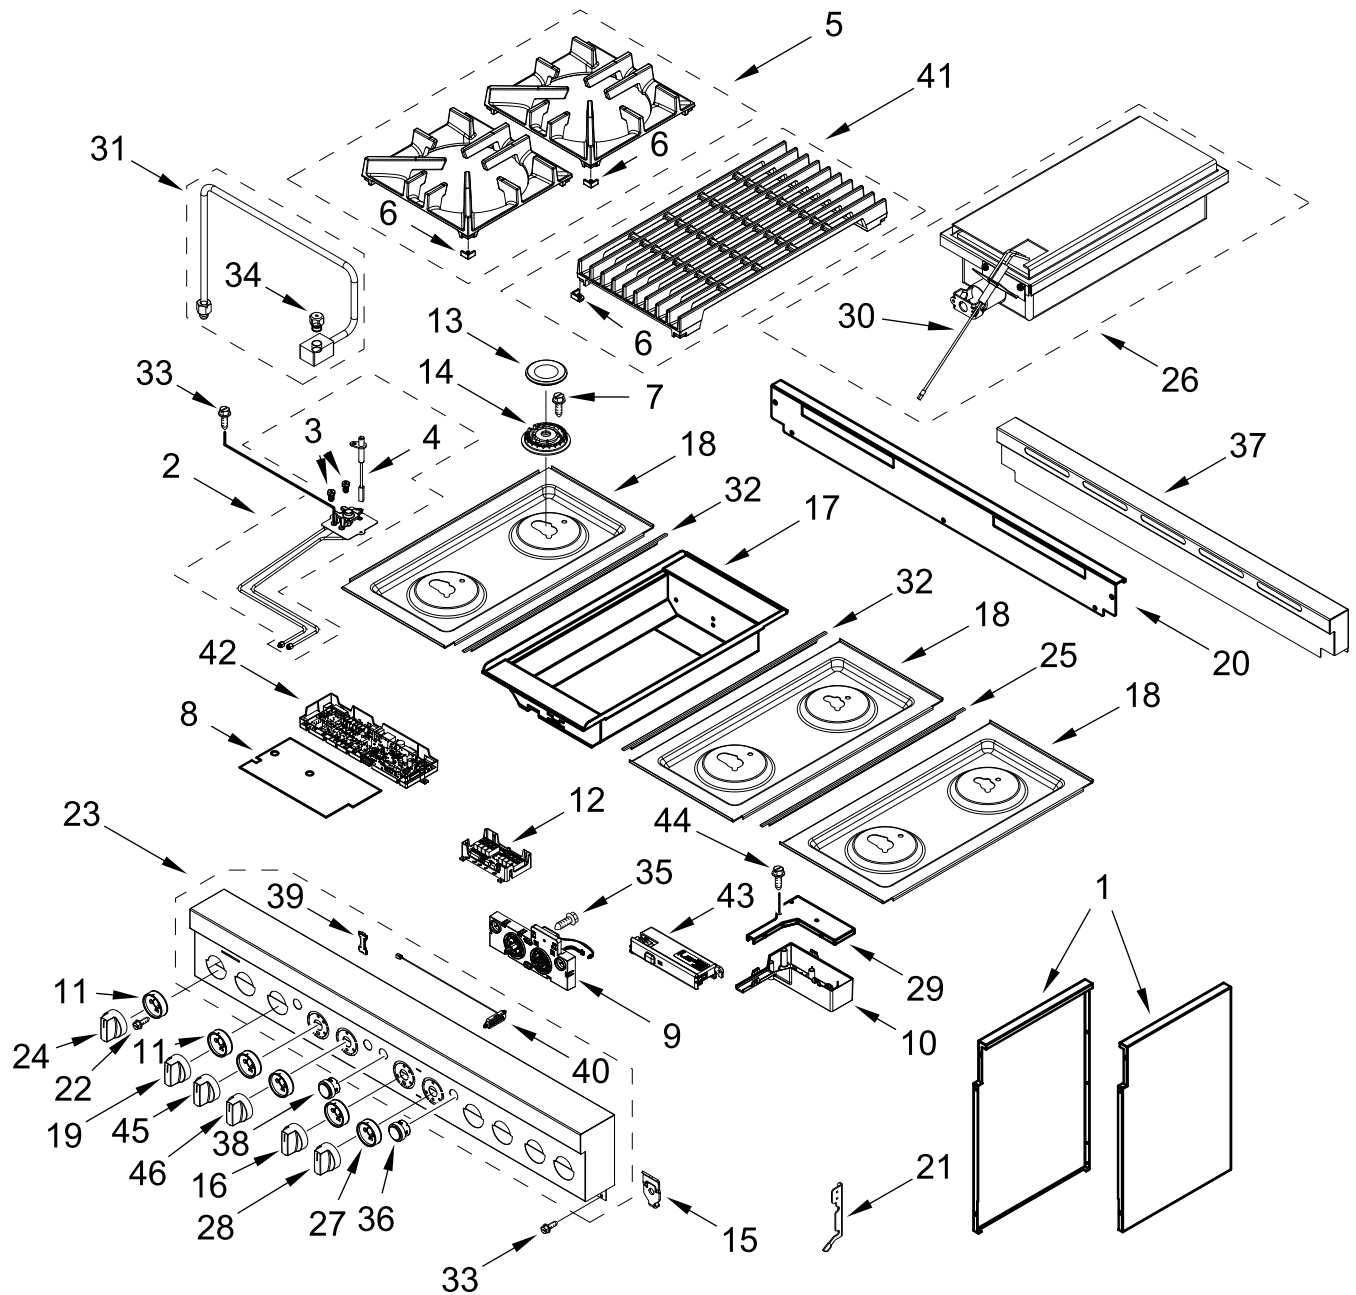

COOKTOP, BURNER, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	6	W11042504	Bumper, Grate	25		Trim, T-Strip
	W11111428	Panel, Cabinet Side (Right)	7	W11323260	Screw		W10271524	Black
2	W10892807	Assembly, Orifice Holder (Left Front)	8	W11281269	Barrier, Appliance Manager	26	W11120976	Assembly, Grill Burner
	W10892495	Assembly, Orifice Holder (Left Rear)	9	W11219188	Interface, User	27		Bezel, Oven (For 4 Oven Knobs)
	W10892471	Assembly, Orifice Holder (Right Center Front)	10	W11205795	Cover, WIFI Outer		W10914998	Stainless Knob, Oven Temperature
	W10892724	Assembly, Orifice Holder (Right Center Rear)	11	W11090283	Bezel, Cooktop (For 6 Cooktop Burners and Grill)	28	W10891871	Stainless (For 30" Oven)
	W10892726	Assembly, Orifice Holder (Right Front)	12	W10871065	Manager, Appliance (Expansion)	29	W11205794	Cover, WIFI Inner
	W10892474	Assembly, Orifice Holder (Right Rear)	13		Cap, Burner	30	W11174598	Electrode, Grill
3	W10892422	Orifice, Main (17.4K) (Left Front and Right Front)	14	W10891987	Spreader, Flame (High)	31	W11197929	Assembly, Grill Orifice Holder (Left Center)
	W10892418	Orifice, Main (15.4K) (Left Rear, Right Center Front, Right Rear)		W10892022	Spreader, Flame (Low) (Right Center Rear)	32	W10291193	Trim, L-Strip
	W10892440	Orifice, Main (7.2K) (Right Center Rear)	15	W11036559	Spring Clip, Range	33	7101P426-60	Screw
	W10892435	Orifice, Simmer (2.6K) (All But Right Center Rear)	16		Knob, Oven Mode	34	W10892423	Orifice, Grill (18K) (Left Center)
	W10892429	Orifice, Simmer (2.0K) (Right Center Rear)		W11092267	Stainless (For 30" Oven)	35	3400814	Screw
4	W11238757	Igniter (All But Right Center Rear)	17	W11174429	Assembly, Grill Box	36	W11090650	Button Assembly, Oven Start
	W11238756	Igniter (Right Center Rear)	18		Panel, Cooktop	37	W11183087	Trim, Island
5		Assembly, Grate		W10803515	Black (Left)	38	W11090651	Button Assembly, Oven Light
	W11179862	Black (Set of 2)		W10803519	Black (Right Center)	39	W10896369	Assembly, Light Pipe
				W10804373	Black (Right)	40	W11130078	Antenna, WIFI
			19		Knob, Grill	41	W11179894	Assembly, Grill Grate
				W10894925	Stainless	42	W11100278	Manager, Appliance (Powermax)
			20	W10323252	Trim, Island Insert	43	W11110768	Assembly, WIFI Module
			21	W10130760	Bracket, Moving Console (Left)	44	7101P624-60	Screw
				W10130759	Bracket, Moving Console (Right)	45	W11263512	Stainless (For 18" Oven)
			22	W10919387	Screw	46		Knob, Oven Temperature
			23	W11253771	Panel, Console		W11263513	Stainless (For 18" Oven)
			24		Knob, Burner (For 6 Cooktop Burners)			
				W10882958	Stainless			


48" CHASSIS PARTS

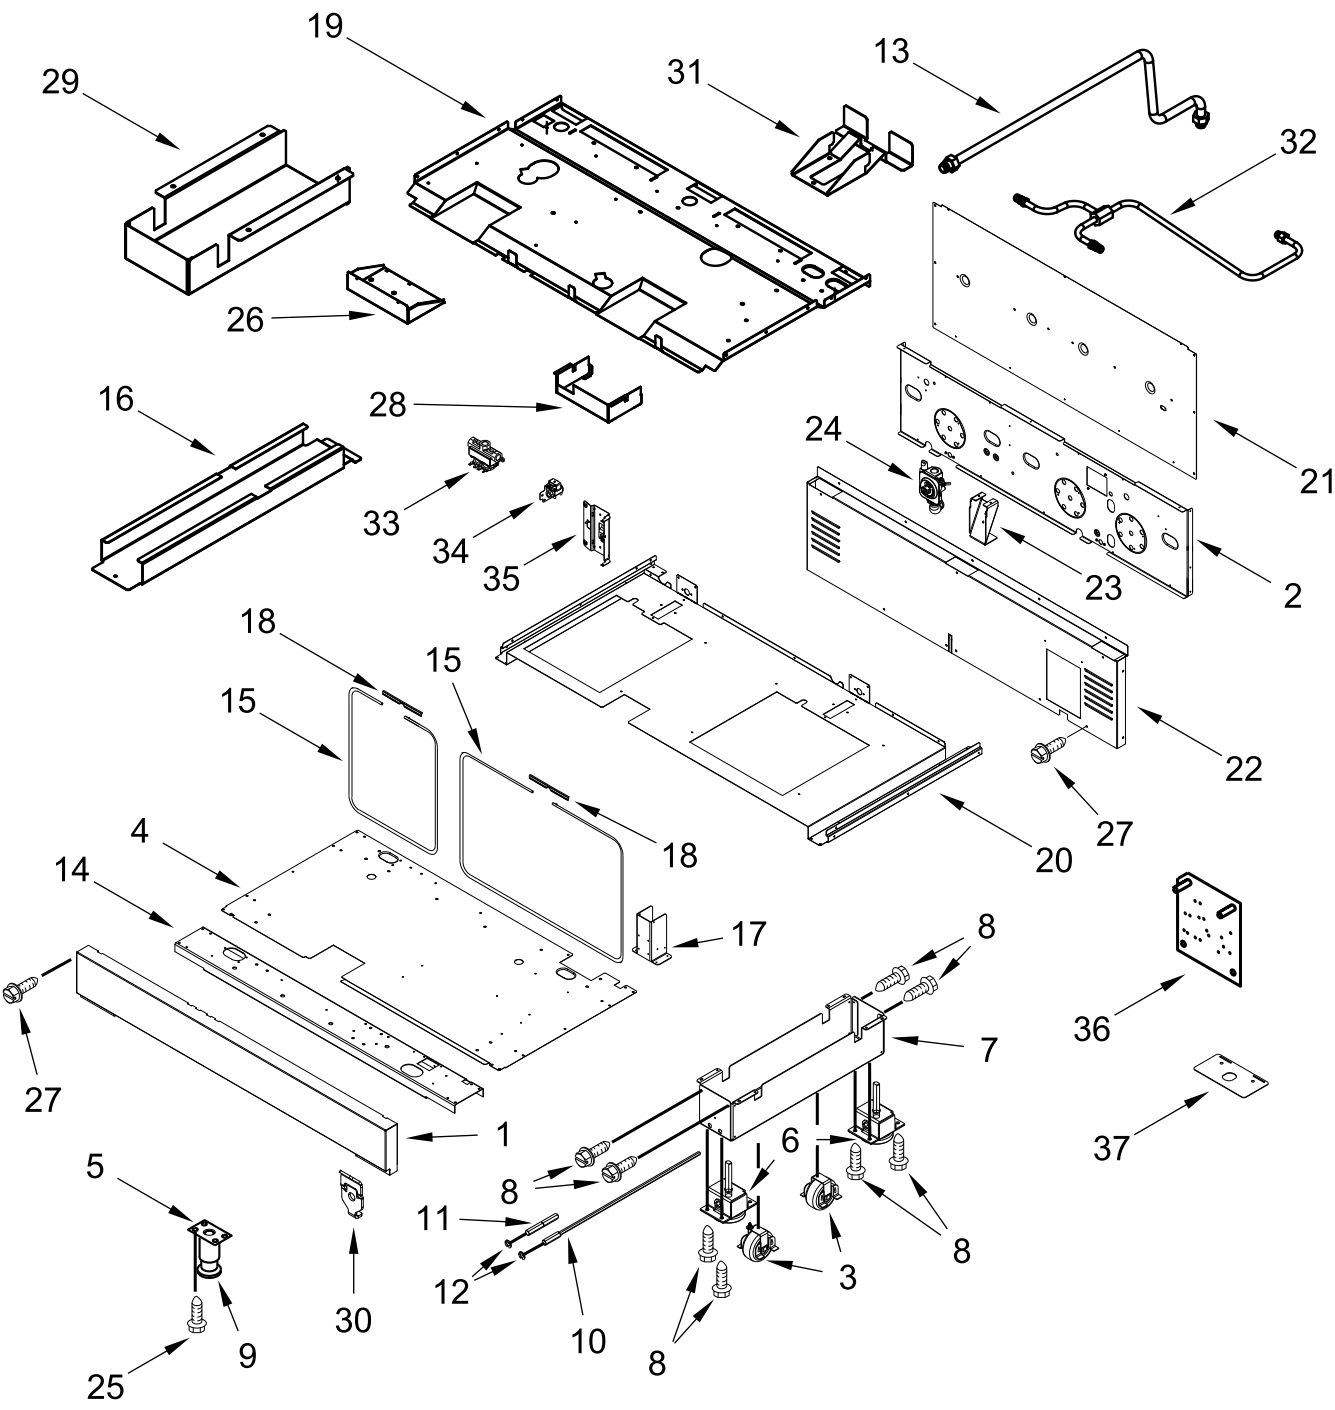

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11084360	Channel, Wire
2	W11105913	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48")	19	W11037132	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11106335	Cabinet, Appliance Manager			
14	W11087494	Support, Channel						
15	W11115328	Gasket, Oven (30")						
	W11115326	Gasket, Oven (18")						


30" OVEN PARTS

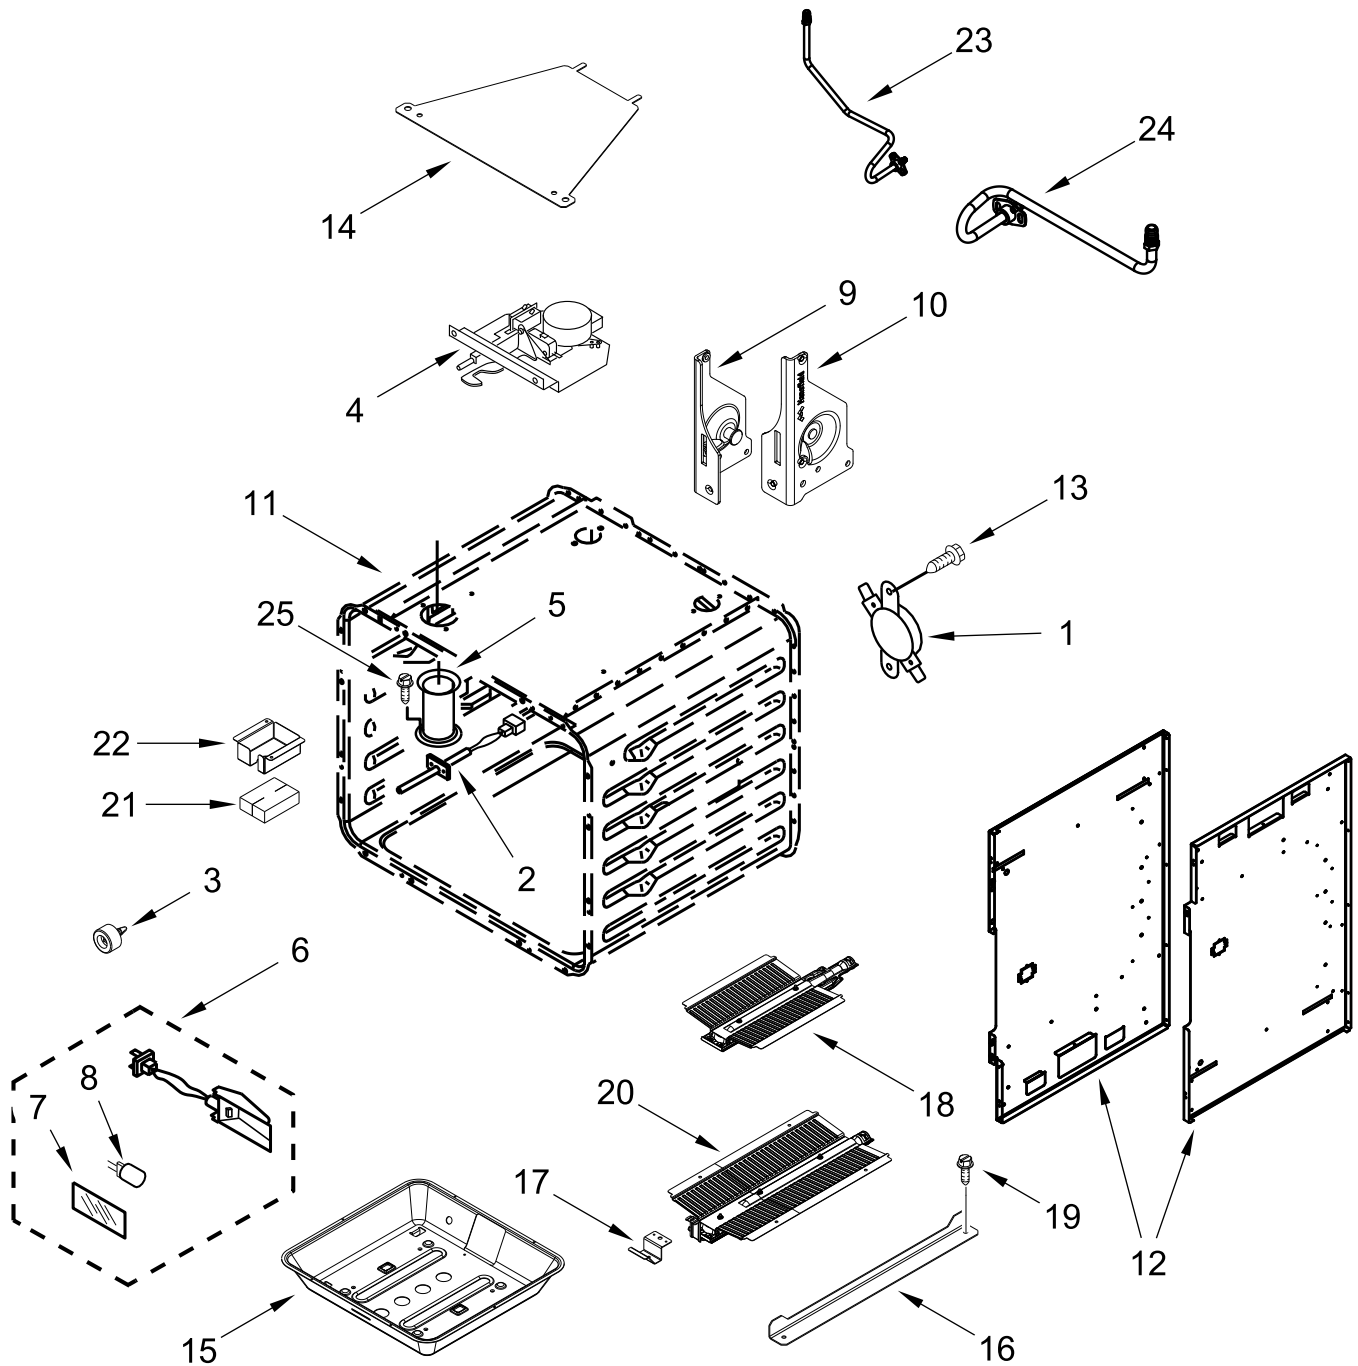

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10310985	Cover, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W11109238	Tube, Broil
3	W10351278	Bumper & Screw				24	W11106980	Tube, Bake
4	W10830016	Latch, Motorized	13	7101P426-60	Screw	25	3196176	Screw
5	W10145743	Tube, Vent	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	15	W10145744	Support, Bake Pan			
7	W10169756	Lens, Light	16	W10317437	Bracket, Broil Standoff	W10282810		Insulation, Wrap, 30"
8	W10169757	Bulb, Light	17	W10308040	Bracket, Bake Burner	W10299350		Insulation, Back, 30"
9	W11096294	Receiver, Hinge (Left)	18	W10878504	Burner, Bake	W10299354		Insulation, Bottom
10	W11096293	Receiver, Hinge (Right)	19	7101P434-60	Screw		3400968	Nut
11		Liner, Oven (Not Serviced)	20	W10311335	Burner, Broil			
			21	W10311009	Insulation, Broil Cover			


18" OVEN PARTS

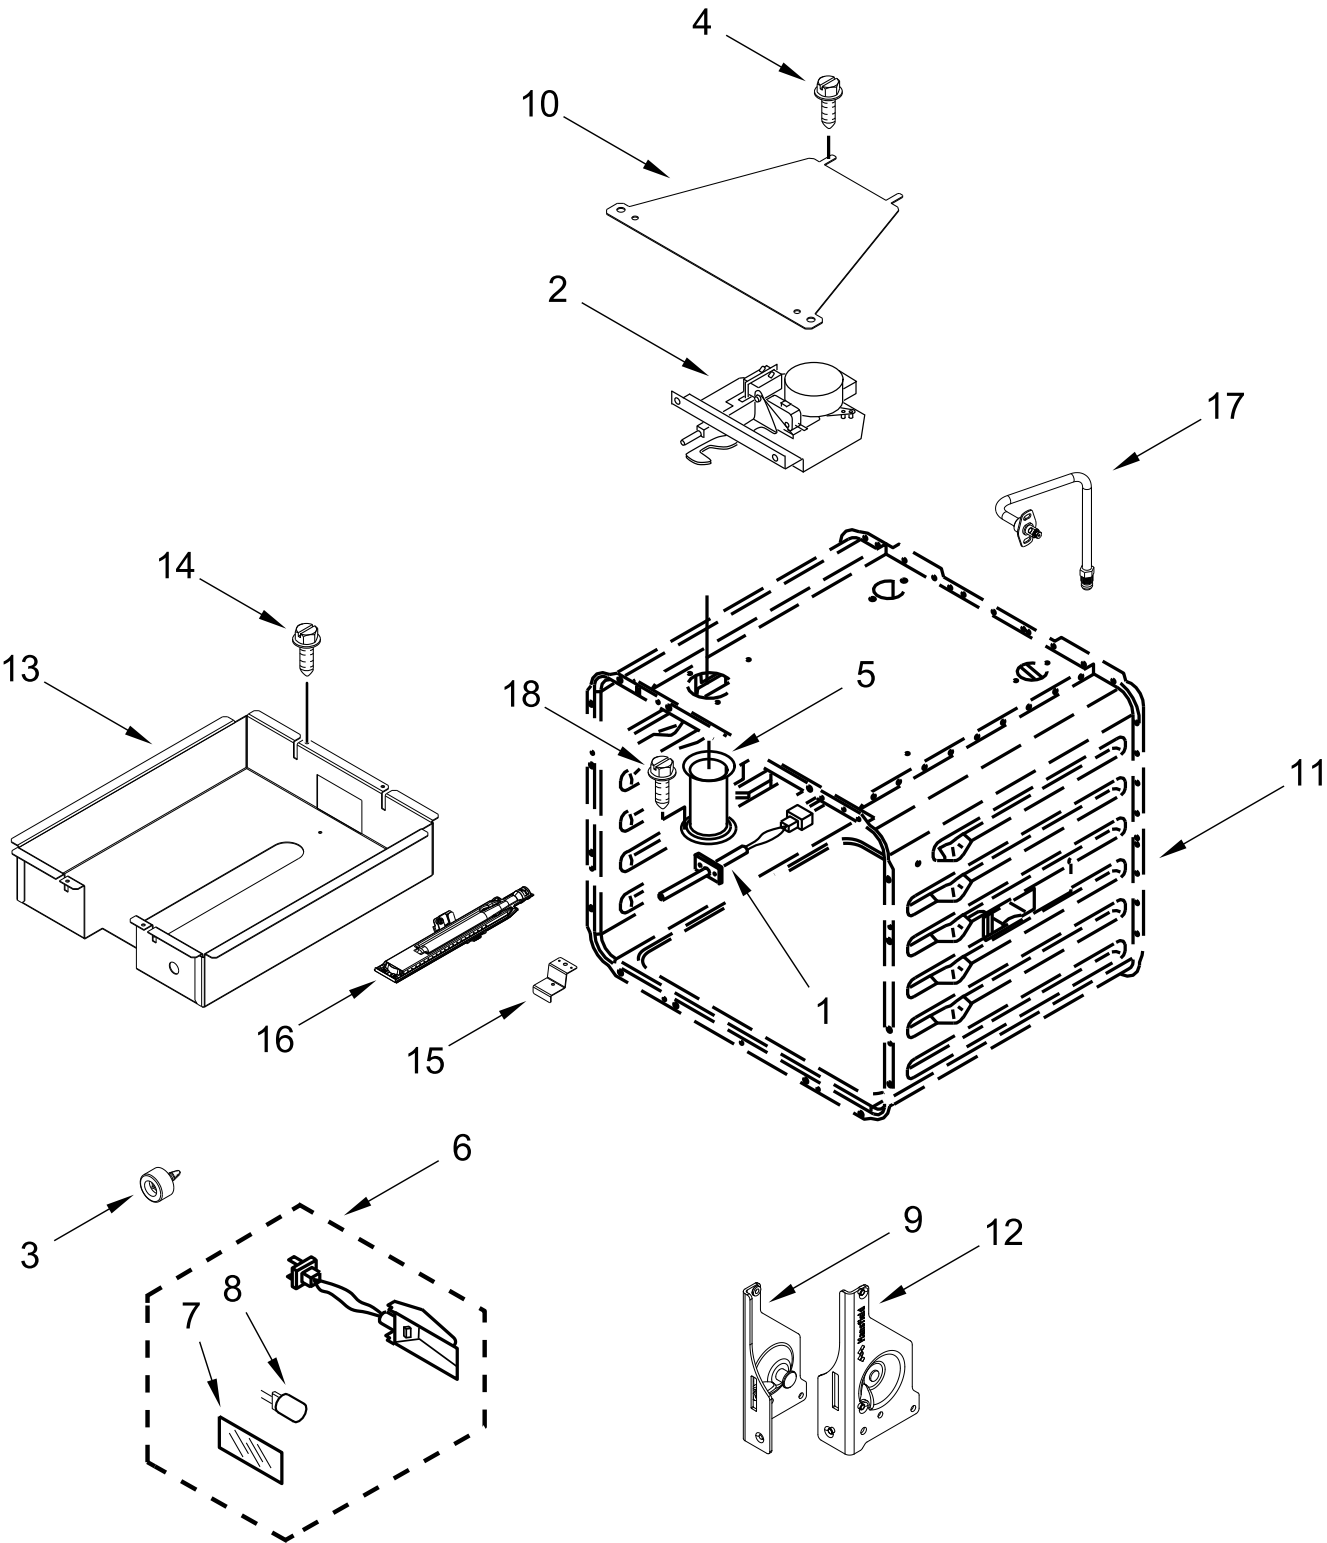

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	18	3196176	Screw
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	13	W10145651	Support, Bake Pan			
4	7101P426-60	Screw	14	12992902	Screw	W10282820		Insulation, Wrap, 18"
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner 18" Cavity	W10299353		Insulation, Back, 18"
6	W11223932	Assembly, Oven Light				W10299355		Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader	3400968		Nut
8	W10169757	Bulb, Light	17	W10145706	Tube, Bake			
9	W11096294	Receiver, Hinge (Left)						
10	W10160858	Cover, Latch						
11		Liner, Oven (Not Serviced)						


VENTING PARTS

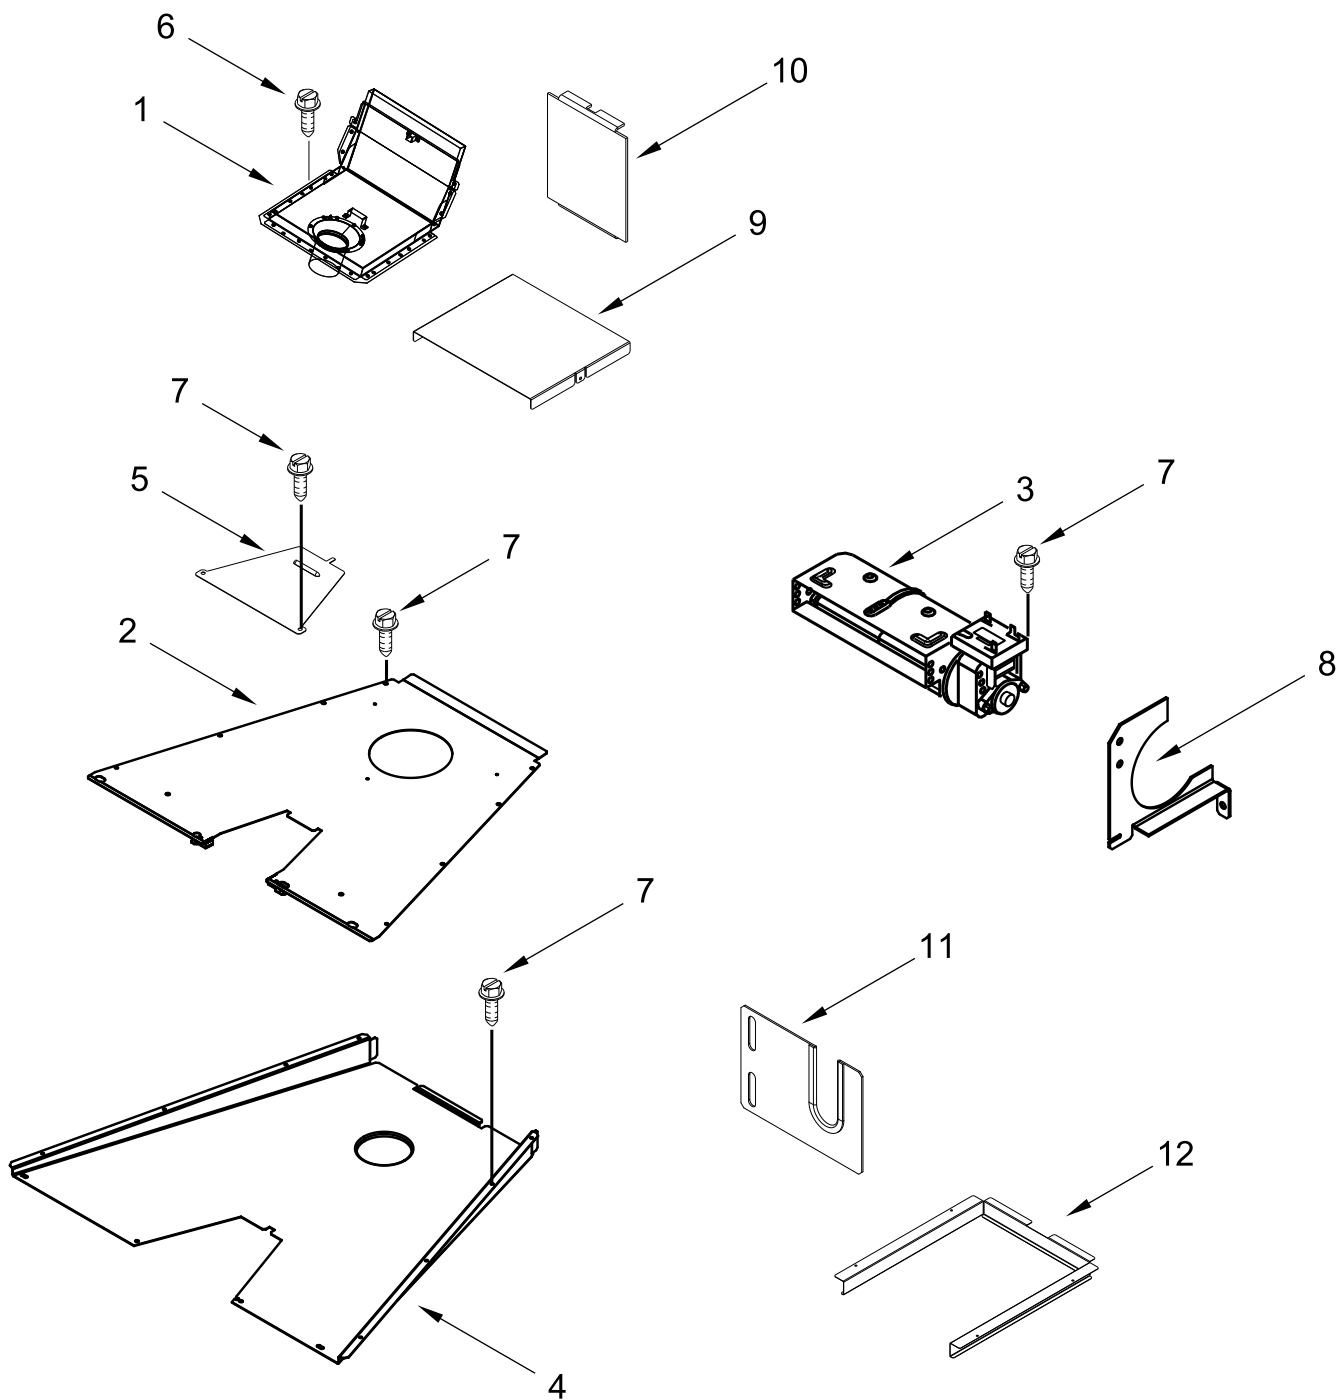

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	9	W10246086	Retainer, Insulation
	W10340583	Vent, Chimney Box (18")		W11113377	Vent, Cooling Bottom (18")	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18")	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30")
3	W11200129	Blower	7	7101P426-60	Screw		W10145364	Duct, Primary Air (18")
			8	W11047754	Bracket, Blower Mount			


30" OVEN DOOR PARTS

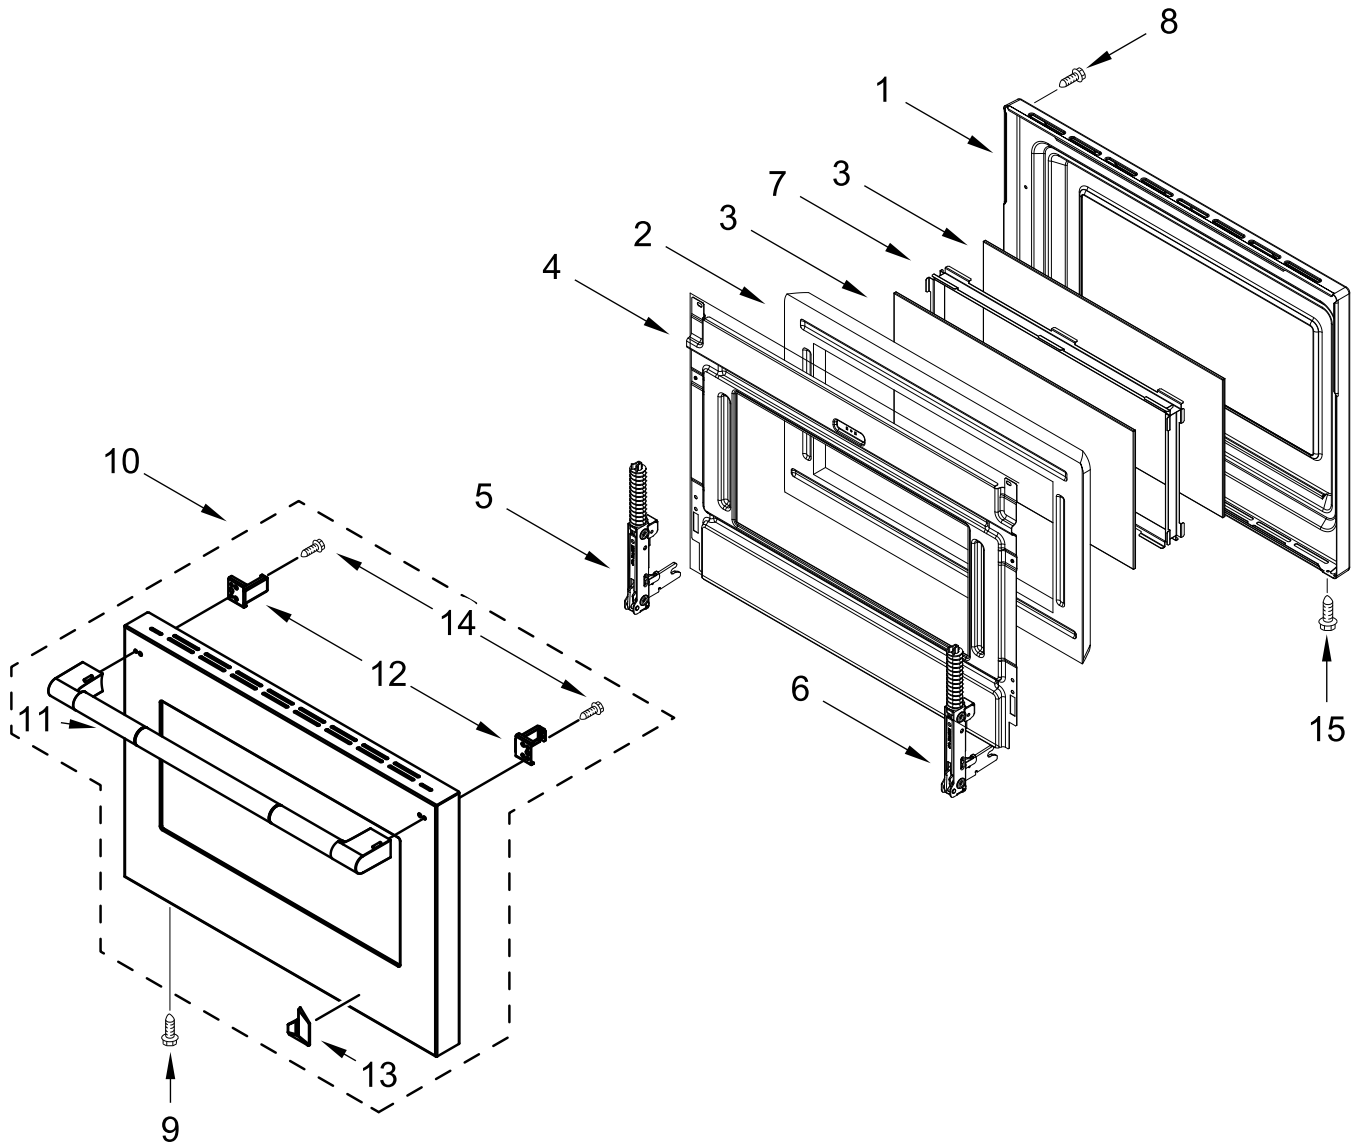

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	8	W10292297	Screw	13		Badge
2	W10321285	Insulation, Door	9	W10162096	Screw		W11238656	Stainless
3	W11184409	Glass, Inner	10	W11199071	Assembly, Outer Door Glass (Includes Handle)	14	W10276043	Screw
4	W11194821	Retainer, Glass				15	W10607120	Screw
5	W11096974	Hinge, Door (Left)	11	W11102826	Handle, Door			
6	W11096973	Hinge, Door (Right)	12	W11197830	Bracket, Handle			
7	W10272594	Frame, Glass						


18" OVEN DOOR PARTS

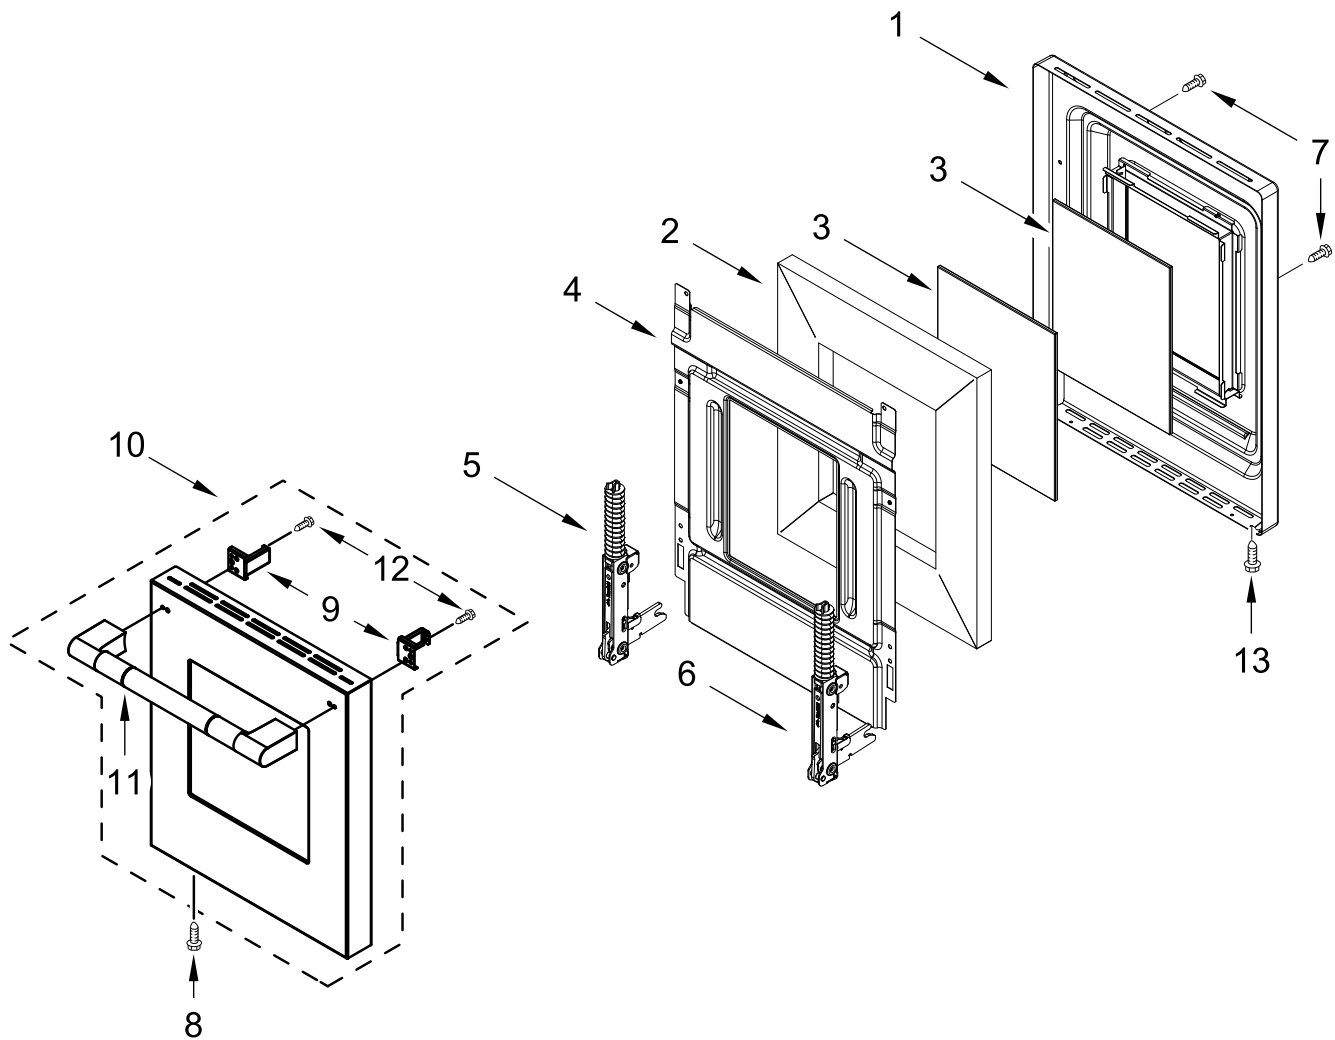

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10292297	Screw	11	W11102824	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W10276043	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	13	W10607120	Screw
4	W11194818	Retainer, Glass	10	W10799306	Assembly, Outer Door Glass (Includes Handle)			
5	W11096976	Hinge, Door (Left)						
6	W11096975	Hinge, Door (Right)						


30" INTERNAL OVEN PARTS

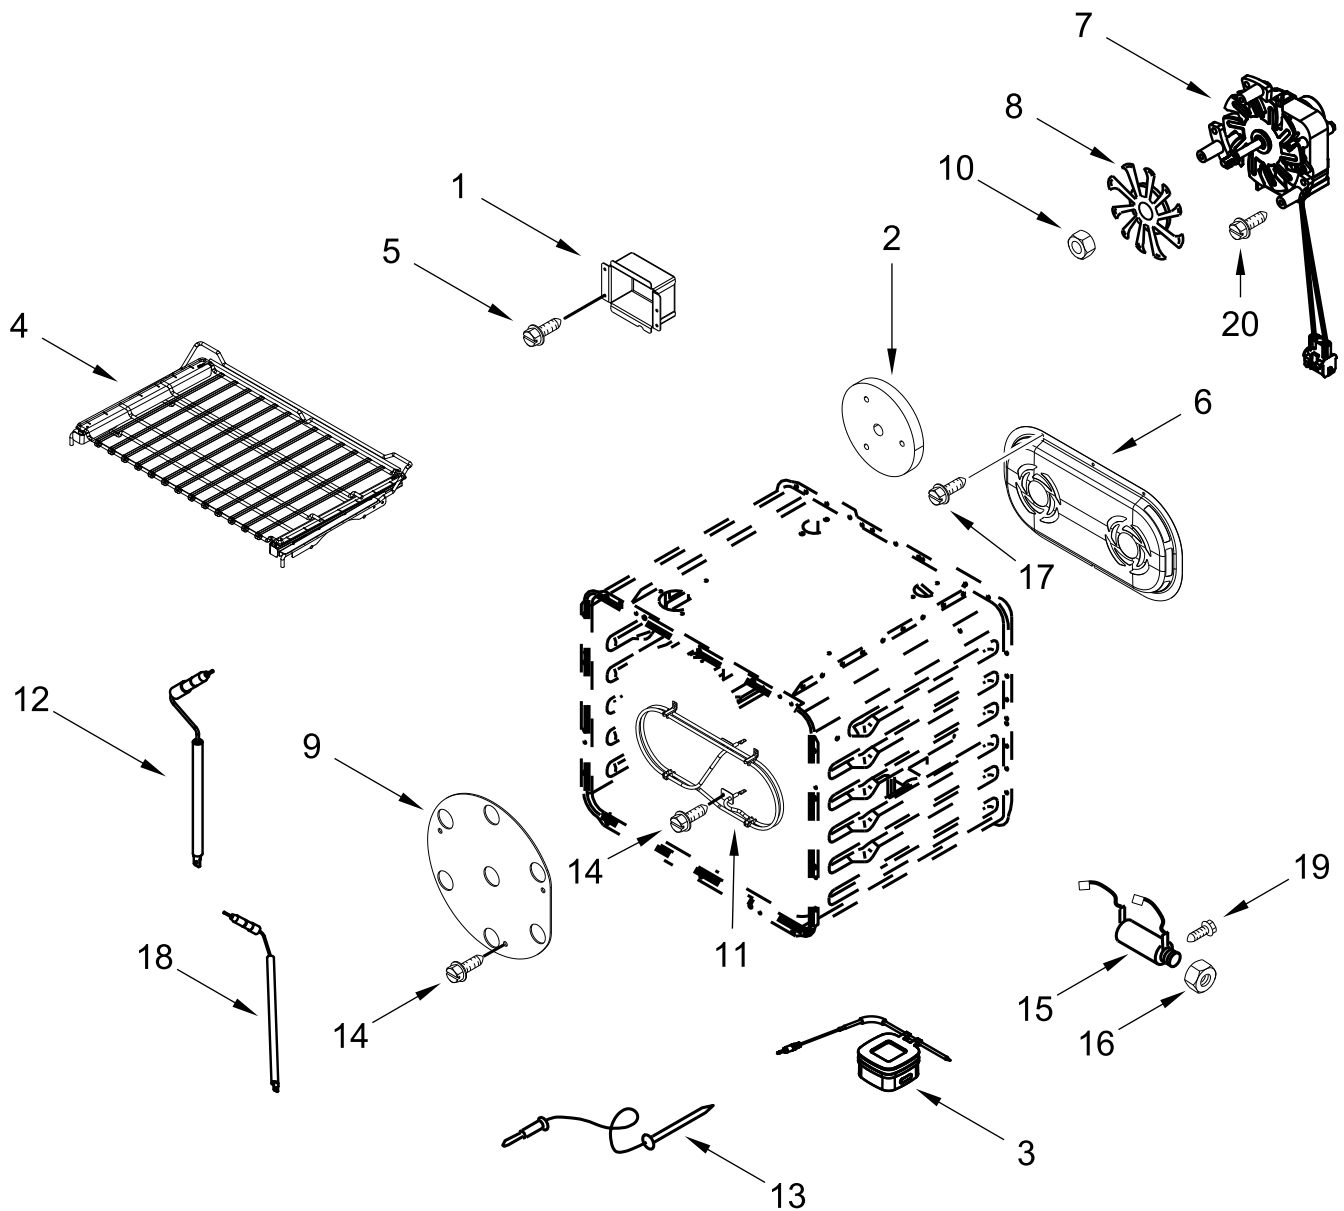

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11111342	Rack, Oven (Sliding)	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	12992902	Screw
			13	9755542	Probe, Temperature	20	W10720084	Screw

18" INTERNAL OVEN PARTS

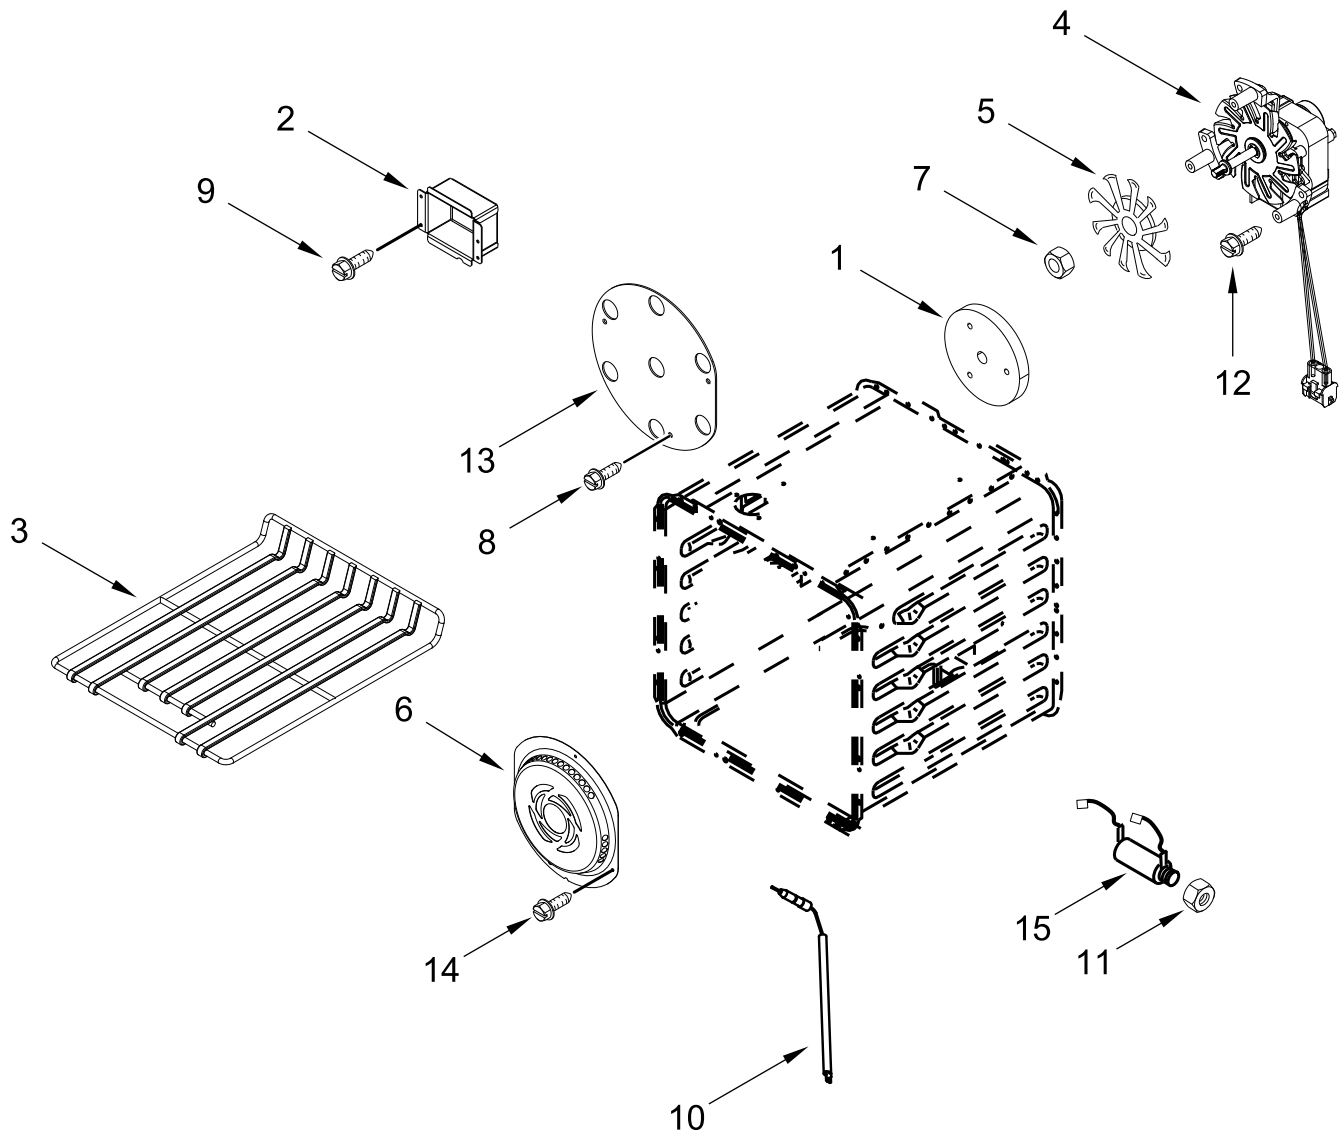

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake
2	W10308051	Box, Broil	6	W11113808	Cover, Fan	11	W11033111	Nut, Locking
3	W11111351	Rack, Oven (18")	7	W10631504	Nut, Acorn (LH)	12	W10720084	Screw
4	W10631506	Motor, Convection	8	4449154	Screw	13	W10261523	Plate, Fan
			9	7101P434-60	Screw	14	W10739592	Screw
						15	9755543	Jack, Meat Probe

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill