




NOIR 48" GAS PROFESSIONAL-STYLE RANGE
Includes Griddle and Infrared Grill

MODELS:

JGRP748HM00 (Stainless)


BURNER BOX, GRIDDLE, AND GRILL PARTS

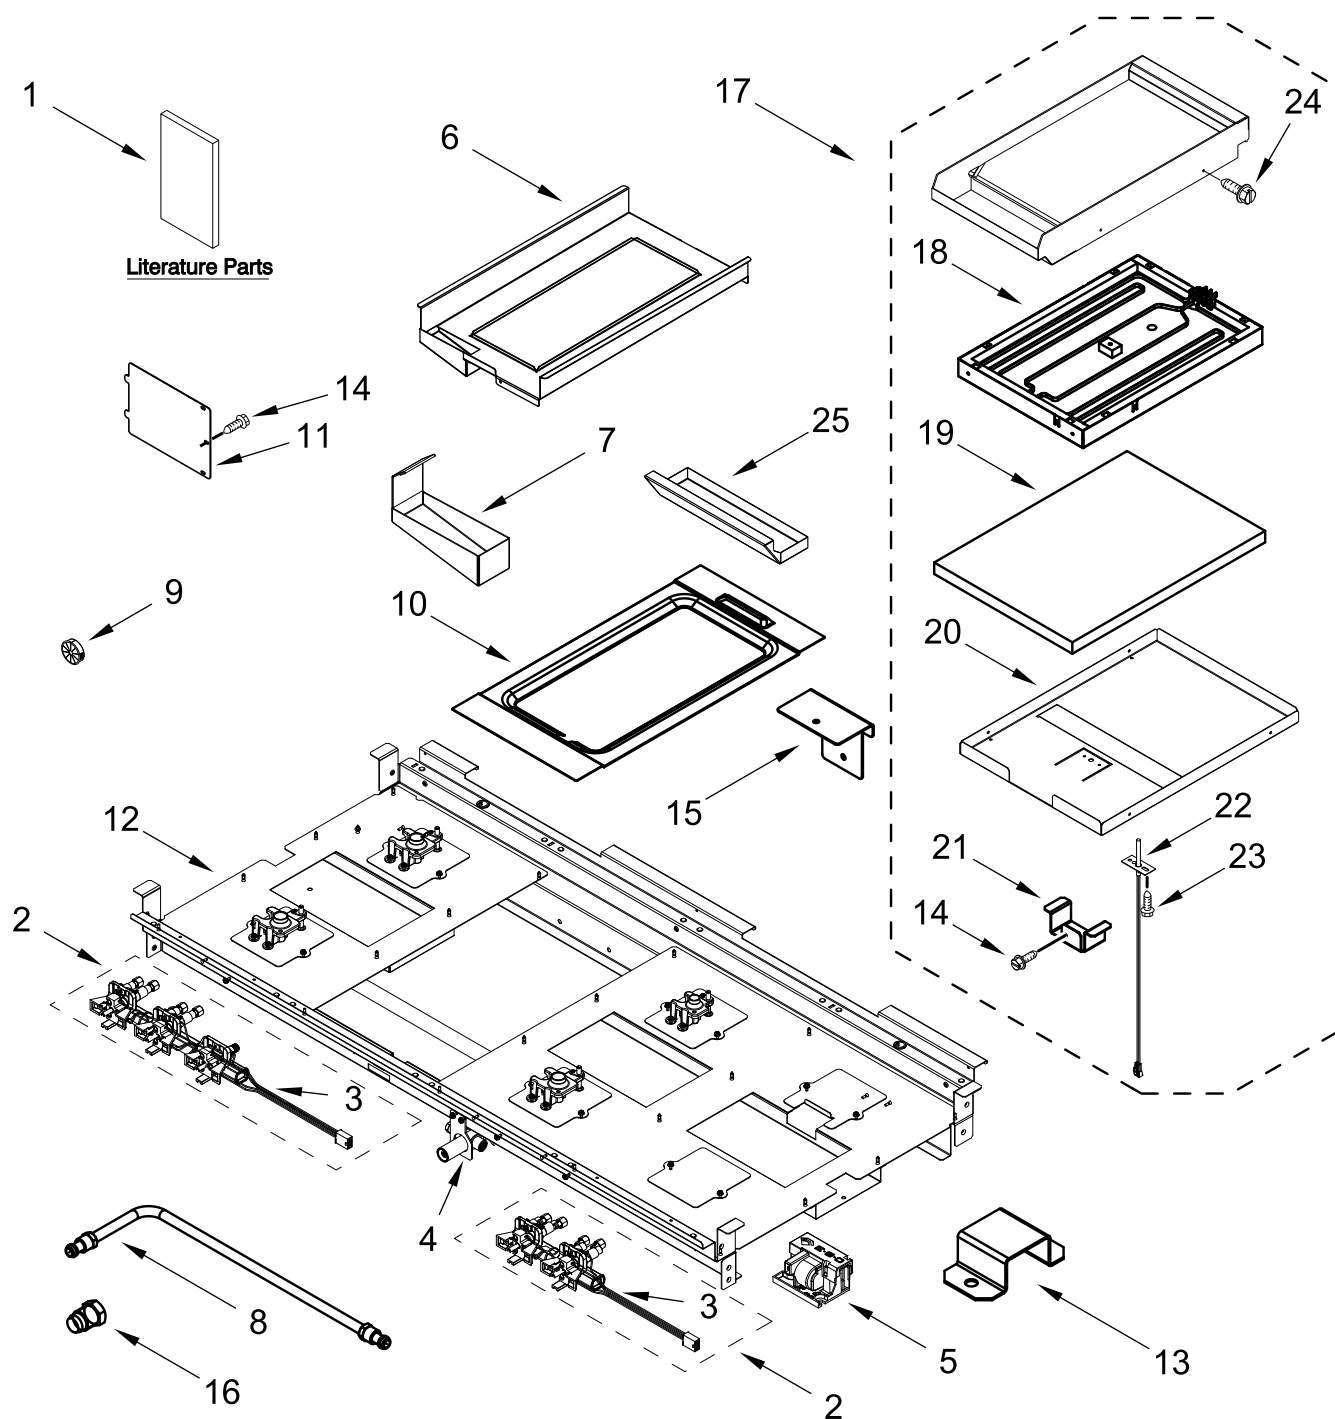

BURNER BOX, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W11120957	Capture, Grill Grease	23	3196160	Screw
	W11177275	Guide, Use and Care	7	W11174414	Tray, Grill Drip	24	3196176	Screw
	W11177278	Instructions, Installation	8	W10892796	Tube, Manifold Supply (Left)	25	W10276497	Tray, Griddle Drip
	W11184746	Guide, Internet Connectivity		W10892789	Tube, Manifold Supply (Right Center)			FOLLOWING PARTS NOT ILLUSTRATED
	W11177312	Guide, Quick Start	9	W10189097	Bushing, Burner Box	W11200305		Harness, Main (48")
	W11202375	Diagram, Wiring	10	W11120965	Deflector, Grill Heat	W10903727		Harness, Griddle
	W11202275	Sheet, Tech	11	W10115843	Cover, Ignition	W11200333		Harness, Cooktop
2	W10893054	Assembly, Valve Manifold (Left Front, Left Rear, And Grill)	12		Box, Burner (Not Serviced)	W10780278		Harness, Door Lock
	W10893058	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	13	W11174418	Bracket, Grill Orifice Holder	W11200318		Harness, Communication
			14	7101P426-60	Screw	W11242785		Harness, WIFI
			15	W11285353	Bracket, Grill Grease Capture	W10624584		Cord, Power
			16	W10892063	Plug, Supply Outlet	9759877		Retainer, Strain Relief
3	W11106302	Switch, Harness (Left Front, Left Rear, And Grill)	17	W10891745	Assembly, Griddle Module	4450800		Screw, Grounding
	W11106300	Switch, Harness (Right Center Front And Right Center Rear)	18	W10891698	Element, Griddle	W11311196		Ignitor Wire, Wire-Electrode Bake
			19	W11121383	Insulation, Griddle	W11311197		Ignitor Wire, Wire-Electrode Broil
4	W11121194	Bracket, Manifold	20	W11330430	Tray, Griddle Insulation	W10253333		Bracket, Anti-Tip
5	W11121317	Module, Spark	21	W11121384	Bracket, Griddle-RTD	7101P485-60		Screw, Anti-Tip Kit
			22	W10891584	Sensor, Griddle	W11238041		Kit, LP Conversion


COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

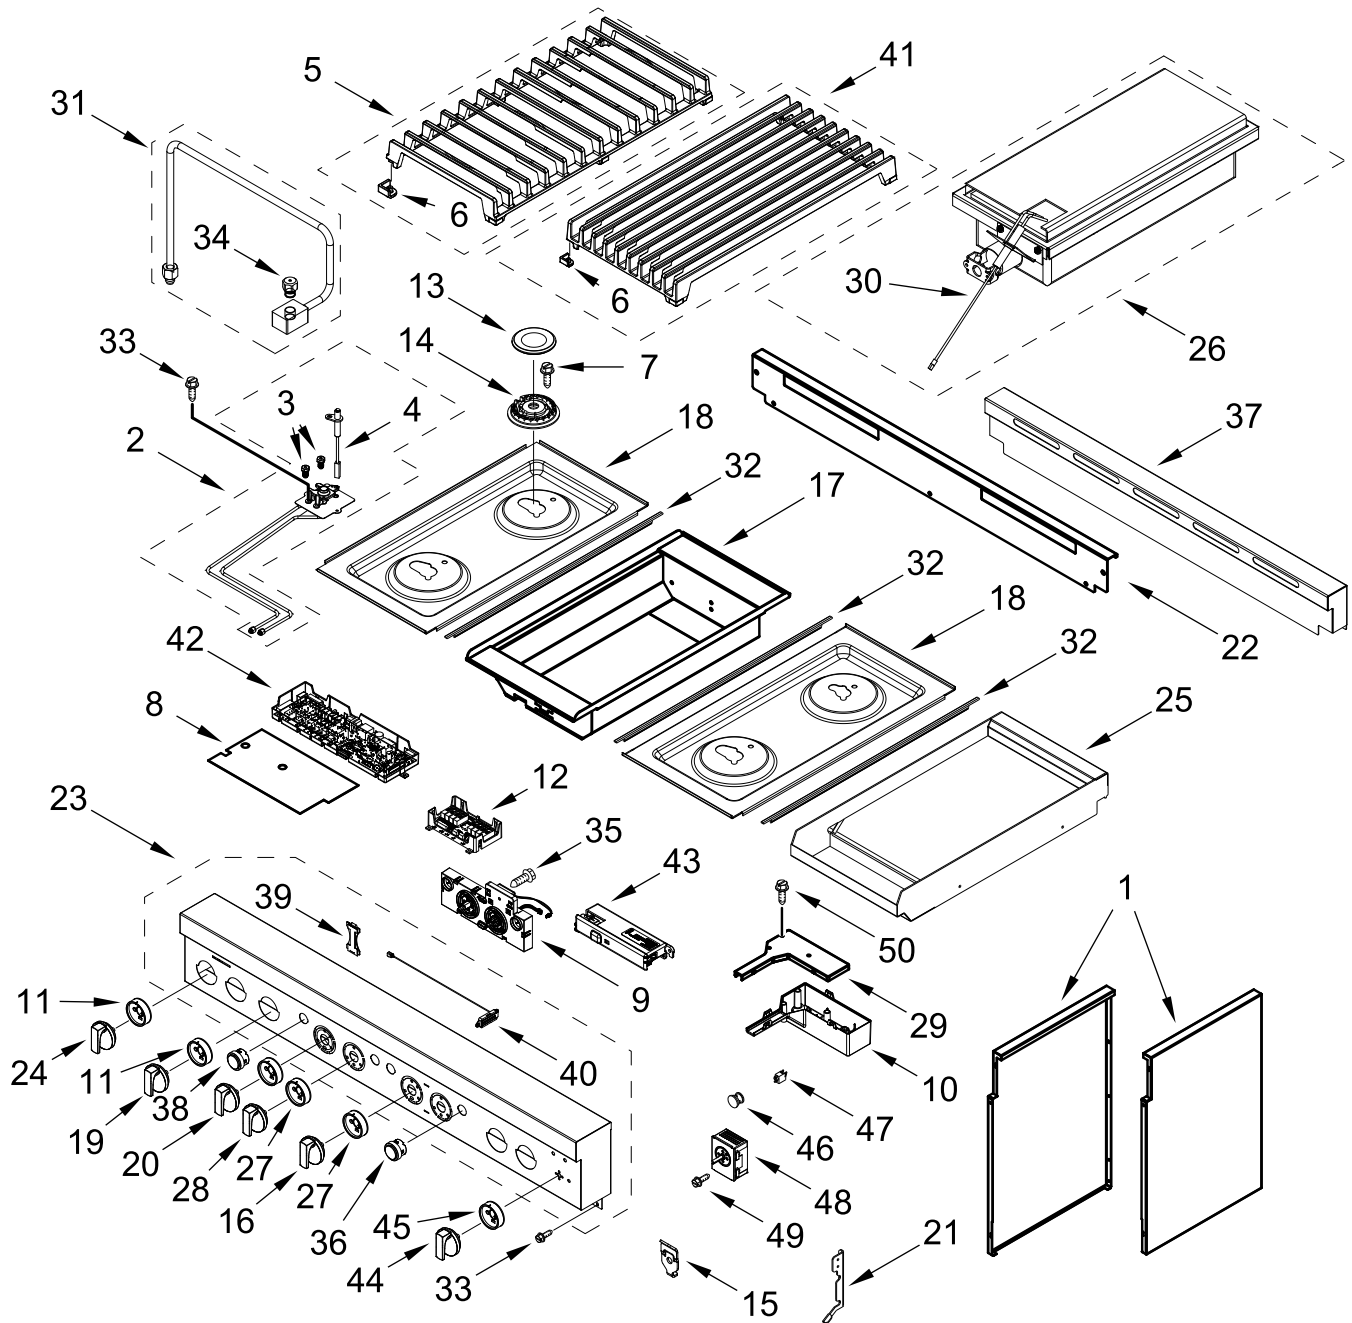

COOKTOP, BURNER, GRIDDLE, AND GRILL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	9	W11219188	Interface, User	26	W11120976	Assembly, Grill Burner
	W11111428	Panel, Cabinet Side (Right)	10	W11205795	Cover, WIFI Outer	27		Bezel, Oven (For 4 Oven Knobs)
2	W10892807	Assembly, Orifice Holder (Left Front)	11	W11090284	Bezel, Cooktop (For 4 Cooktop Burners and Grill)		W11042375	Stainless
	W10892495	Assembly, Orifice Holder (Left Rear)	12	W10871065	Manager, Appliance (Expansion)	28		Knob, Oven Temperature
	W10892505	Assembly, Orifice Holder (Right Center Front)	13		Cap, Burner		W11325047	Stainless (For 18" Oven)
	W10892721	Assembly, Orifice Holder (Right Center Rear)		W11121391	Black (Set of 4)		W10891868	Stainless (For 30" Oven)
3	W10892422	Orifice, Main (17.4K) (Left Front And Right Center Front)	14	W10891987	Spreader, Flame (High) (All But Right Center Rear)	29	W11205794	Cover, WIFI Inner
	W10892418	Orifice, Main (15.4K) (Left Rear)		W10892022	Spreader, Flame (Low) (Right Center Rear)	30	W11174598	Electrode, Grill
	W10892440	Orifice, Main (7.2K) (Right Center Rear)	15	W11036559	Spring Clip, Range	31	W11197929	Assembly, Grill Orifice Holder (Left Center)
	W10892435	Orifice, Simmer (2.6K) (All But Right Center Rear)	16		Knob, 30" Oven Mode	32	W10291193	Trim, L-Strip
	W10892429	Orifice, Simmer (2.0K) (Right Center Rear)		W11317854	Stainless	33	7101P426-60	Screw
4	W11238757	Igniter (All But Right Center Rear)	17	W11174429	Assembly, Grill Box	34	W10892423	Orifice, Grill (18K) (Left Center)
	W11238756	Igniter (Right Center Rear)	18		Panel, Cooktop	35	3400814	Screw
5		Assembly, Grate		W11038237	Black (Left)	36	W11090650	Button Assembly, Oven Start
	W11172289	Black (Left)		W11038241	Black (Right Center)	37	W11183087	Trim, Island
	W11172625	Black (Right Center)	19		Knob, Grill	38	W11090651	Button Assembly, Oven Light
6	W11042504	Bumper, Grate		W10894926	Stainless	39	W10896369	Assembly, Light Pipe
7	W11323260	Screw	20		Knob, 18" Oven Mode Gas	40	W11130078	Antenna, WIFI
8	W11281269	Barrier, Appliance Manager		W11325046	Stainless	41	W11172682	Assembly, Grill Grate
			21	W10130760	Bracket, Moving Console (Left)	42	W11100277	Manager, Appliance (Powermax)
				W10130759	Bracket, Moving Console (Right)	43	W11110768	Assembly, WIFI Module
			22	W10323252	Trim, Island Insert	44		Knob, Griddle
				W11253770	Panel, Console		W10891923	Stainless
			23		Knob, Burner (For 4 Cooktop Burners)	45	W11104967	Bezel, Griddle
			24			46	W10294500	Lens, Indicator Light
				W10887596	Stainless	47	W10116114	Light, Indicator Housing
			25		Assembly, Griddle Module (Part Number Included on Burner Box Page)	48	W11033497	Control, Griddle
						49	W10674068	Screw
						50	7101P624-60	Screw


48" CHASSIS PARTS

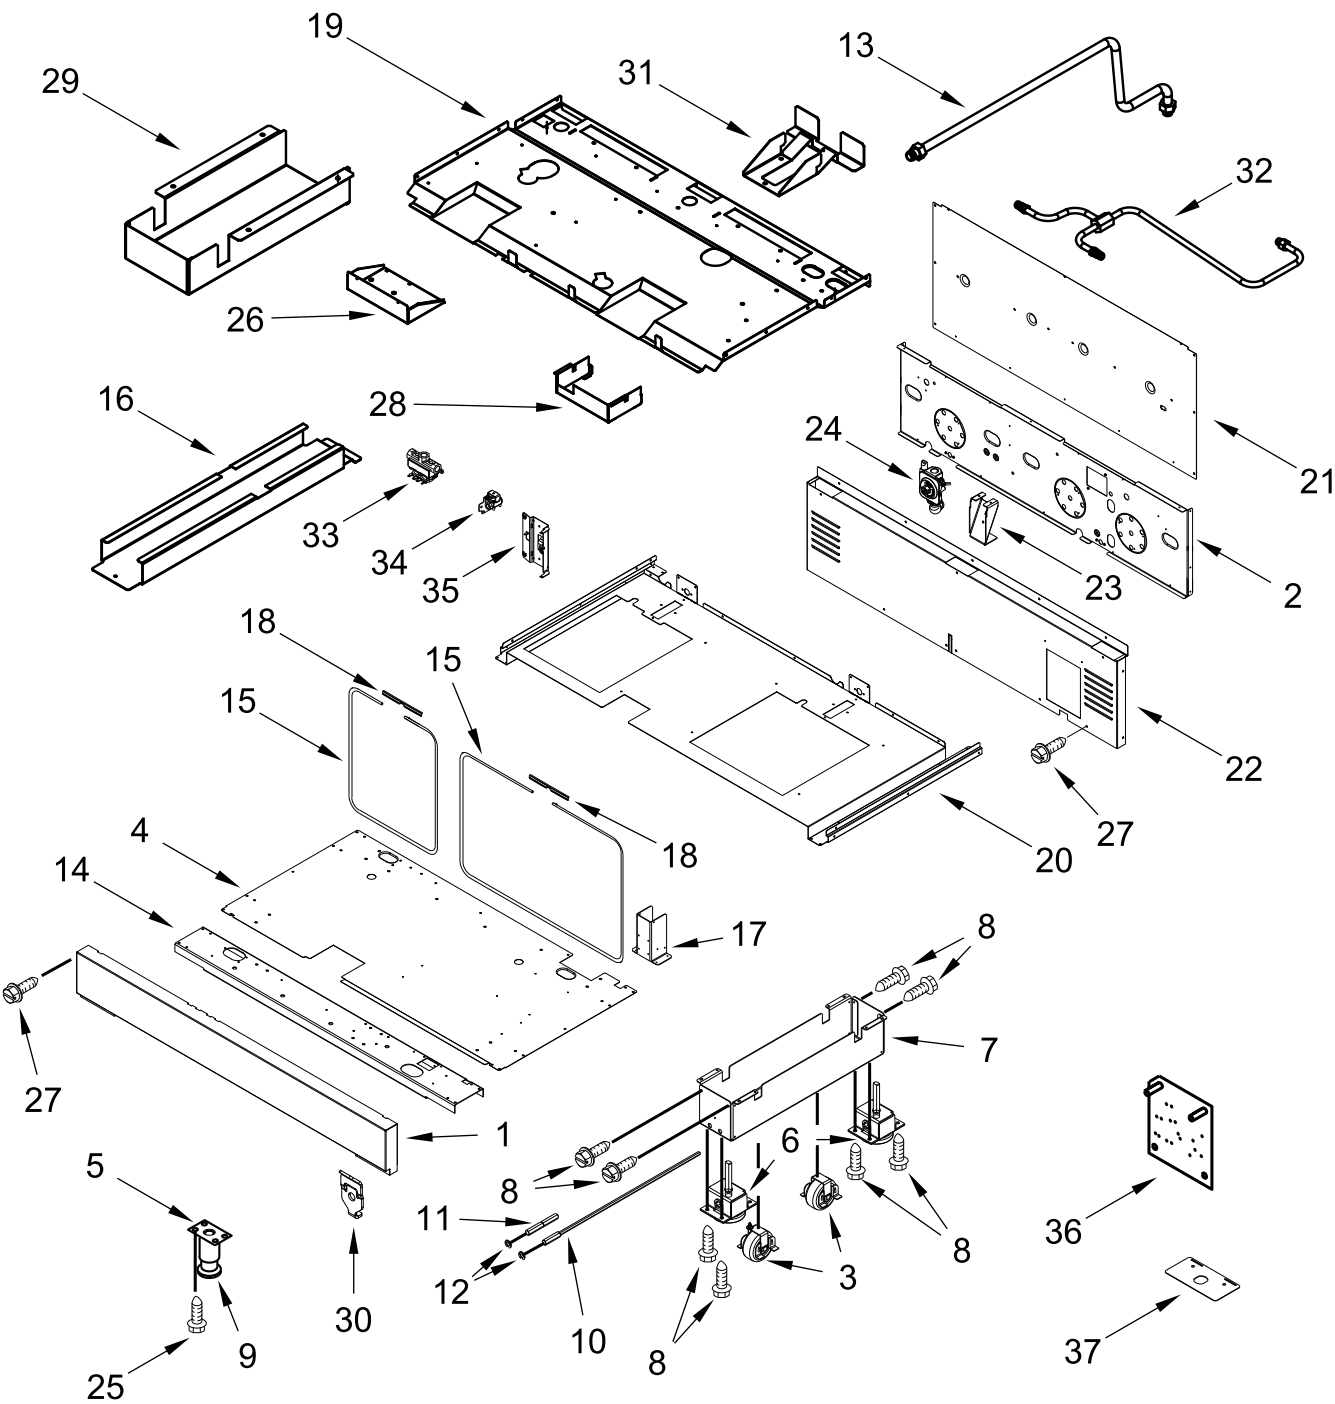

48" CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10883797	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11084360	Channel, Wire
2	W11105913	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)	31	W11190223	Bracket, Bake Alignment
4	W11110260	Duct, Bottom (48")	19	W11037132	Top, Chassis	32	W11112366	Tube, Valve (Double)
5	9759118	Plate, Mounting	20	W11040800	Chassis, Bottom	33	W10145680	Valve, Dual
6	9760860	Leveler	21	W11103335	Panel, Back Top	34	W10311268	Valve, Single
7	W10908710	Base, Leveling Leg	22	W11034123	Panel, Back Bottom	35	W10145362	Bracket-Board, DSI
8	4449743	Screw	23	W11096823	Bracket, Pressure Regulator	36	W10511278	Module, Spark DSI
9	9759117	Foot, Dual Fuel	24	W10896959	Regulator, Pressure	37	W10115855	Holder, Strain Relief
10	W10115869	Shaft, Long	25	3400518	Screw			
11	W10115793	Shaft, Short	26	W11106341	Drawer, Appliance Manager			
12	489504	E-Ring	27	7101P426-60	Screw			
13	W11181648	Tube, Pressure Regulator	28	W11106335	Cabinet, Appliance Manager			
14	W11087494	Support, Channel						
15	W11115328	Gasket, Oven (30")						
	W11115326	Gasket, Oven (18")						


30" OVEN PARTS

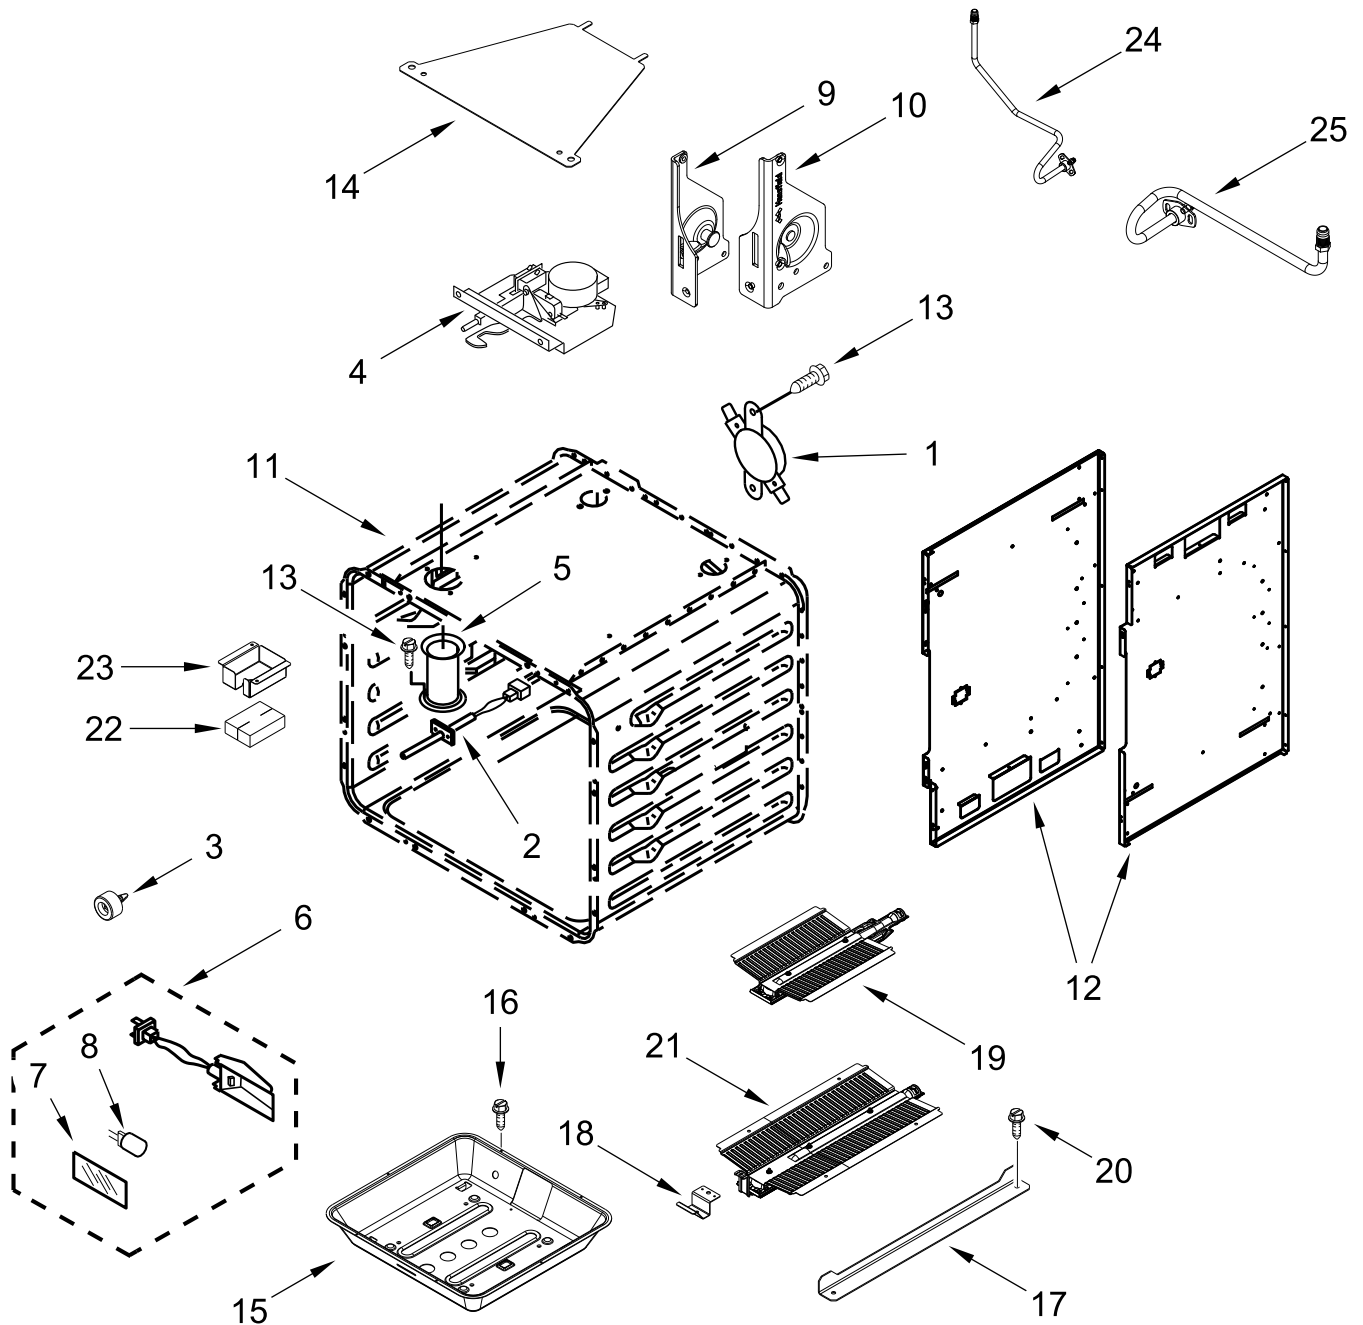

30" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	22	W10311009	Insulation, Broil Cover
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	23	W10310985	Cover, Broil
3	W10351278	Bumper & Screw				24	W11109238	Tube, Broil
4	W10830016	Latch, Motorized	13	7101P426-60	Screw	25	W11106980	Tube, Bake
5	W10145743	Tube, Vent	14	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
6	W11223932	Assembly, Oven Light	15	W10145744	Support, Bake Pan			
7	W10169756	Lens, Light	16	12992902	Screw		W10282810	Insulation, Wrap, 30"
8	W10169757	Bulb, Light	17	W10317437	Bracket, Broil Standoff		W10299350	Insulation, Back, 30"
9	W11096294	Receiver, Hinge (Left)	18	W10308040	Bracket, Bake Burner		W10299354	Insulation, Bottom
10	W11096293	Receiver, Hinge (Right)	19	W10878504	Burner, Bake			
			20	7101P434-60	Screw		3400968	Nut
11		Liner, Oven (Not Serviced)	21	W10311335	Burner, Broil			


18" OVEN PARTS

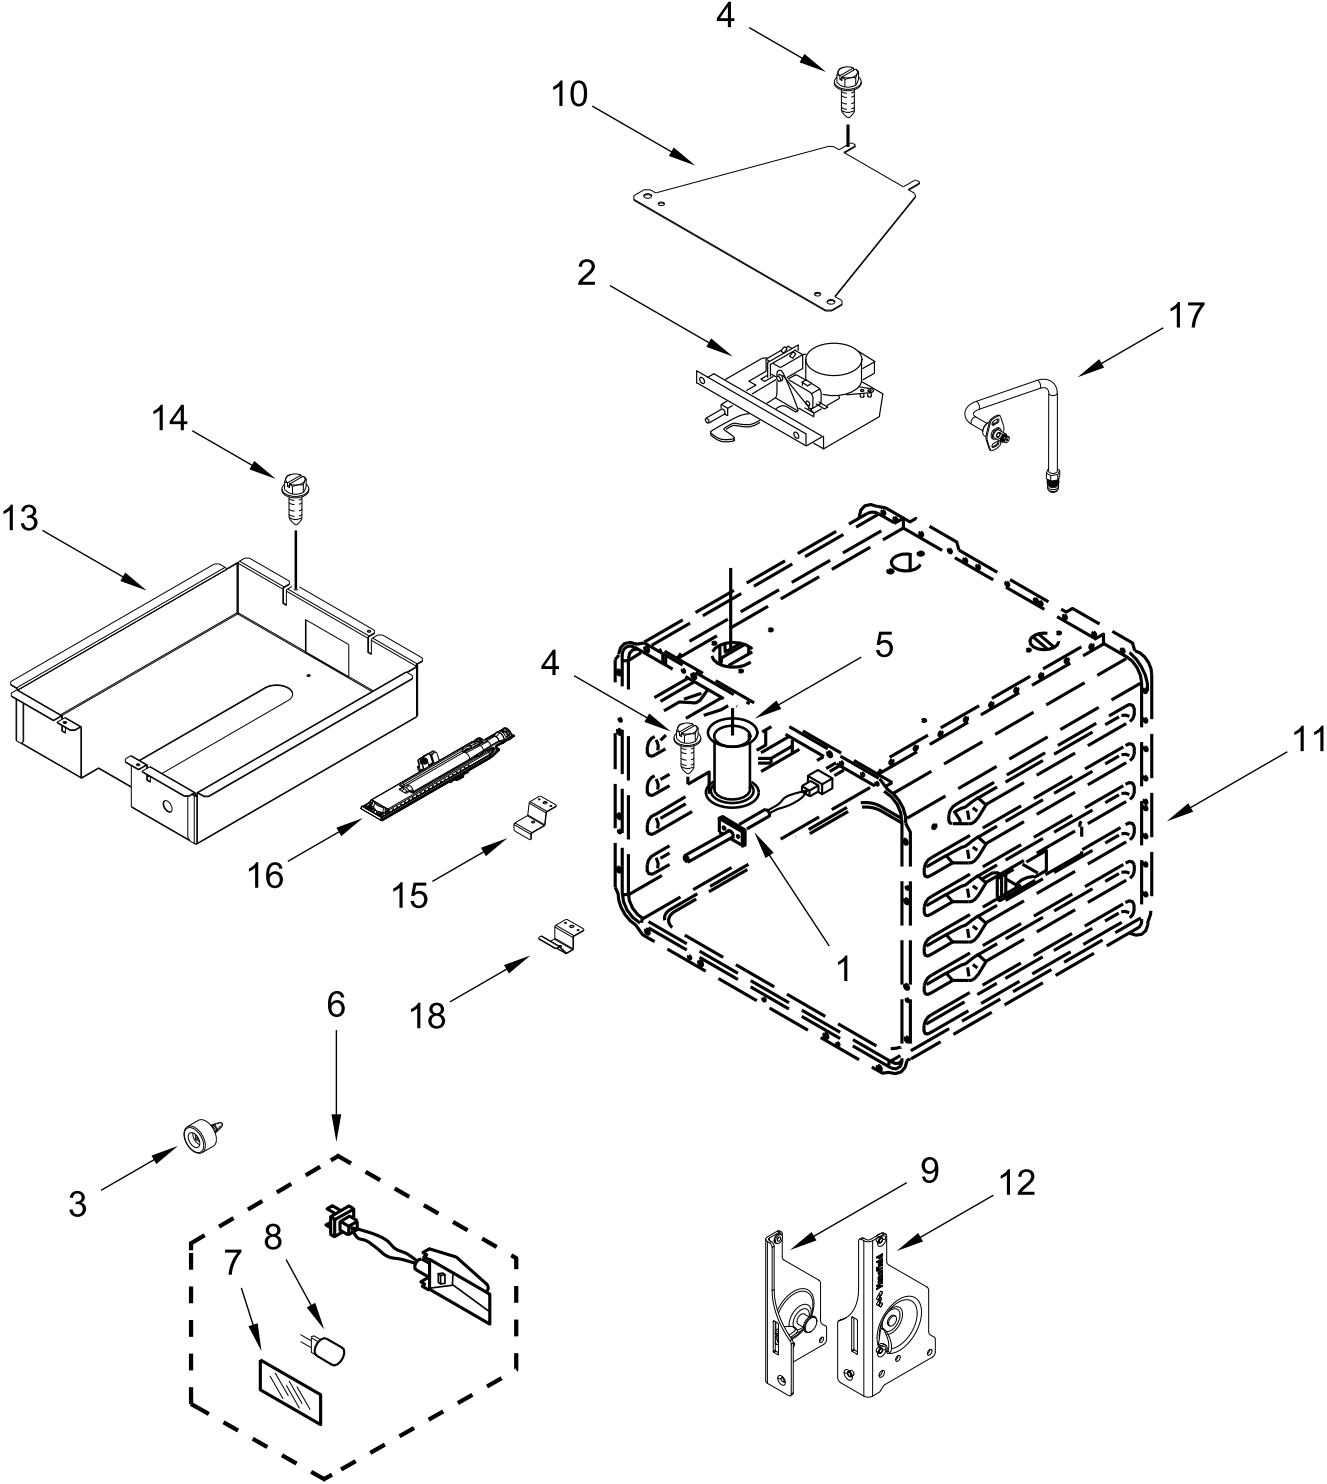

18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	18	W10308040	Bracket, Bake Burner
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	13	W10145651	Support, Bake Pan			
4	7101P426-60	Screw	14	12992902	Screw		W10282820	Insulation, Wrap, 18"
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner 18" Cavity		W10299353	Insulation, Back, 18"
6	W11223932	Assembly, Oven Light					W10299355	Insulation, Bottom
7	W10169756	Lens, Light	16	W10878505	Burner, Bake W/O Spreader		3400968	Nut
8	W10169757	Bulb, Light	17	W10145706	Tube, Bake			
9	W11096294	Receiver, Hinge (Left)						
10	W10160858	Cover, Latch						
11		Liner, Oven (Not Serviced)						


VENTING PARTS

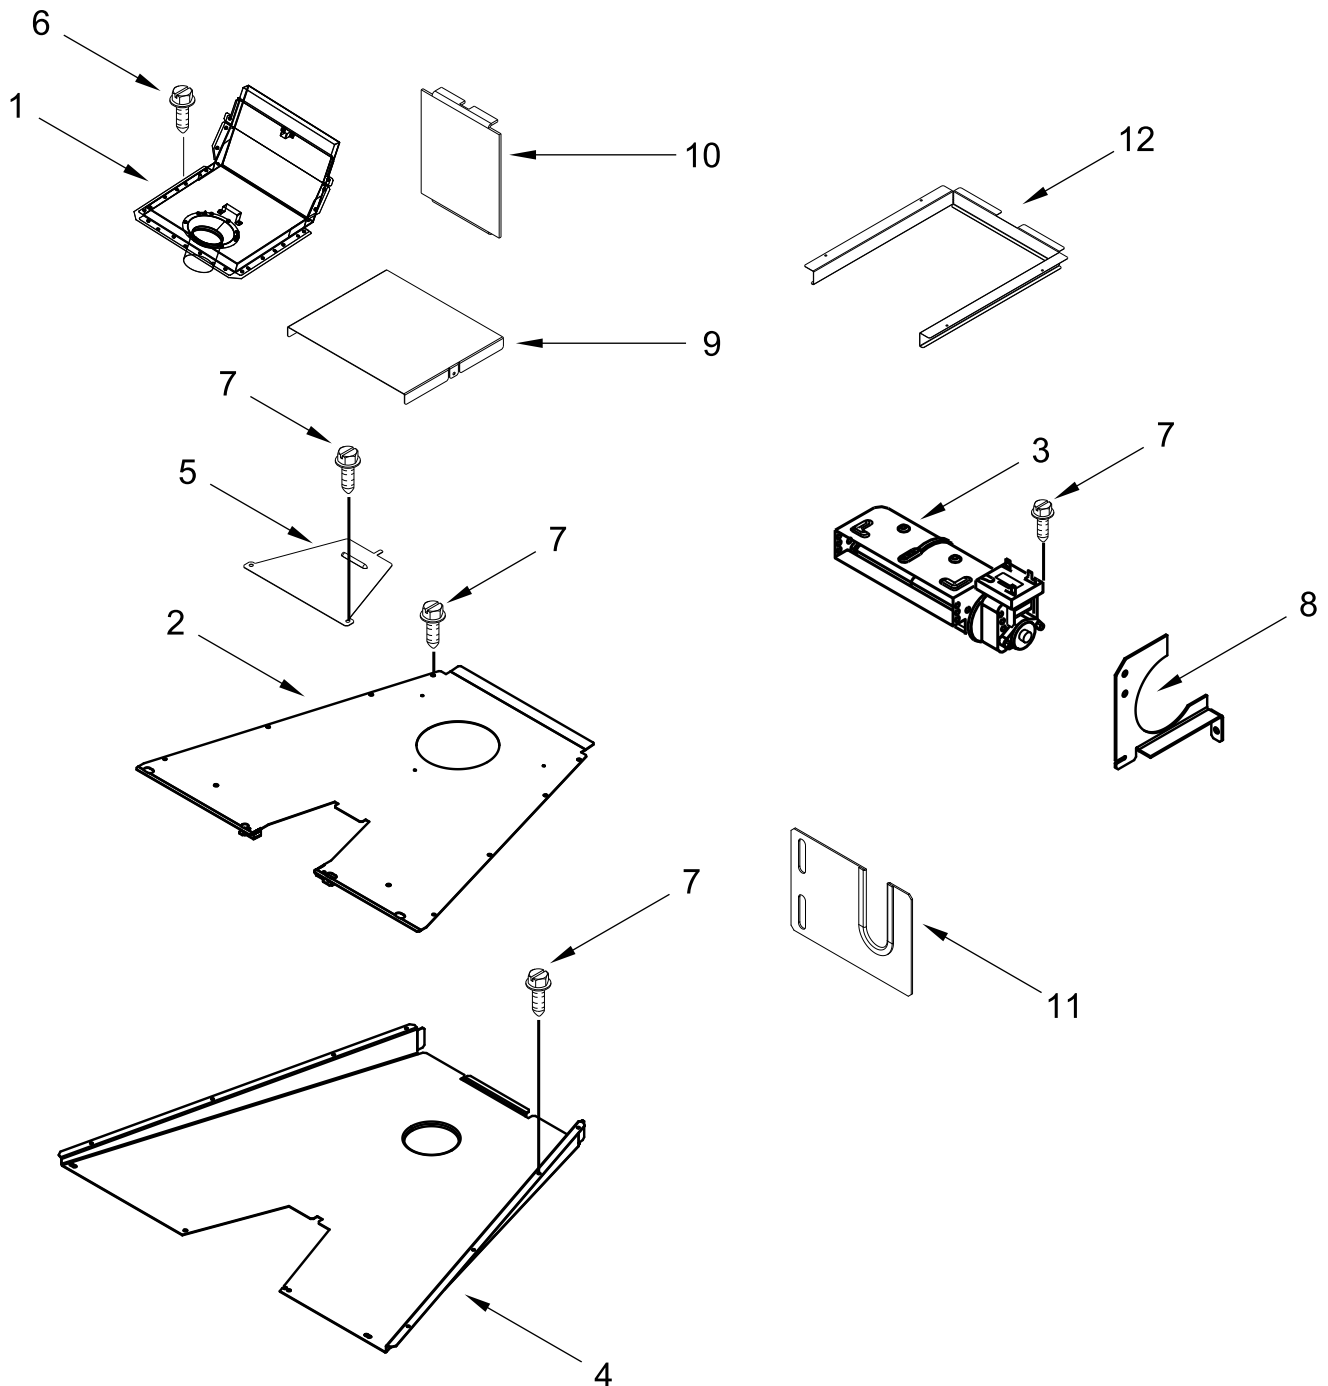

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	9	W10246086	Retainer, Insulation
	W10340583	Vent, Chimney Box (18")		W11113377	Vent, Cooling Bottom (18")	10	W10246087	Insulation, Chimney
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	11	W11106956	Cover, Channel
	W11113379	Vent, Cooling Top (18")	6	3400805	Screw (Zinc)	12	W10145363	Duct, Primary Air (30")
3	W11200129	Blower	7	7101P426-60	Screw		W10145364	Duct, Primary Air (18")
			8	W11047754	Bracket, Blower Mount			


30" OVEN DOOR PARTS

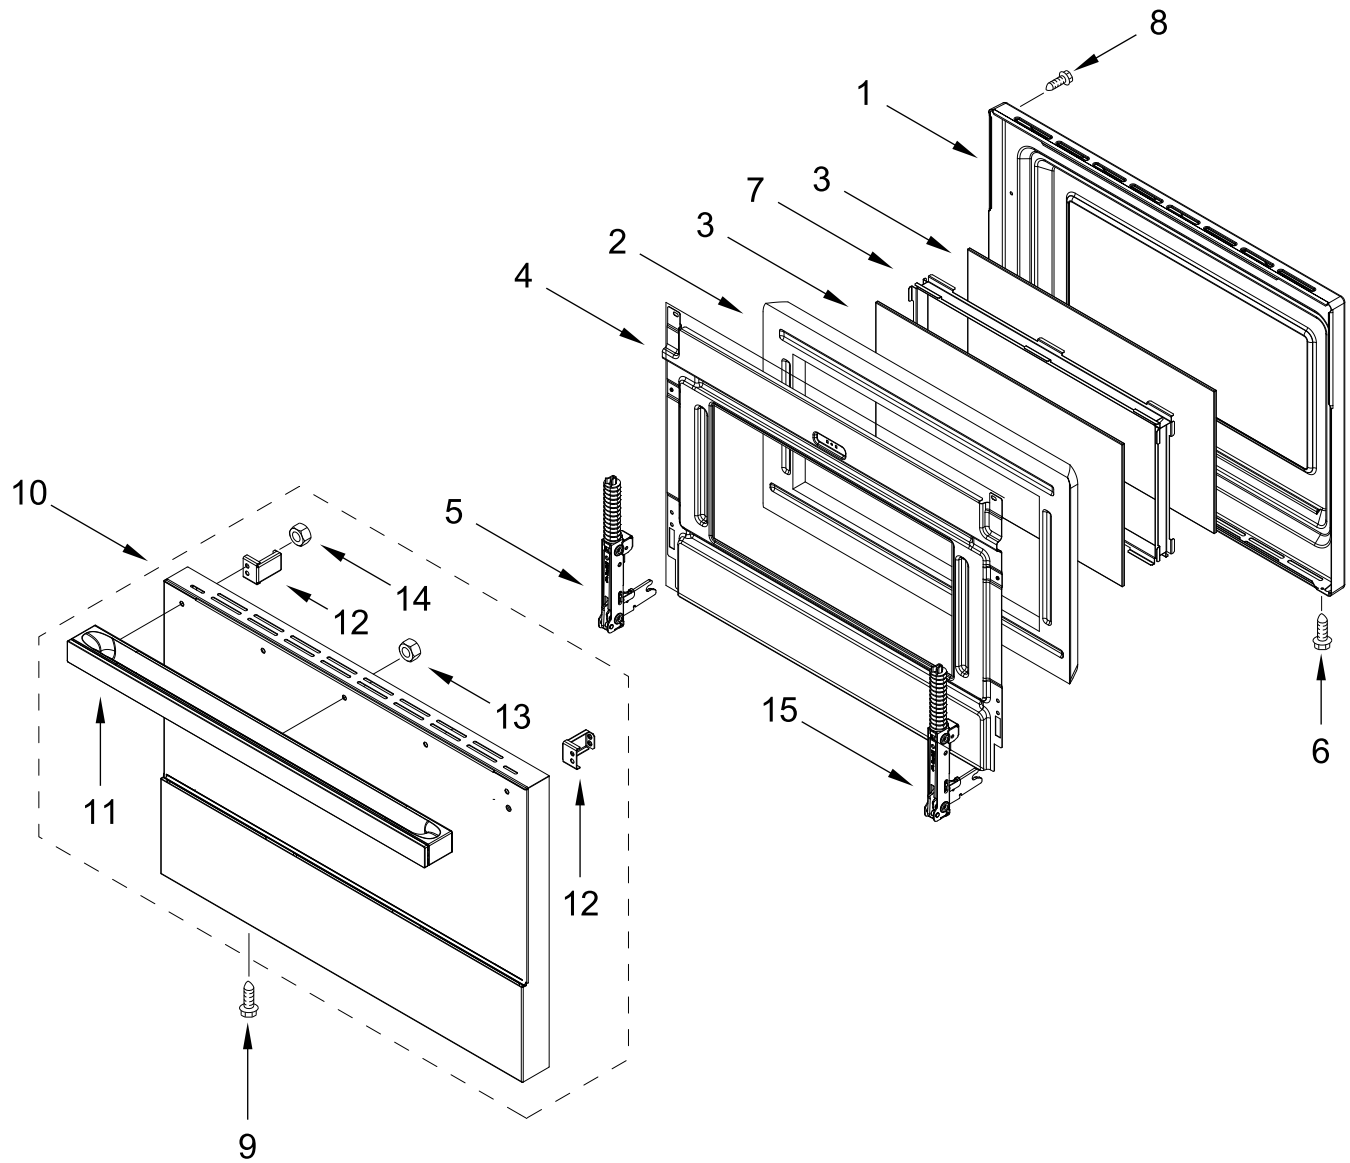

30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	8	W10284411	Screw with Washer	13	W11198435	Nut
2	W10321285	Insulation, Door	9	W10162096	Screw	14	999299	Nut
3	W11184409	Glass, Inner	10	W10870221	Assembly, Outer Door Glass (Includes Handle)	15	W11096979	Hinge, Door (Right)
4	W11194821	Retainer, Glass						
5	W11096980	Hinge, Door (Left)	11	W11125541	Handle, Door			
6	W10607120	Screw	12	W11194816	Bracket, Handle			
7	W10272594	Frame, Glass						


18" OVEN DOOR PARTS

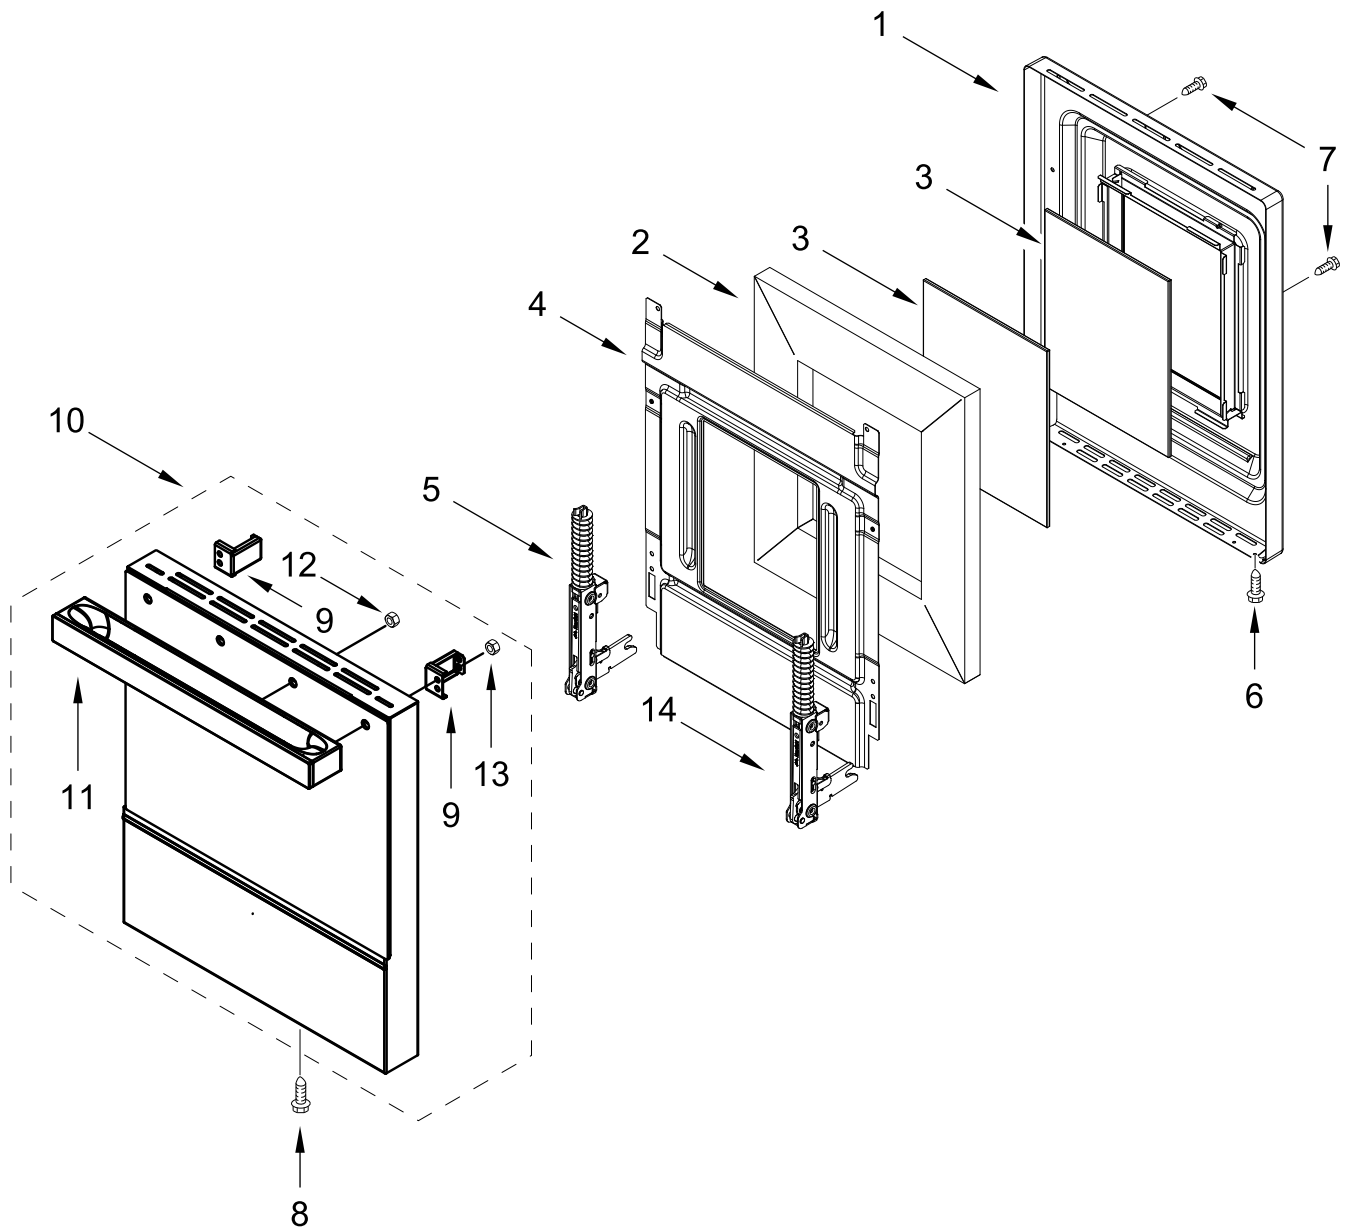

18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10284411	Screw with Washer	11	W11125539	Handle, Door
2	W10884821	Insulation, Door	8	W10162096	Screw	12	W11198435	Nut
3	W11036789	Glass, Inner	9	W11194816	Bracket, Handle	13	999299	Nut
4	W11194818	Retainer, Glass	10	W10870212	Assembly, Outer Door Glass (Includes Handle)	14	W11096981	Hinge, Door (Right)
5	W11096982	Hinge, Door (Left)						
6	W10607120	Screw						


30" INTERNAL OVEN PARTS

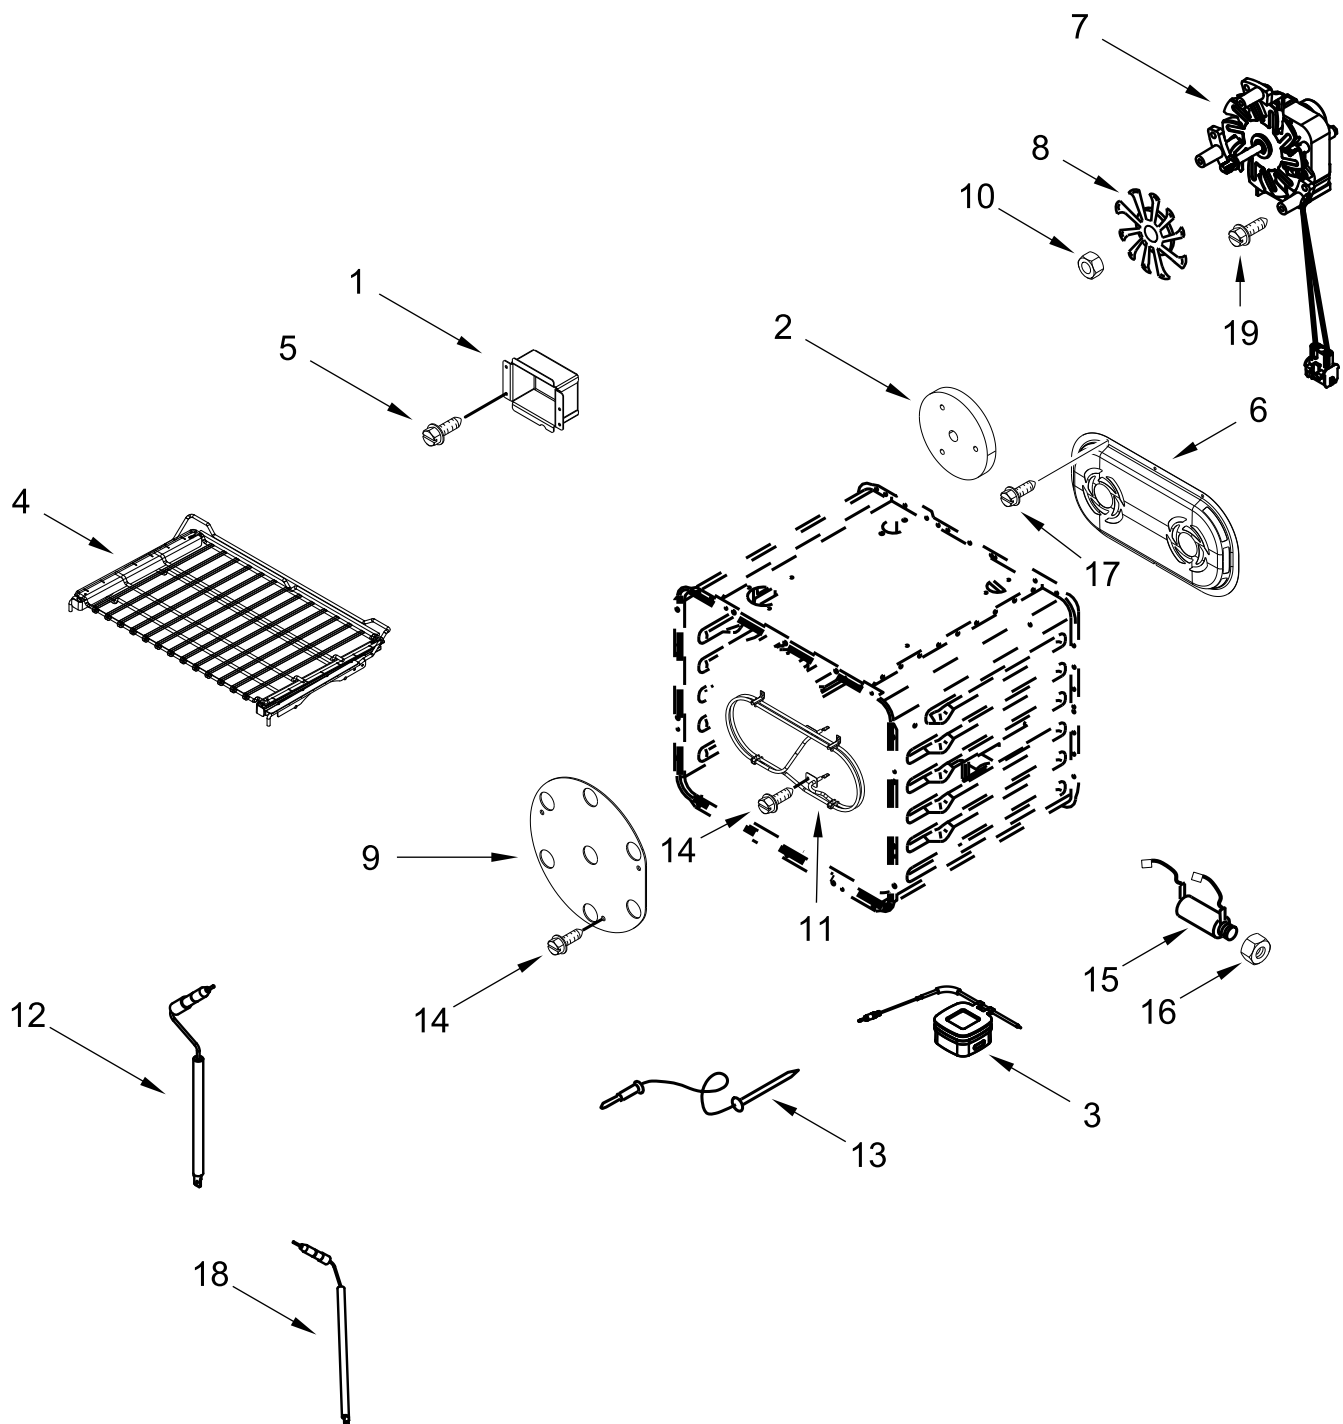

30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10308051	Box, Broil	7	W10631506	Motor, Convection	14	4449154	Screw
2	W10282821	Insulation, Convection Cover	8	W11108376	Blade, Fan	15	9755543	Jack, Meat Probe
3	W11186918	Probe, Wireless Meat	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
4	W11111342	Rack, Oven (Sliding)	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
5	7101P434-60	Screw	11	W10145949	Element, Convection	18	W11205400	Electrode, Bake
6	W11232487	Baffle, Convection	12	W11182863	Electrode, Broil	19	W10720084	Screw
			13	9755542	Probe, Temperature			

18" INTERNAL OVEN PARTS

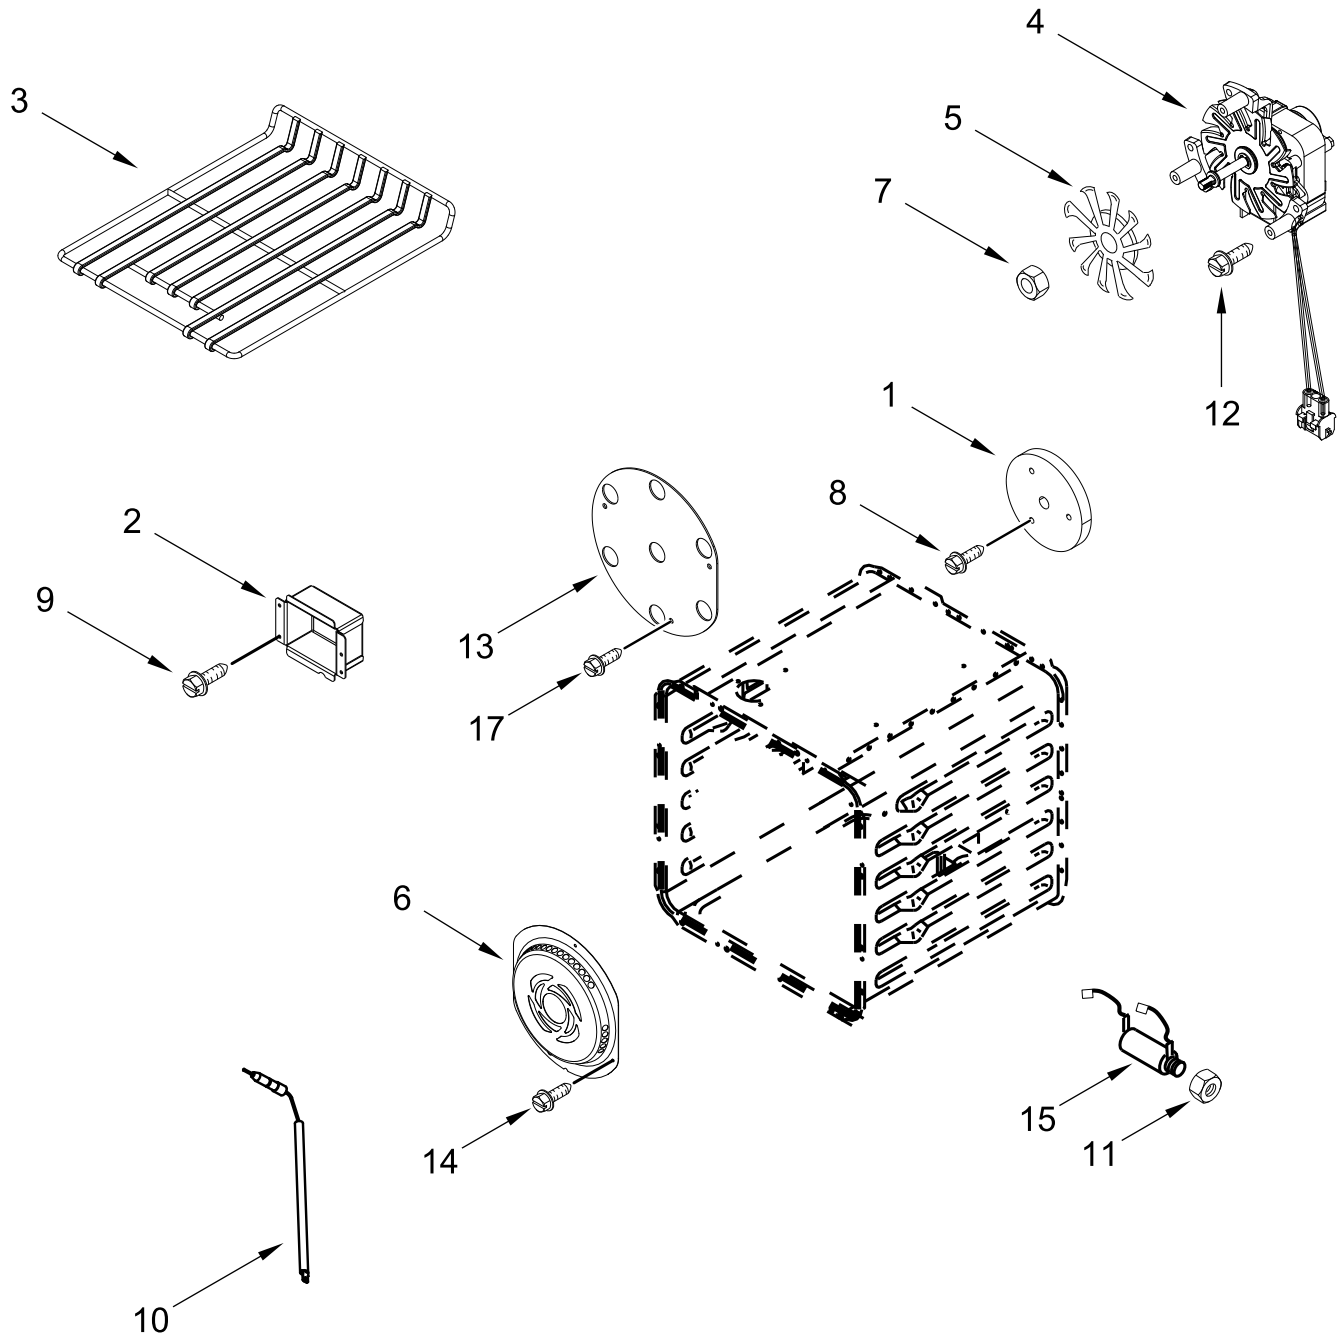

18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W11108376	Blade, Fan	10	W11205400	Electrode, Bake
2	W10308051	Box, Broil	6	W11113808	Cover, Fan	11	W11033111	Nut, Locking
3	W11111351	Rack, Oven (18")	7	W10631504	Nut, Acorn (LH)	12	W10720084	Screw
4	W10631506	Motor, Convection	8	4449154	Screw	13	W10261523	Plate, Fan
			9	7101P434-60	Screw	14	W10739592	Screw
						15	9755543	Jack, Meat Probe

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Kit, Burner Cap (Set of 4)
	W11323014	Brass, Large Burner Cap (Single)
	W11323015	Brass, Small
	W11323012	Brass, Large Kit, Bezel (Set of 4)
	W11323062	Chrome, Surface and Grill
	W11323068	Brass, Oven Bezel (Single)
	W11317495	Brass, Griddle
	W11323067	Brass, Oven
	W11316873	Brass, Surface and Gril
	W11323024	Chrome, Griddle
	W11317499	Chrome, Oven
	W11323061	Chrome, Surface and Grill