




30" RISE BUILT-IN ELECTRIC SINGLE OVEN WITH CONVECTION

MODELS:

JJW3430IL00 (Stainless)


CONTROL PANEL PARTS

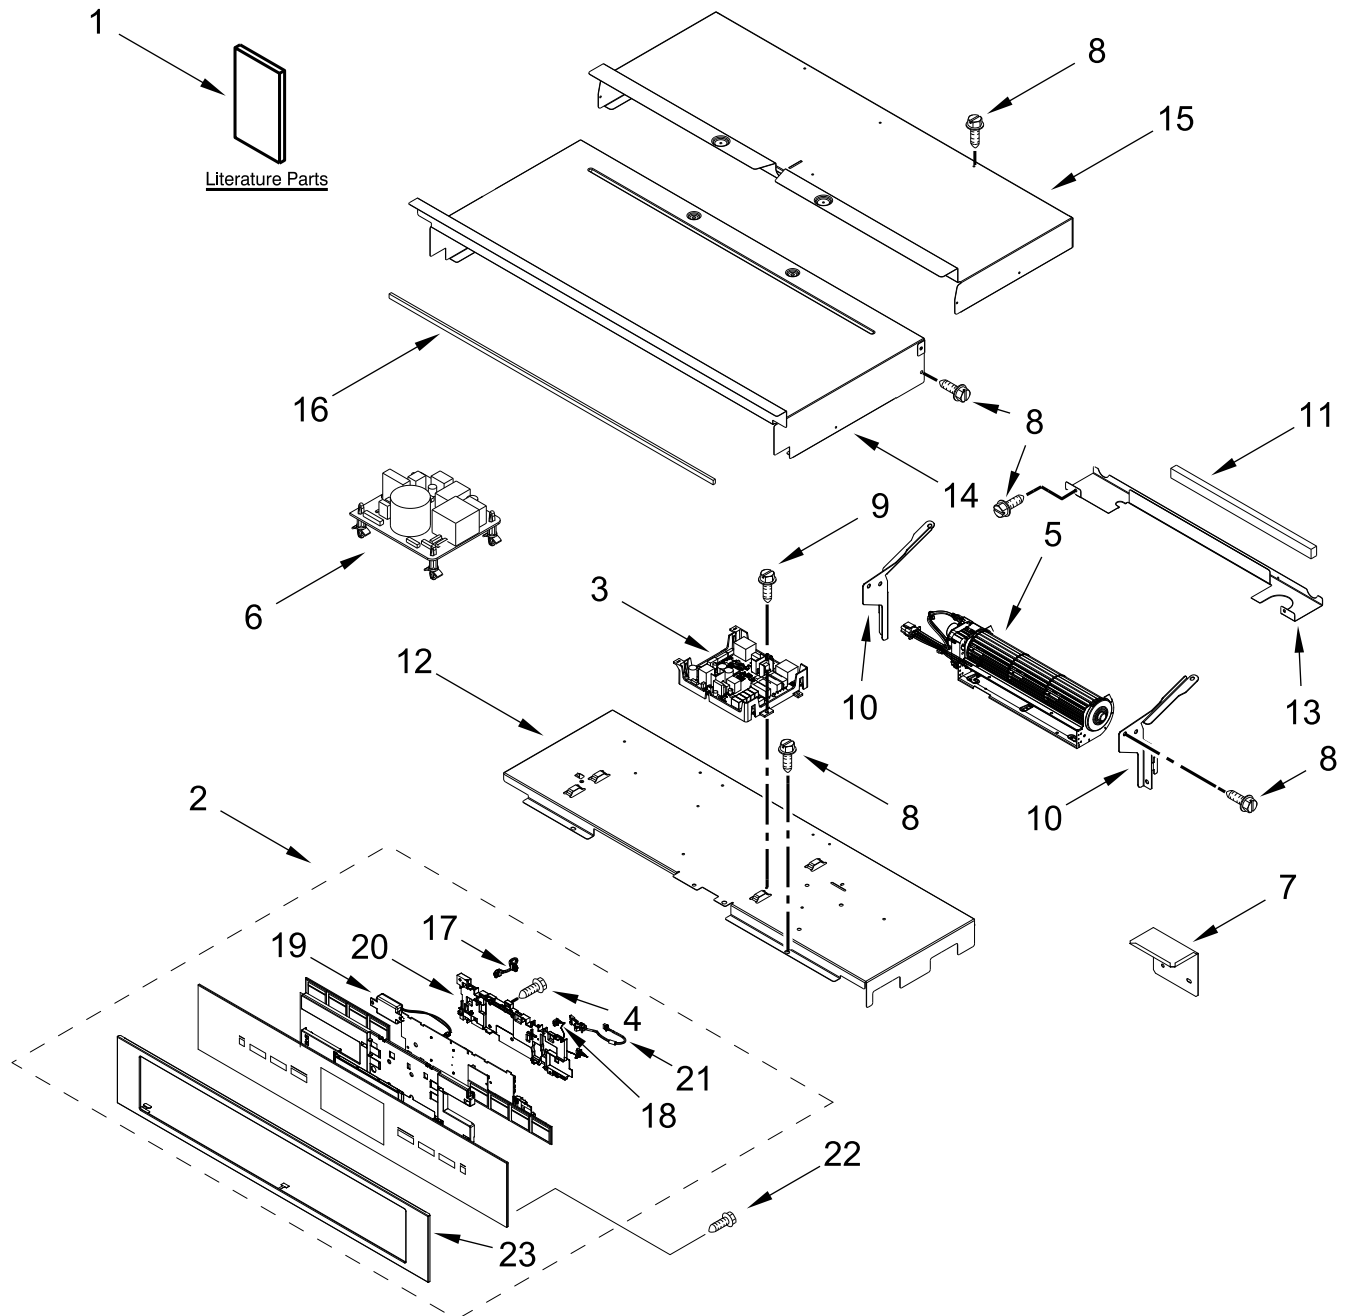

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	9	7101P434-60	Screw	23		Skin, Control Panel
	W11235343	Guide, Use & Care (Oven)	10	W10655463	Bracket, Blower (Left)		W11197498	Stainless
	W11235620	Instructions, Installation		W10655462	Bracket, Blower (Right)			FOLLOWING PARTS NOT ILLUSTRATED
	W10351318	Instructions, Undercounter Install	11	4451758	Block, Foam		W11216664	Harness, Main
	W11234441	Guide, Internet Connectivity	12	W10864102	Tray, Electronic		W11216641	Harness, Signal
	W11235303	Diagram, Wiring	13	W10655465	Chassis, Back Divider		W11219538	Harness, Door Latch
	W11284426	Sheet, Tech	14	W10444125	Chassis, Cover Top Front 30"		W10562910	Harness, EOL
2		Assembly, Control Panel	15	W10667383	Chassis, Cover Top Back 30"		W11234542	Assembly, Antenna & Housing
	W11196778	Stainless	16	W10728475	Gasket, Rubber		4450800	Screw, Grounding
3	W11281213	Appliance Manager, Copernicus	17	W10566973	Harness, Keypad (Left To Center)		W10487999	Clip, Harness
4	W10489172	Screw	18	W10524350	Harness, Keypad (Right To Center)		W11132988	Strap, Lead Ground
5	W11200129	Blower	19	W10568405	Assembly, Speaker		4448664	Clamp, Conduit
6	W10260060	Board, Power Supply	20	W10668510	Housing		W10655464	Bracket, Harness
7	W10810292	Shield, WiFi Access	21	W10575307	Jumper Harness, Power Supply		4454842	Tie, Cable
8	7101P426-60	Screw	22	7101P633-60	Screw (Black)		W10431304	Bag, Hardware


OVEN PARTS

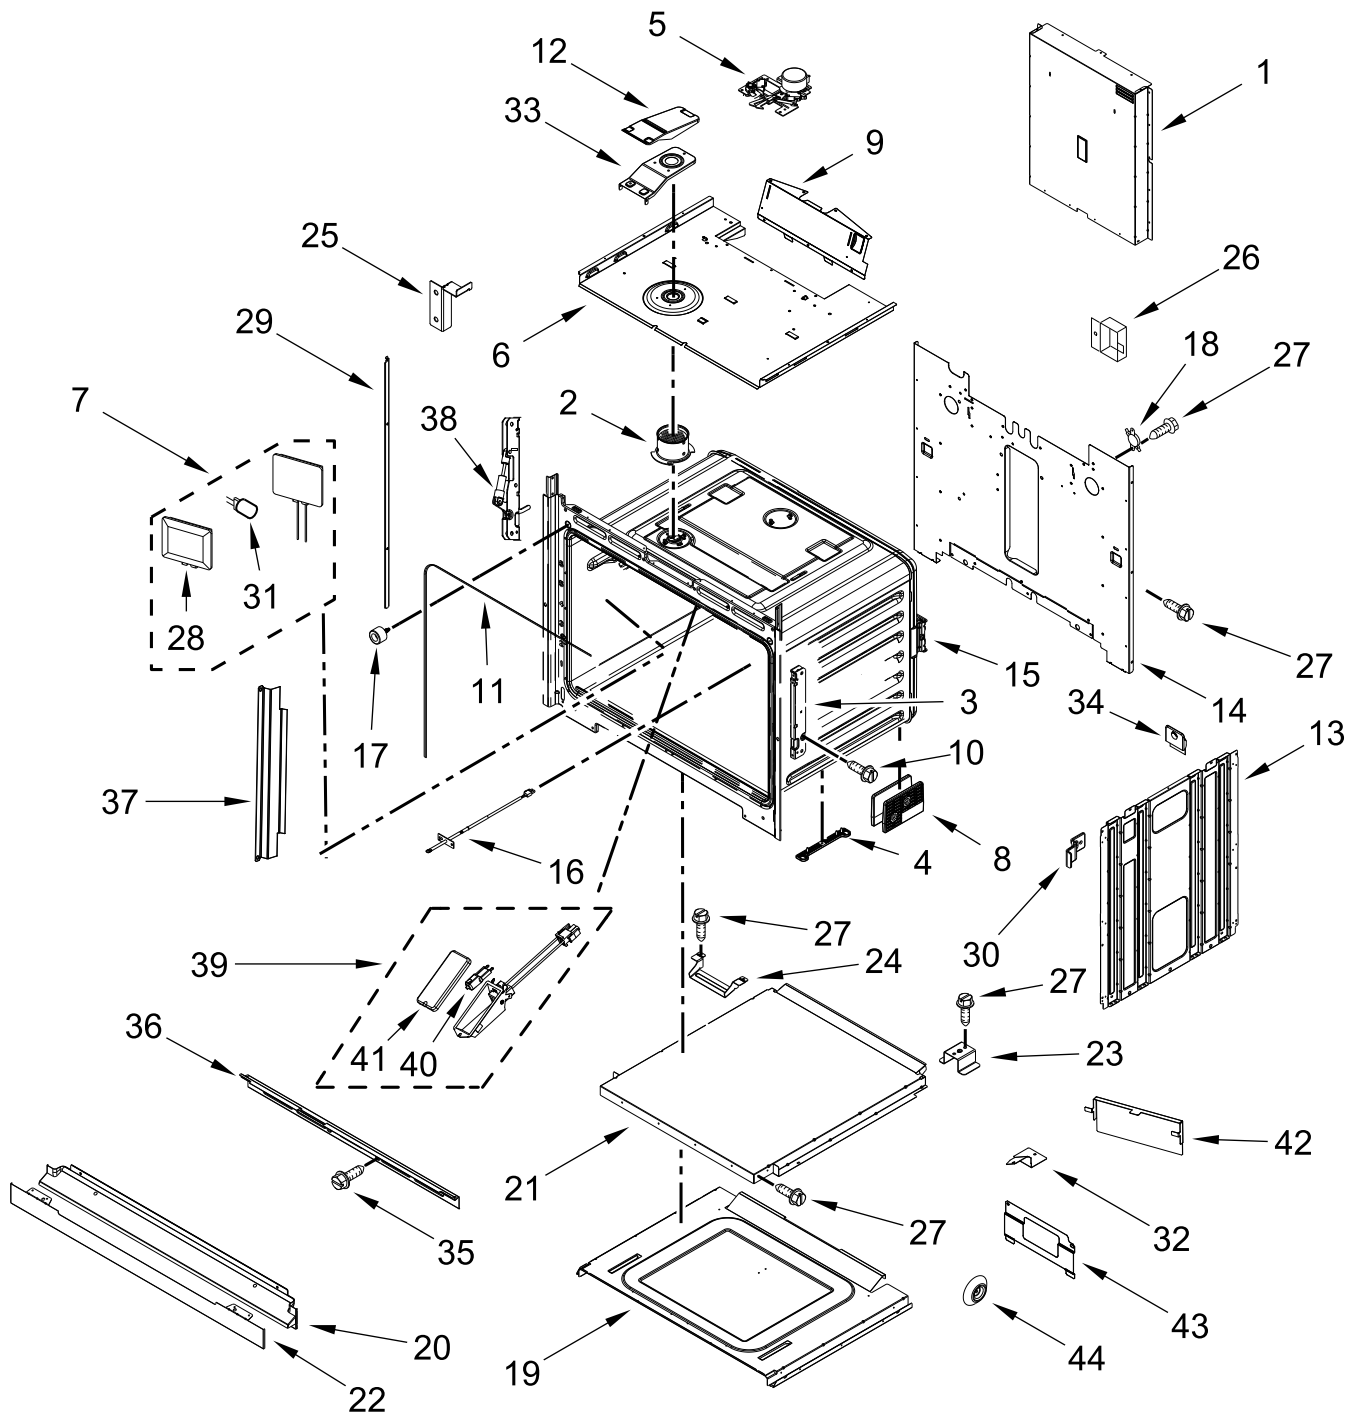

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10318196	Duct, Chassis Back	20		Assembly, Bottom Vent	34	W10834286	Spacer, Center
2	W11085298	Tube, Vent		W10327374	Stainless	35	7101P427-60	Screw
3	W11044775	Receiver, Hinge	21	W10283008	Chassis, Bottom Duct	36	W10283036	Vent, Top 30"
4	W10618102	Spacer, Base	22		Trim, Bottom Vent	37	W10791505	Shield, Front Frame Heat
5	W10618131	Latch, Motorized		W10327377	Stainless	38	W11045086	Receiver, Slow Close Hinge
6	W10904158	Top, Chassis	23	W10213759	Support, Air Channel	39	W11284709	Assembly, Light (Top)
7	W11205574	Assembly, Oven Light	24	W10351308	Spacer, Chassis Bottom Duct	40	W10169757	Bulb, Light
8	W10618101	Foot, Base	25	W10863234	Bracket, Side Cover (Left)	41	W10169756	Lens, Light
9	W10904163	Deflector, Blower		W10863233	Bracket, Side Cover (Right)	42	W11034940	Shield, Slow Close Hinge
10	W10254050	Screw	26	8285593	Cover, Connector	43	W10846765	Shield, Outer
11	W10739089	Gasket	27	7101P426-60	Screw	44	W10618105	Spacer, Lateral
12	W10616810	Cover, Vent Exhaust	28	W10472386	Lens, Light	FOLLOWING PARTS NOT ILLUSTRATED		
13	W10663556	Side, Chassis (Left)	29		Cover, Side Trim			
	W10318190	Side, Chassis (Right)		W10344481	Black (Left)	W10520715		Insulation, Wrap
14		Back, Chassis (Not Serviced)		W10344480	Black (Right)	W10566640		Insulation, Cavity
15		Liner, Oven (Not Serviceable)	30	W10834501	Spacers, Front	W10464568		Insulation, Control Knob
16	W11208463	Probe, Sensor	31	W10472384	Bulb, Light			
17	W10351278	Bumper & Screw	32	W10832249	Shield, Bottom (Left)			
18	4449751	Thermostat (TOD)		W10832250	Shield, Bottom (Right)			
19	W11238787	Base, Chassis	33	W10616809	Base, Vent Exhaust			


OVEN DOOR PARTS

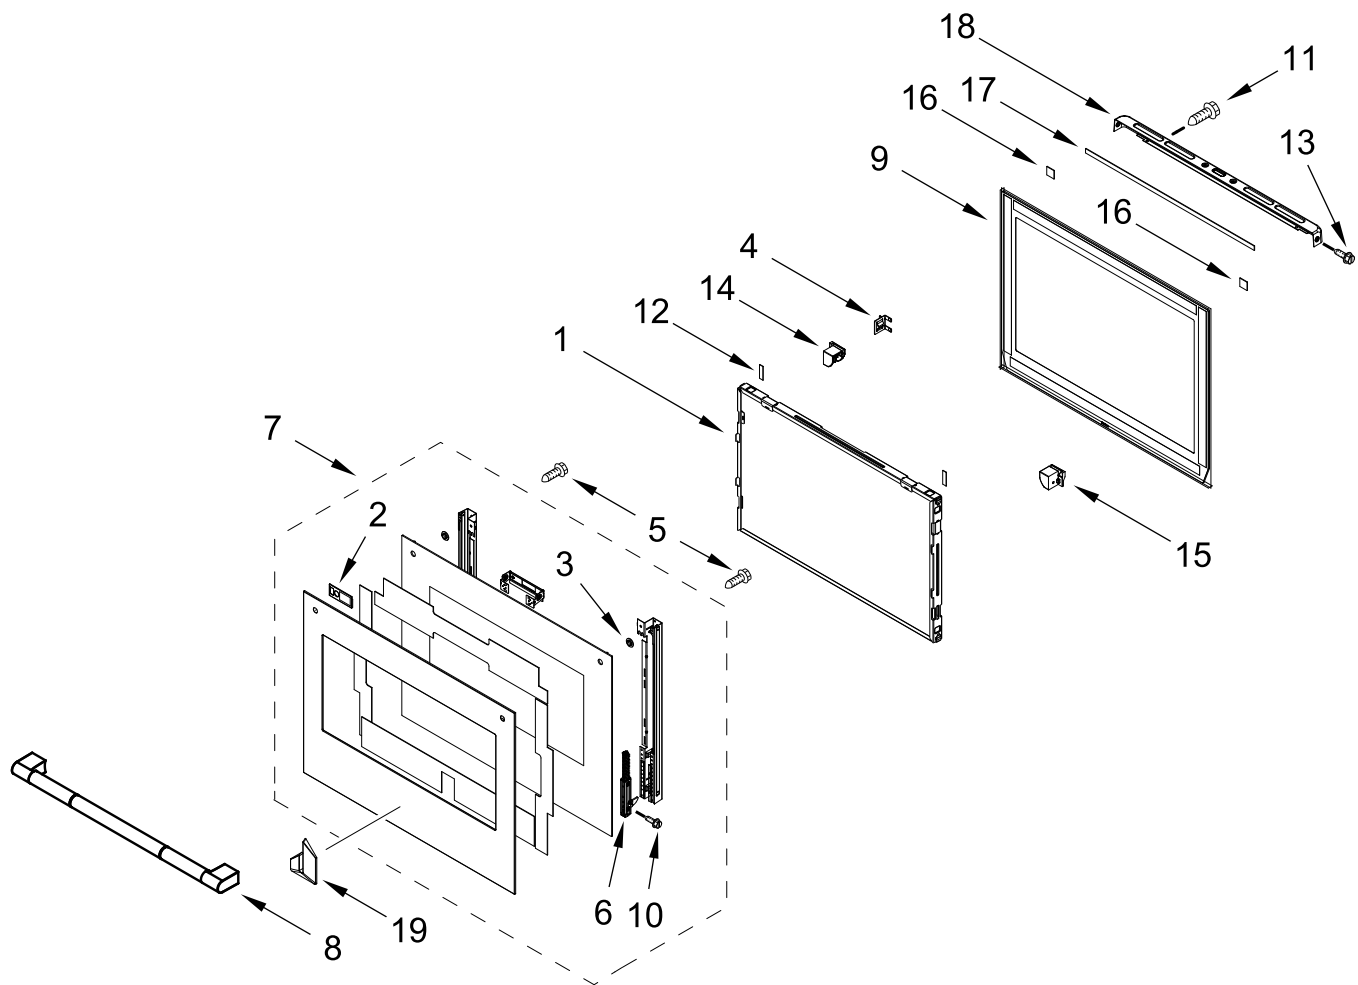

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11213479	Assembly, Window Pack	8		Assembly, Handle	15	W10581826	Bracket, Door (Right)
2	W10650497	Spacer, Handle		W11251202	Stainless	16	W10517428	Spacer, Vent
3	W10319024	Washer, Door	9	W11220347	Assembly, Glass Cavity	17	W10489273	Pad, Vent
4	W10549747	Clip, Spring	10	3196183	Screw	18	W11280091	Vent, Top Metal
5	W10480830	Screw	11	7101P427-60	Screw	19		Nameplate
6	W11220343	Hinge, Door	12	W10517440	Spacer		W11238657	Stainless
7		Assembly, Door	13	W10284411	Screw with Washer			
	W11199335	Stainless	14	W10581831	Bracket, Door (Left)			

INTERNAL OVEN PARTS

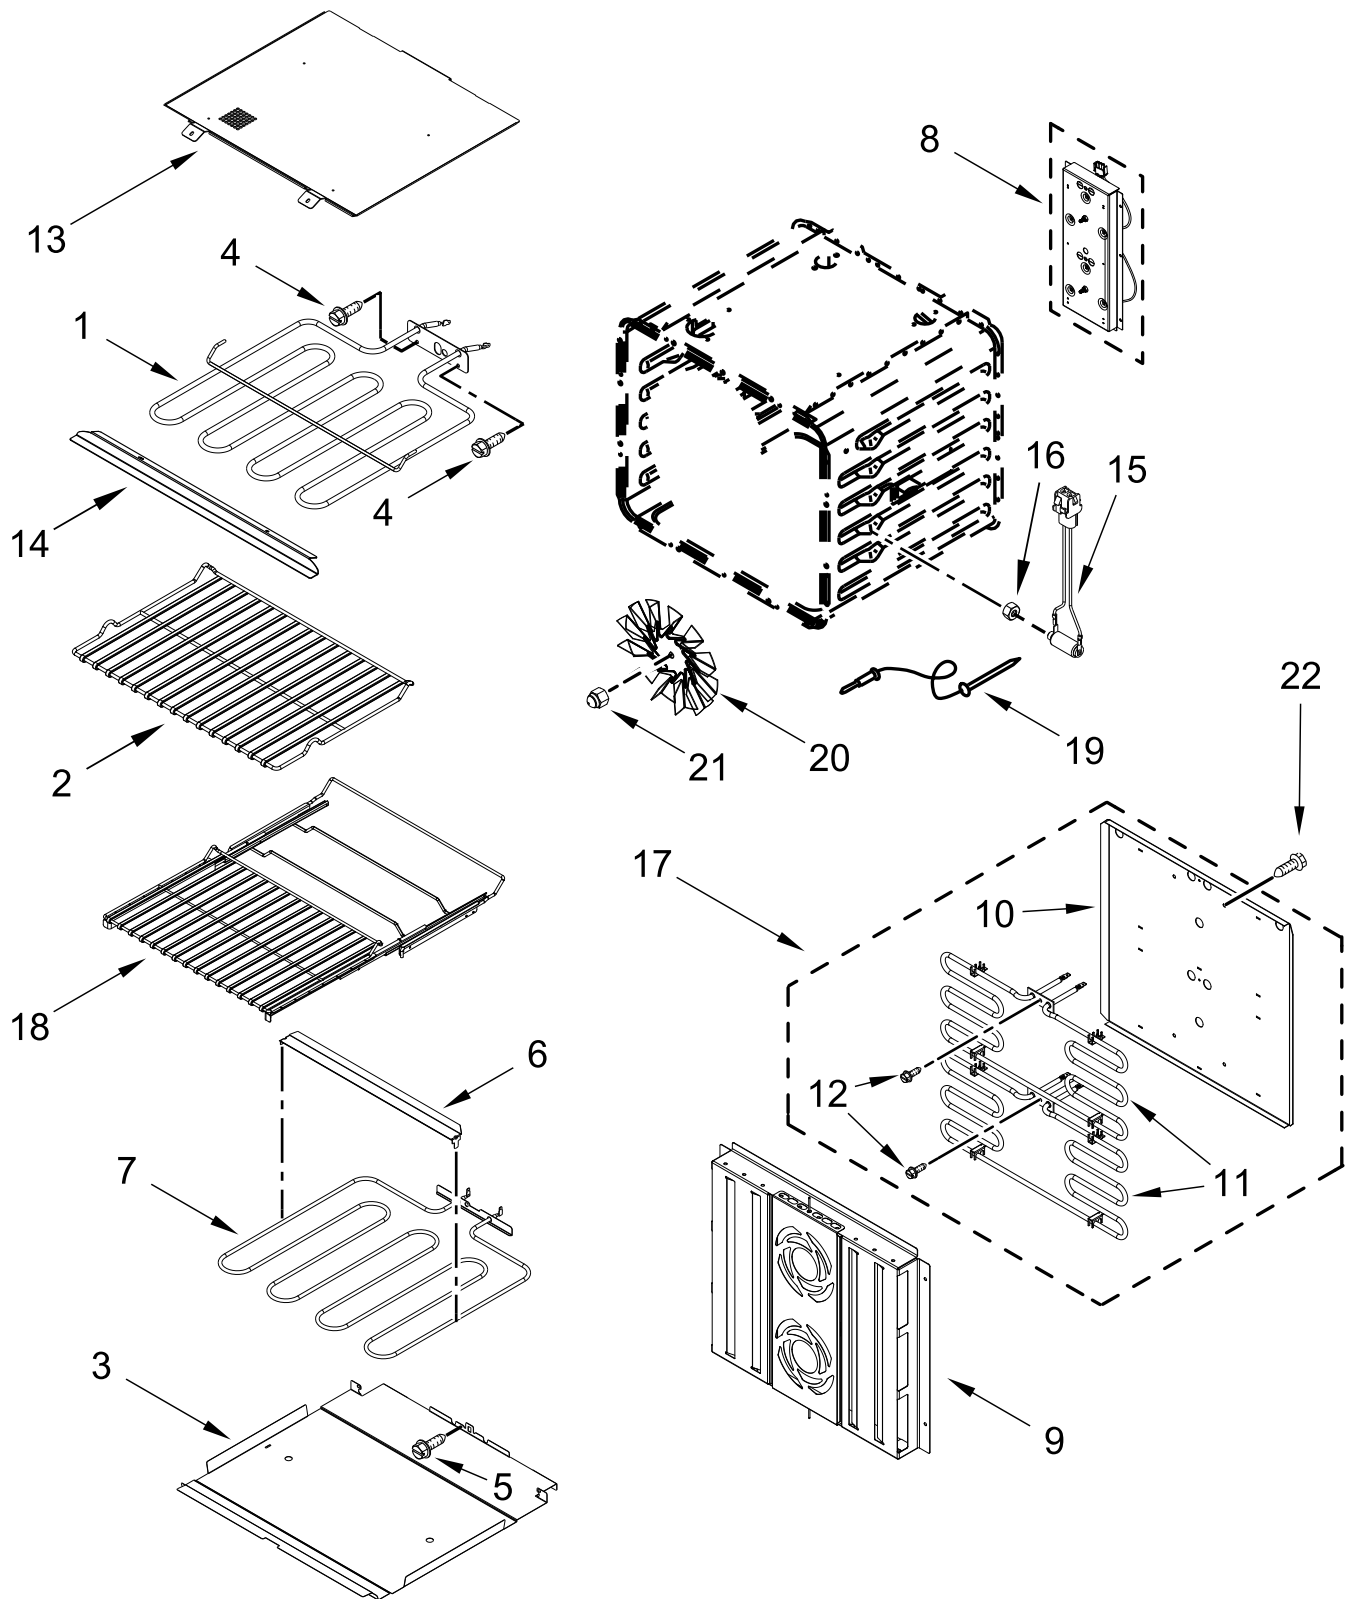

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10764078	Element, Broil	11	W10663735	Element, Convection	21	W10631504	Nut, Acorn (LH)
2	W11242906	Rack, Oven	12	W10236129	Screw		W10803140	Nut, Acorn (RH)
3	W10318198	Tray, Hidden Bake	13	W10911205	Shield, Broil Element	22	W10739592	Screw
4	7101P434-60	Screw	14	W10588737	Shield, Broil Front			
5	7101P426-60	Screw	15	W11252826	Jack, Meat Probe			
6	W10282957	Crossbar, Hidden Bake Tray	16	W11033111	Nut, Locking			
7	W10546517	Element, Bake	17	W10854021	Assembly, Convection Element			
8	W11200176	Assembly, Convection Motor	18	W11256305	Rack, Sliding			
9	W11313747	Assembly, Baffle	19	9755542	Probe, Temperature			
10	W10853277	Shield, Convection	20	W10803141	Blade, Convection Fan			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	285006	Black
	350938	Gray Primer

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic