




30" FREESTANDING ELECTRIC RANGE

MODELS:

WFE320M0JS1 (Stainless)


COOKTOP PARTS

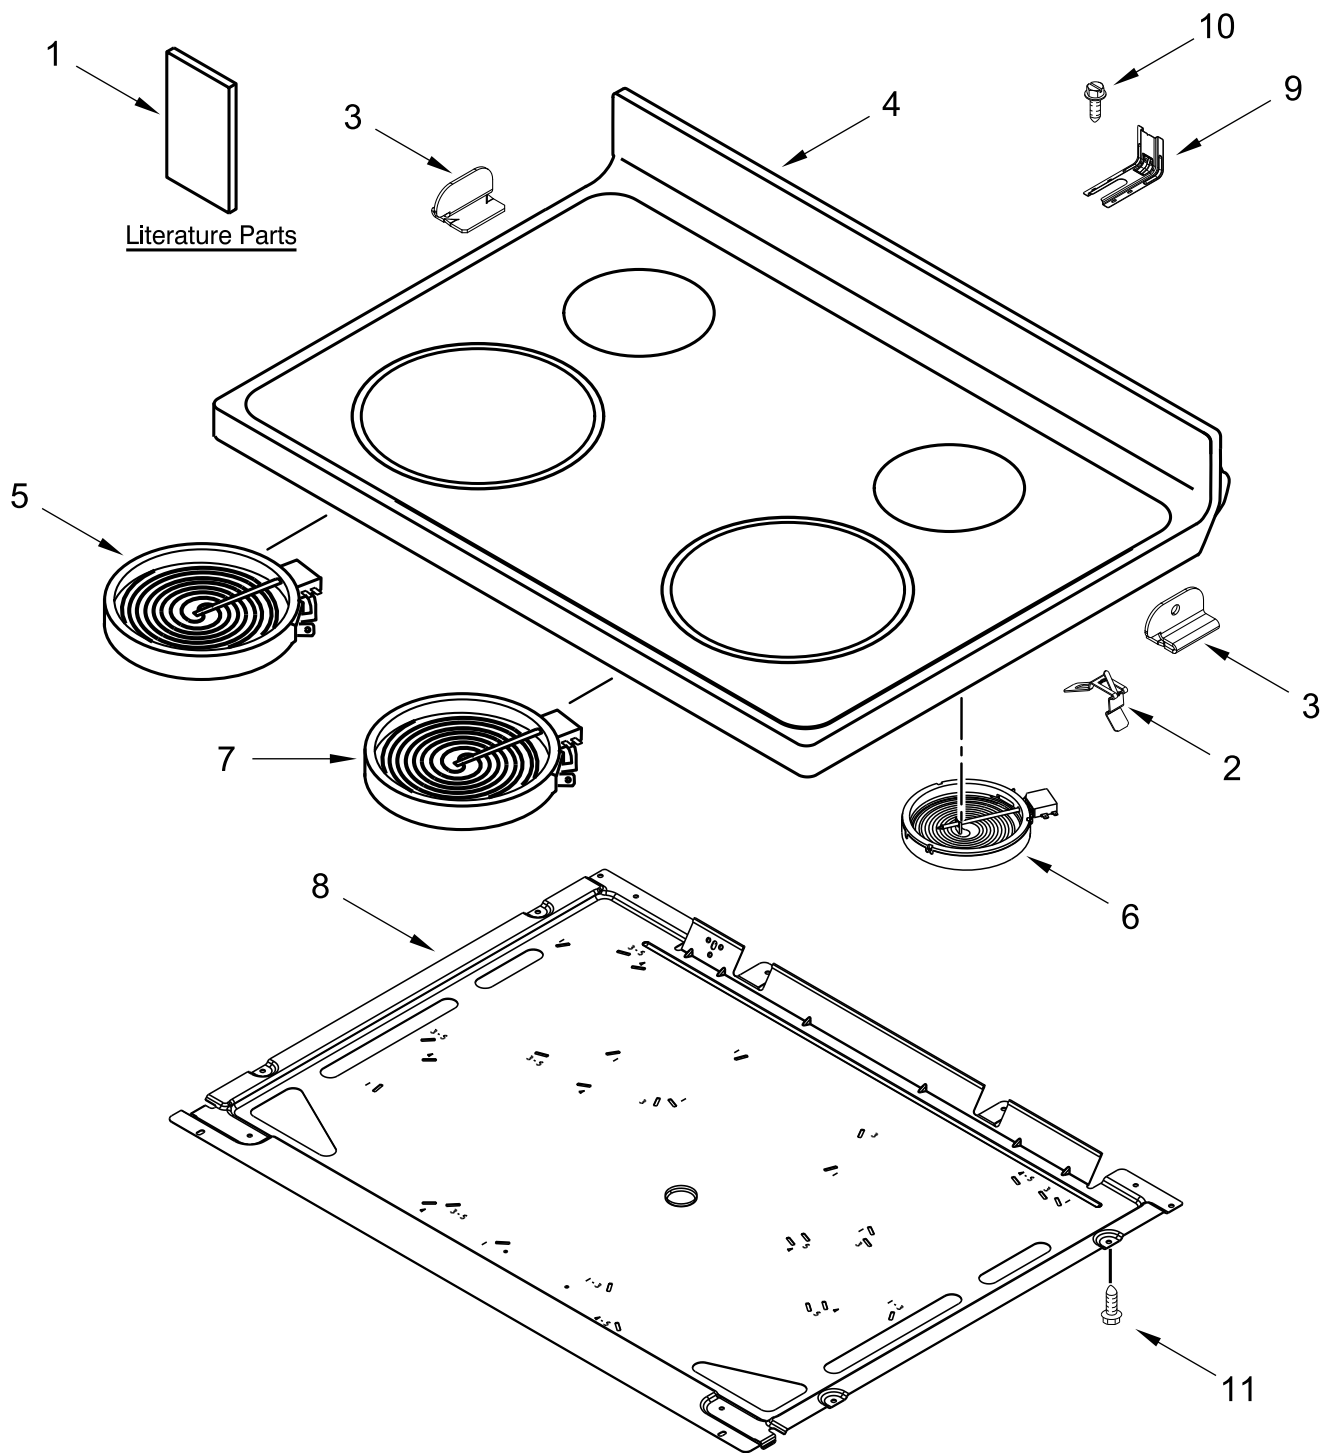

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4		Cooktop	9	W11379945	Bracket, Anti-Tip
	W11333124	Use and Care Guide		W11034830	Black	10	7101P485-60	Screw, Anti-Tip Kit
	W11333088	Installation Instructions	5	W10275048	Element (3000/1400W)	11	3196169	Screw
	W11351204	Wiring Diagram			(Left Front)			FOLLOWING PARTS NOT ILLUSTRATED
	W11351201	Tech Sheet	6	W10248261	Element (1200W)		W11452620	Harness, Main
2	W10225448	Spring, Element			(Left Rear and Right Rear)		W11134603	Harness, Cooktop (Left)
3	W10607641	Bracket, Cooktop (Left)	7	W10248262	Element (2500W)		W11134551	Harness, Cooktop (Right)
	W10607642	Bracket, Cooktop (Right)			(Right Front)			
			8	W10691223	Pan, Radiant Element			


CONTROL PANEL PARTS

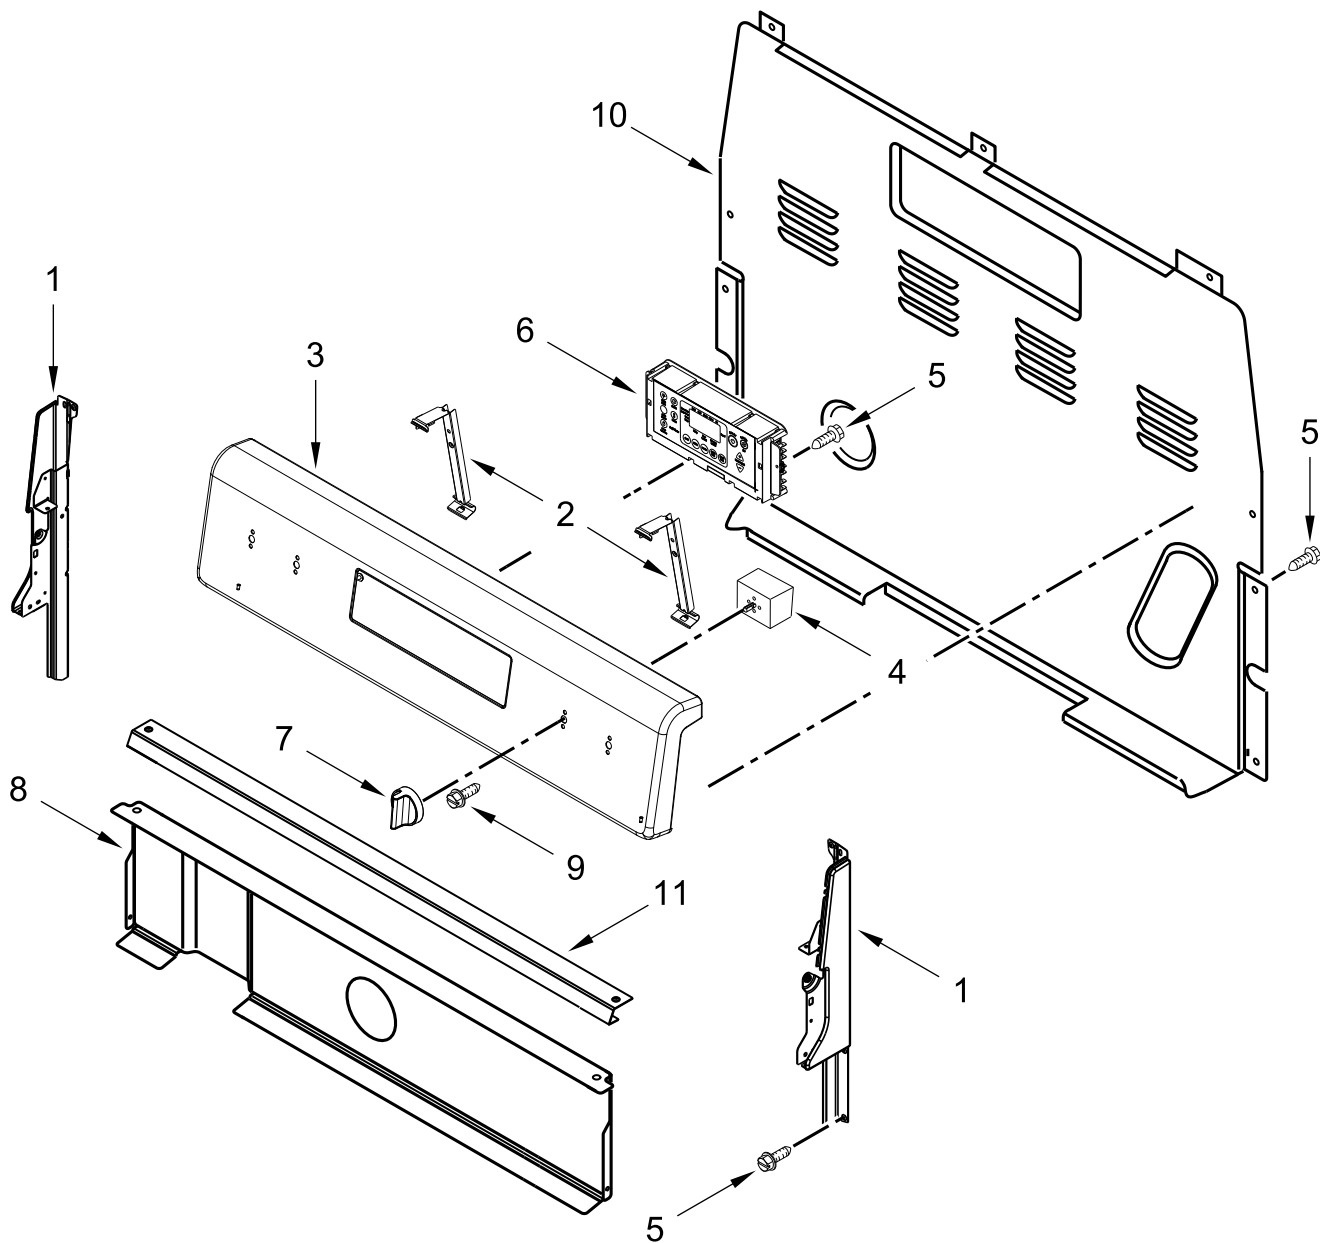

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	W10434452	Switch, Infinite (Dual)	7		Knob
	W11130372	Black (Left)			(Left Front)		W11022718	Black
	W11130379	Black (Right)		3148951	Switch, Infinite	8	W10134247	Shield, Heat
2	W10695491	Bracket, Control			(Left Rear and Right	9	3400882	Screw
3		Console, Assembly			Rear)	10	8272473	Cover, Upper Rear
	W11027387	Stainless		3148954	Switch, Infinite	11	W10525121	Bracket, Console
					(Orange)			Mounting
					(Right Front)			
			5	3196178	Screw			
			6		Control, Electronic			
					(LCX)			
				W11511589	Black			


CHASSIS PARTS

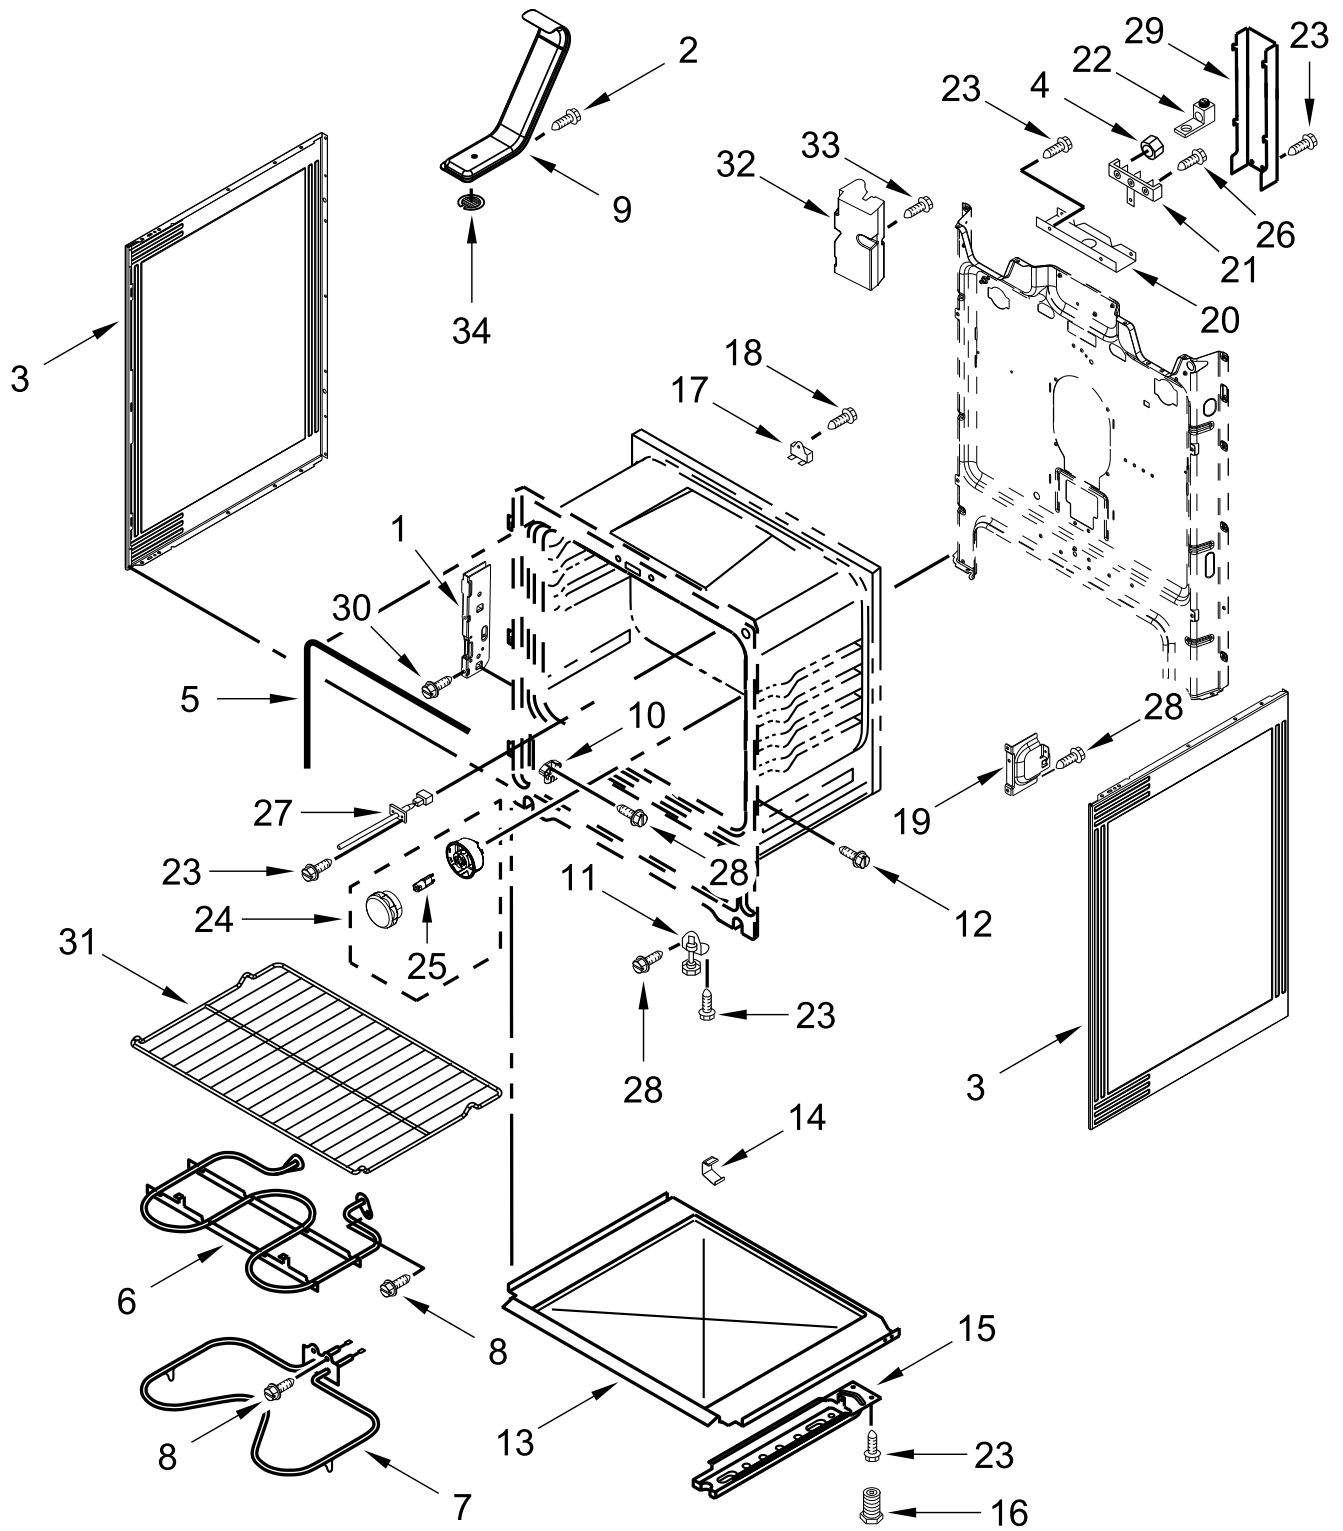

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	15	W10390008	Base Rail Assembly (Left)	26	3400016	Screw
2	3196154	Screw				27	W10181986	Sensor, Oven
3		Panel, Side		W10390007	Base Rail Assembly (Right)	28	3196169	Screw
	W10162245	Black				29	W10326122	Cover, Terminal Block
4	3400029	Nut	16	W10058460	Foot, Leveling	30	W10031780	Screw
5	W10129032	Seal, Door	17	3196548	Fuse, Thermal	31	W11173792	Rack, Oven
6	W10308476	Element, Broil	18	3196172	Screw	32	W10910404	Counterweight
7	W11022836	Element, Bake	19	W10404688	Clip, Oven Support	33	W11034869	Screw
8	3196174	Screw	20	3186034	Bracket, Service	34	9761301	Screen, Vent
9	W10134285	Tube, Vent	21	W10245259	Block, Terminal			FOLLOWING PARTS NOT ILLUSTRATED
10	W10674705	Glide, Drawer Front	22	W10281322	Kit, Bare Wire Adapter Block		8273263	Insulation, Wrap
11	W10341186	Front Foot Assembly	23	3196178	Screw		8272611	Insulation, Back
12	W10067840	Screw	24	W11430367	Light Assembly		W10333344	Insulation, Flue
13	8054068	Retainer, Insulation	25	W10571723	Bulb, Halogen 40 Watts			
14	W10137382	Clip, Panel						

DOOR PARTS

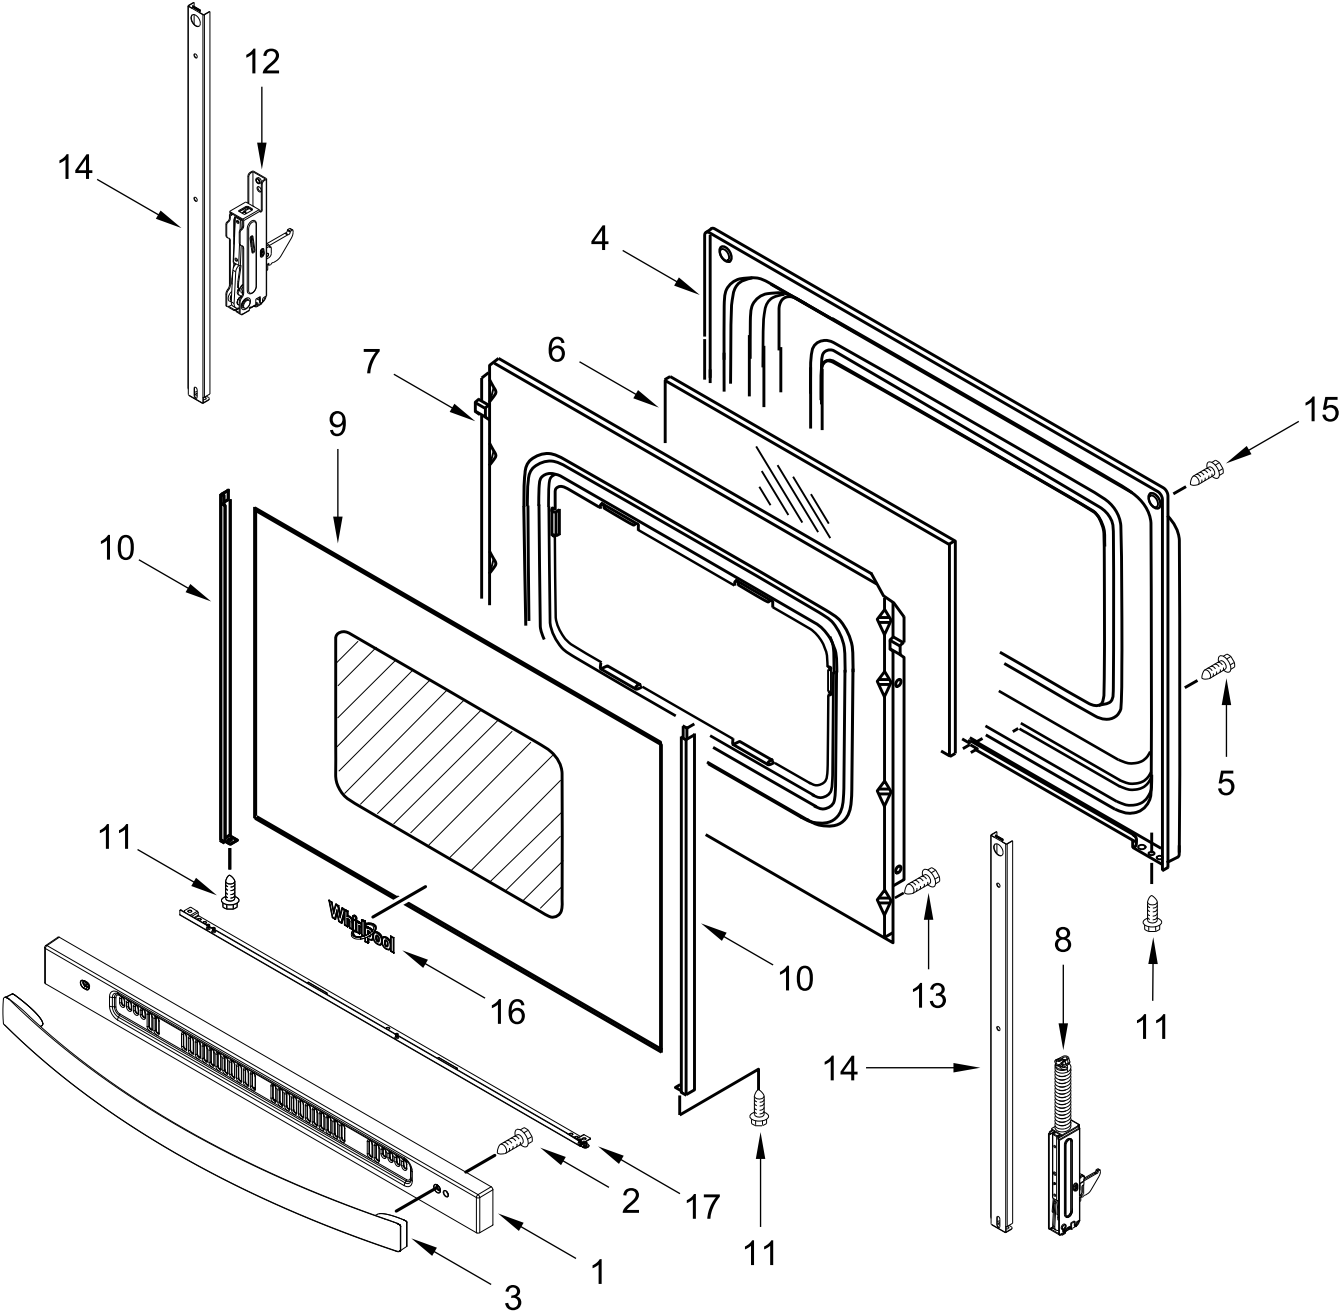


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10310922	Black
2	W10480830	Screw
3		Handle, Door
		(Includes Standoff)
	W11039070	Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	W11367326	Glass, Inner
7	9761505	Retainer, Insulation

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10299225	Hinge, Active
9		Glass Assembly, Outer Door
	W10409946	Black
10		Trim, Side
	W10746436	Black (Left)
	W10746435	Black (Right)
11	W10327235	Screw
12	W10299227	Hinge, Door (Passive)
13	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	W11379944	Strap, Door
15	W10200660	Screw
16	W10884775	Badge
17		Trim, Lower Door
	8523177	Black

DRAWER PARTS

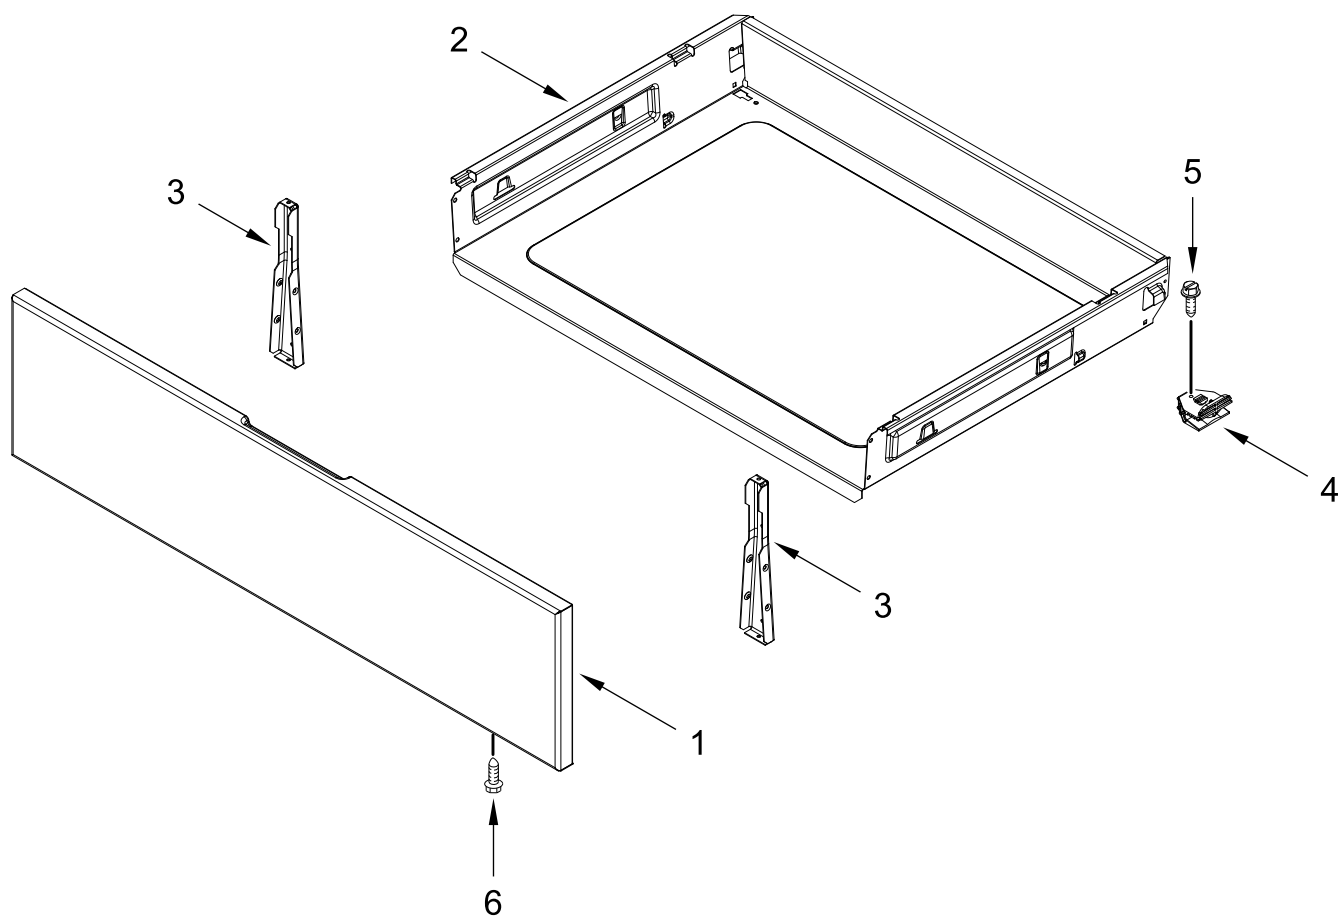

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer Front	3	W10462910	Bracket, Mounting Drawer	5	3196165	Screw
	W10330070	Stainless				6	3196169	Screw
2	W10688022	Drawer, Storage	4	W10674708	Glide, Drawer Rear			

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	206922	Primer (White)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10355016	Cleaner, Stainless Steel
	W10355051	Cleaner, Cooktop
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting