


DG 2401 C

C6N0EL001X

tav. 1
cat. 18.C3705

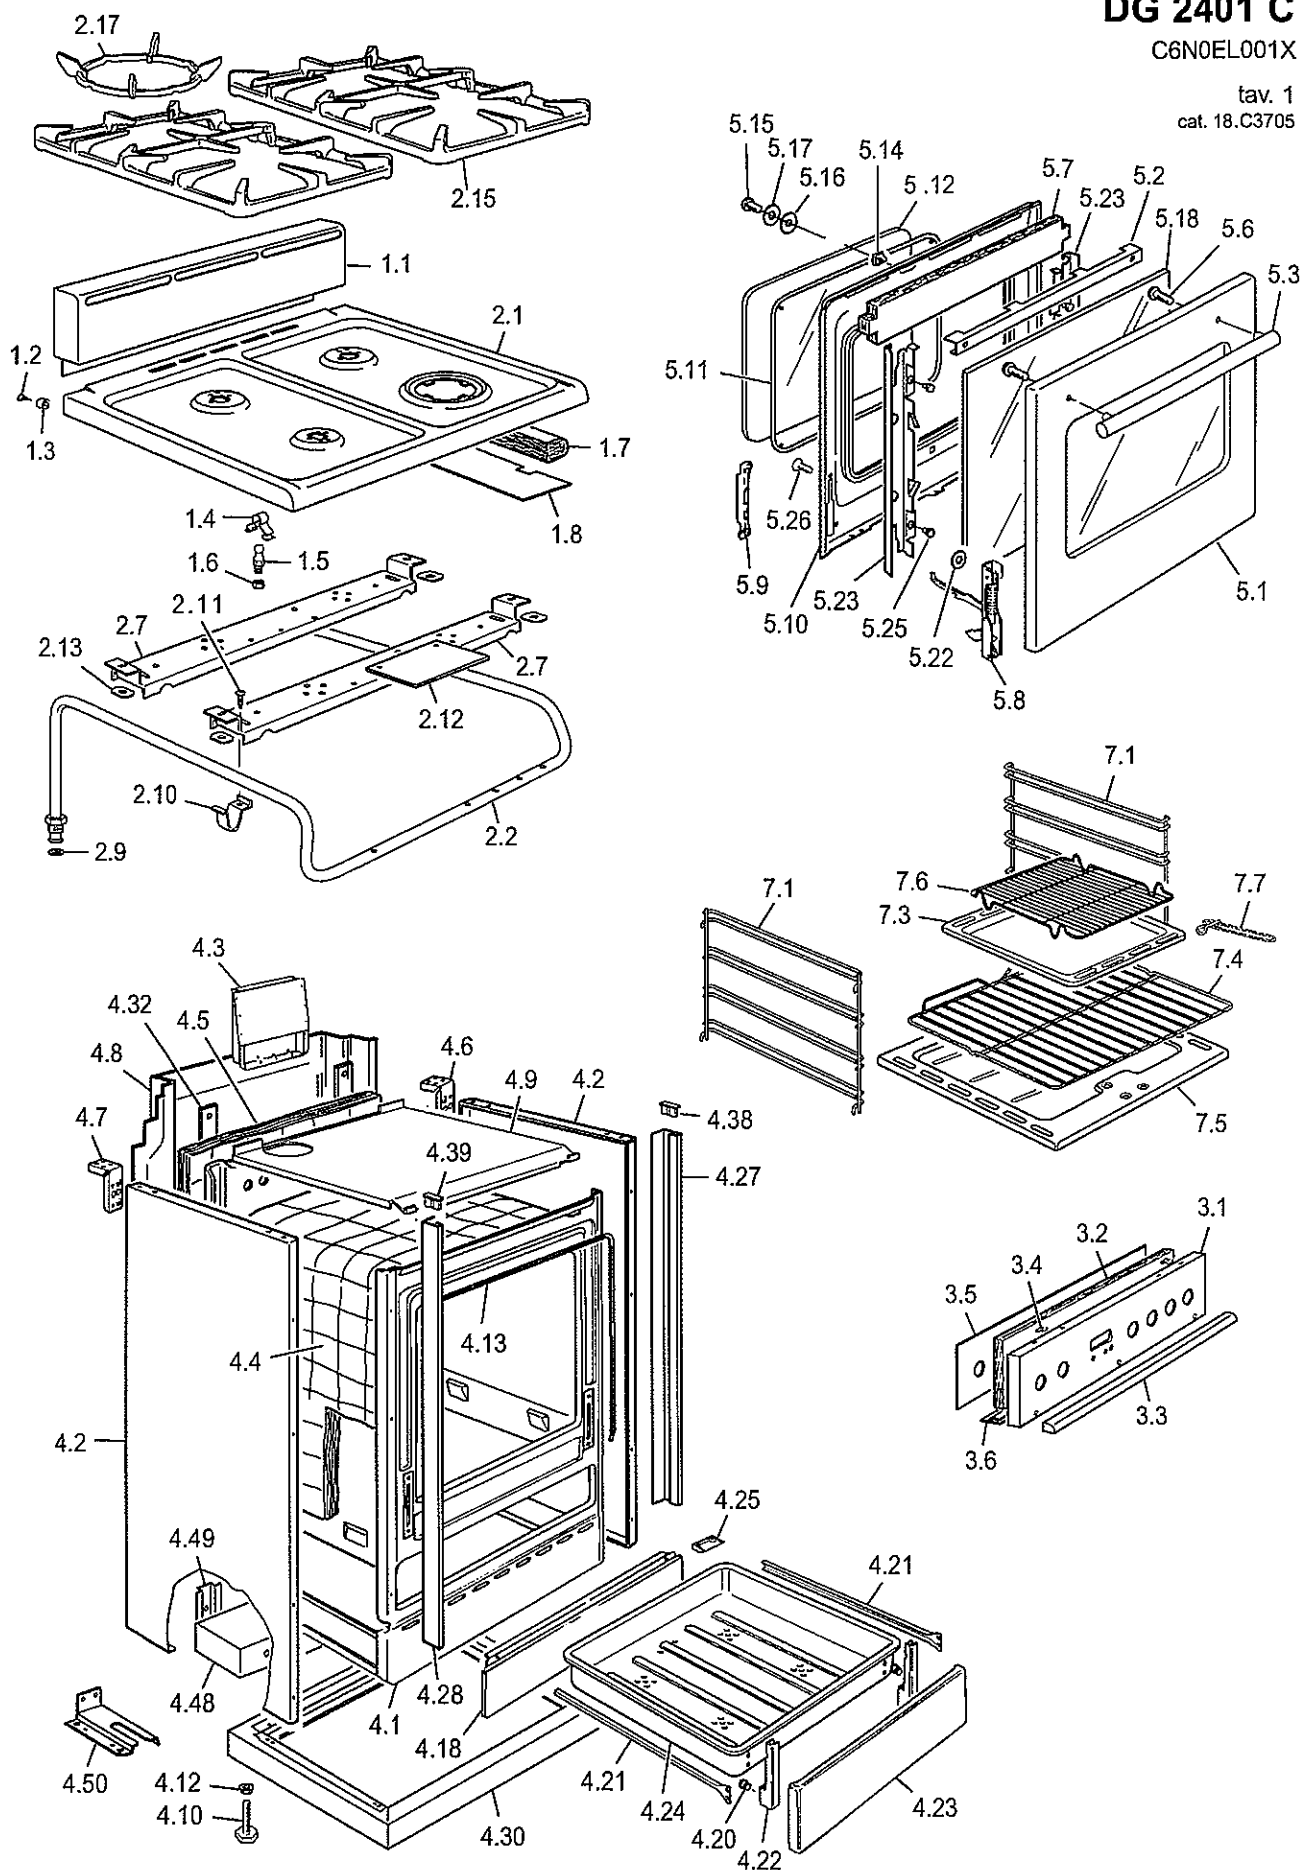


REF.	CODE	DESCRIPTION
1.1	103839061	Rear trim
1.2	001130	Screw
1.3	040031002	Plug
1.4	035100	Spring
1.5	103615	Pin
1.6	214062	Nut
1.7	030150.1	Cooktop insulation
1.8	094505	Insulation support
2.1	3316S405S	Cooktop
2.2	3426N40005	Manifold
2.7	51B6N01	Burners support
2.9	053024.1	Gasket
2.10	094254	Fixing plate
2.11	001227	Screw
2.12	094504	Electronic timer protection
2.13	003066	Insulation washer
2.15	217602	Pan-support
2.17	217498	Wok grid
3.1	35N6P17SNT	Control panel
3.2	030149.1	Control panel insulation
3.3	103761	Control panel trim
3.4	213007	Clip
3.5	4116N03	Insulation support
3.6	053092	Control panel seal
4.1	4506N1GG12	Oven frame
4.2	36C6100S	Side panel
4.3	46A6N04Z	Funnel
4.4	030113.1	Oven insulation
4.5	030085.1	Rear insulation
4.6	094417DX	Rear right coupler
4.7	094417SX	Rear left coupler
4.8	4116N04	Rear panel
4.9	4216101Z	Upper shelter
4.10	103854	Shim
4.12	214056	Nut shim
4.13	053039	Seal
4.18	103160061	Base panel
4.20	040012	Buffer
4.21	094075	Drawer rail
4.22	094138	Drawer fixing bracket
4.23	39E6601YS	Drawer front panel
4.24	39K6101Y	Drawer
4.25	081073	Drawer stopper
4.27	083290061	Right front trim
4.28	083289061	Left front trim
4.30	68061010	Plinth
4.32	4219604Z	Rear insulation support
4.38	081068/NS	Right stopper
4.39	081067/NS	Left stopper
4.48	103326	Balance weight
4.49	213016	Balance weight bracket
4.50	094495	Anti-tip stability device

REF.	CODE	DESCRIPTION
5.1	032611669E	Door glass
5.2	4116111	Handle bar
5.3	037231062A	Door handle
5.6	001071	Screw M5x16
5.7	030097.1	Door insulation
5.8	063089	Door hinge male
5.9	063025	Door hinge female
5.10	373FF707K	Door panel
5.11	053084	Gasket
5.12	0311000.1T	Inner glass
5.14	214021	Nut
5.15	001214	Screw
5.16	003035	Washer
5.17	103205	Washer
5.18	0312039	Third glass
5.22	003041	Washer - R 5,7x15
5.23	51B5616	Inner glass support
5.25	040056	Third glass rubber
7.1	217291	Shelf support
7.3	48B5001K	Grill-pan tray
7.4	217439	Oven shelf
7.5	47EN604K	Oven floor
7.6	217251	Grill-pan grid
7.7	037253	Grill-pan grid handle

DG 2401 C

C6N0EL001X

tav. 2
cat. 18.C3705

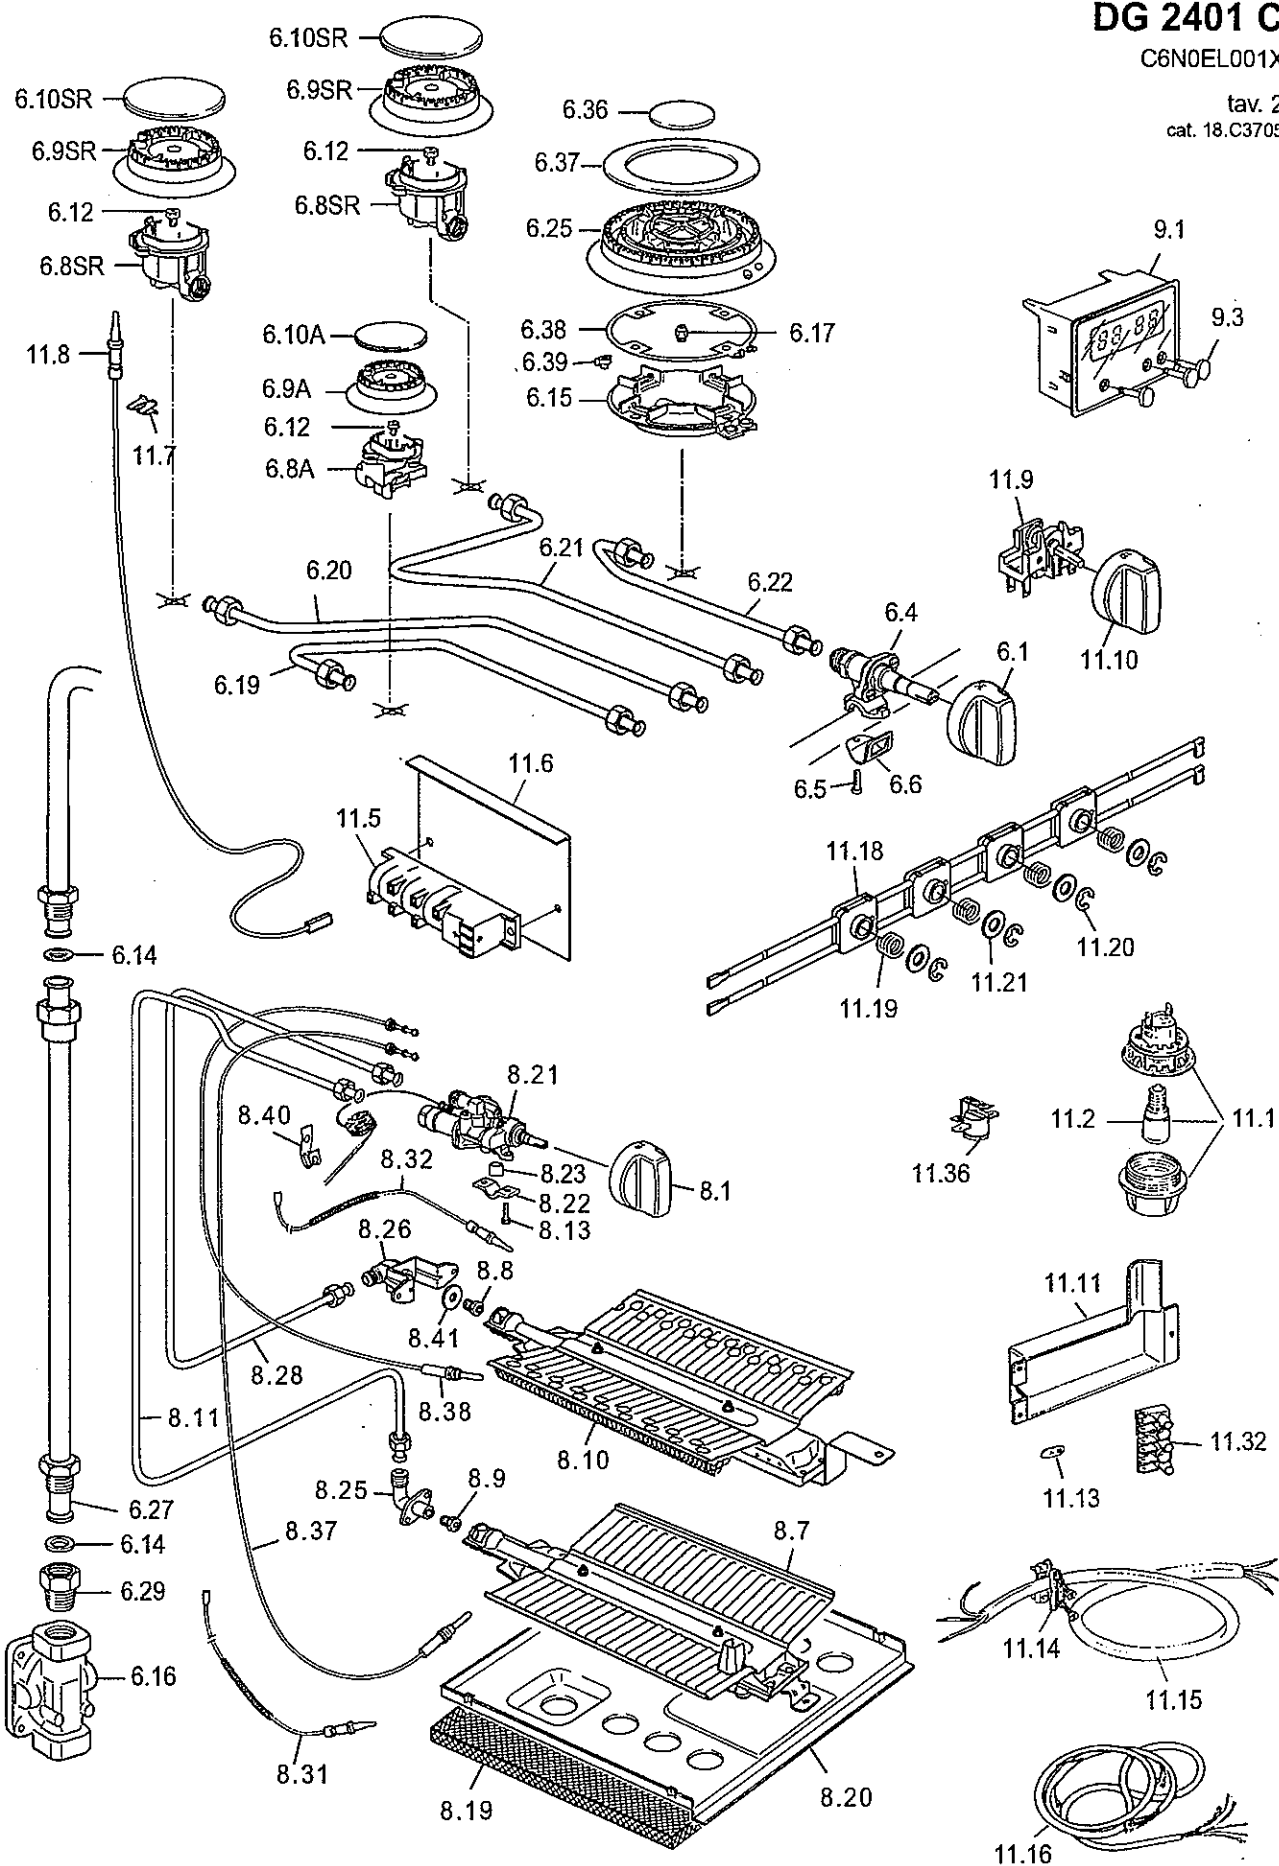

REF.	CODE	DESCRIPTION
6.1	2183A07367	Burner knob
6.4	106240	Tap - Ø 0.27 A
=	106241	Tap - Ø 0.32 SR
=	106243	Tap - Ø 0.65 TR
6.5	001233	Tap fixing screw
6.6	094382	Tap bracket
6.8A	215465	A burner-cup
6.8SR	215466	SR burner-cup
6.9SR	068110001S	SR burner head
6.9A	068109001S	A burner head
6.10A	216129005A	A burner-cap
6.10SR	216130005A	SR burner-cap
6.12	101290	Injector - Ø 0.90 - AUX
=	101292	Injector - Ø 0.55 - AUX
=	101225	Injector - Ø 1.18 - SR
=	101293	Injector - Ø 0.72 - SR
6.14	053024.1	Elbow gasket
6.15	215469	Burner cup TR
6.16	103841	Gas pressure regulator 1/2" NG
6.17	101291	TR injector - Ø 1.70
=	101294	TR injector - Ø 1.02
6.19	029795	A inlet pipe
6.20	029796	SR inlet pipe left
6.21	029797	SR inlet pipe right
6.22	029798	TR inlet pipe
6.27	3426N001	Extension pipe
6.29	067033	Connection
6.35	068115001S	TR burner head
6.36	216132005A	TR Burner-cap inside
6.37	216133005A	TR burner-cap outside
6.38	053078	Burner cup gasket
6.39	040064	Stopper
8.1	2183A47367	Oven knob
8.7	215474	Oven burner
8.8	101070	Broil burner injector - Ø 1.46
=	101128	Broil burner injector - Ø 0.88
8.9	101207	Oven burner injector - Ø 1.80
=	101143	Oven burner injector - Ø 1.09
8.10	215475	Broil burner
8.11	029802	Oven inlet pipe
8.13	001248	Screw
8.19	4216N02Z	Oven burner protection
8.20	4216N01Z	Oven burner support
8.21	066150	Thermostat
8.22	094503	Bracket
8.23	053045	Gasket
8.25	067036	Oven elbow
8.26	067035	Broil elbow
8.28	029803	Broil inlet pipe
8.31	084040	Oven igniter with wire
8.32	084041	Broil igniter with wire
8.37	107055	Oven thermocouple - L=1250
8.38	107056	Broil thermocouple - L=1000
8.40	213015	Clip
8.41	003067	Washer

REF.	CODE	DESCRIPTION
9.1	074071	Electronic timer
9.3	103271009	Button
11.1	072005	Lamp holder
11.2	073013005	Lamp - 15 W
11.5	082072	6 Burners ignition coil
11.6	094413	Burners ignition coil bracket
11.7	035094	Igniter spring
11.8	084028	Igniter - L = 250 mm
=	084029	Igniter - L = 630 mm
=	084033	TR - Igniter - L = 500 mm
11.9	050058	Oven light switch
11.10	2183A57398	Switch oven knob
11.11	103230.1A	Terminal block protection
11.14	052008	Wire fastener
11.15	054104	Cord
11.16	1131508	Wiring
11.18	103851	Ignition switches
11.19	035080	Spring
11.20	003039	Retaining ring
11.21	003038	Washer
11.32	051062	Terminal block
-	1102474	Users operating instructions
-	1102505	Installation instructions