



F R I E D R I C H

## INSTALLATION INSTRUCTIONS ARCHITECTURAL GRILLE MODEL AG88

These instructions cover the installation of an Architectural Grille, Model AG88, into a WS model solid-side sleeve. The Architectural Grille must be installed just prior to the installation of the air conditioner chassis.

The contents of the package are:


1. AG88 Architectural Grille
2. Brackets (2 each)
3. Fiber strap
4. Studs, All thread (4 each)
5. Washers (4 each)
6. Nuts (4 each)
7. Gasket
8. Instructions

Tool required for installation: A flat-blade screwdriver or 1/4" hex. nut driver.

**STEP 1.** WS sleeve should have been installed as specified in the Sleeve Installation Instructions. Remove the front closure panel, support bracket, louvered metal grille, and back weather panel in the sleeve. Should the air conditioner chassis be in the sleeve, remove the chassis and the louvered metal grille using proper procedures.

**STEP 2.** Position a bracket on the left flange inside the WS sleeve, towards the back, such that the two slots on the bracket line up with the holes on the sleeve flange (same holes used to mount the louvered grille just removed). Mount with two screws provided. Repeat the procedure for the right side with the second bracket by reversing the bracket. It may be necessary to initially leave the screws loose to ensure that all hardware will line up with holes. See Figure 1.

FIGURE 1

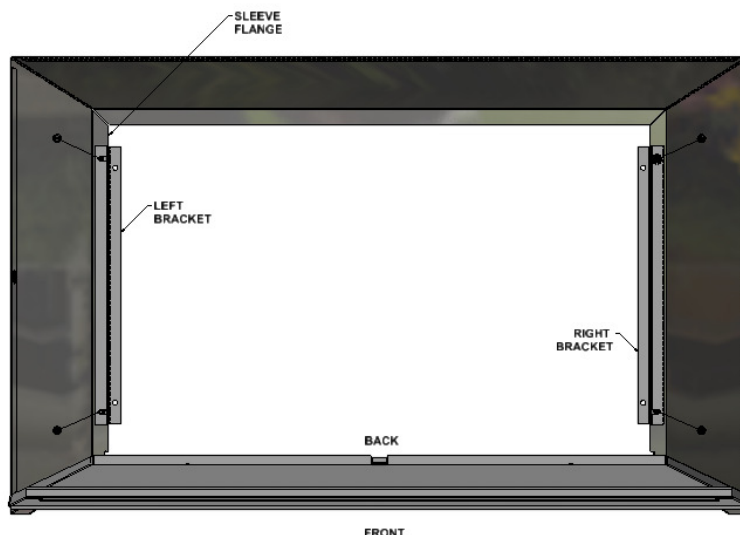

### STEP 3. Install Grille — See Figure 2.

- A. If the sleeve is installed in a wall above the ground floor, tie the fiber strap provided to one end of a vertical rail for safety purposes. Tie the loose end to any stationary object to prevent accidental dropping of the grille while it is being installed.
- B. Screw the 4 all thread studs into the 4 holes in the Architectural Louvered Grille. Pass grille through rear opening. Locate the grille such that the louvers are pointing to the outside and down. The mounting holes in the left and right vertical rails must match up with the open holes in the brackets. Fasten the grille with the washers and nuts provided.
- C. Remove the fiber strap
- D. Slide air conditioner chassis into sleeve according to chassis instructions.

FIGURE 2

