




GAS DRYER

MODELS:

WGD4850HW1 (White)


TOP AND CONSOLE PARTS

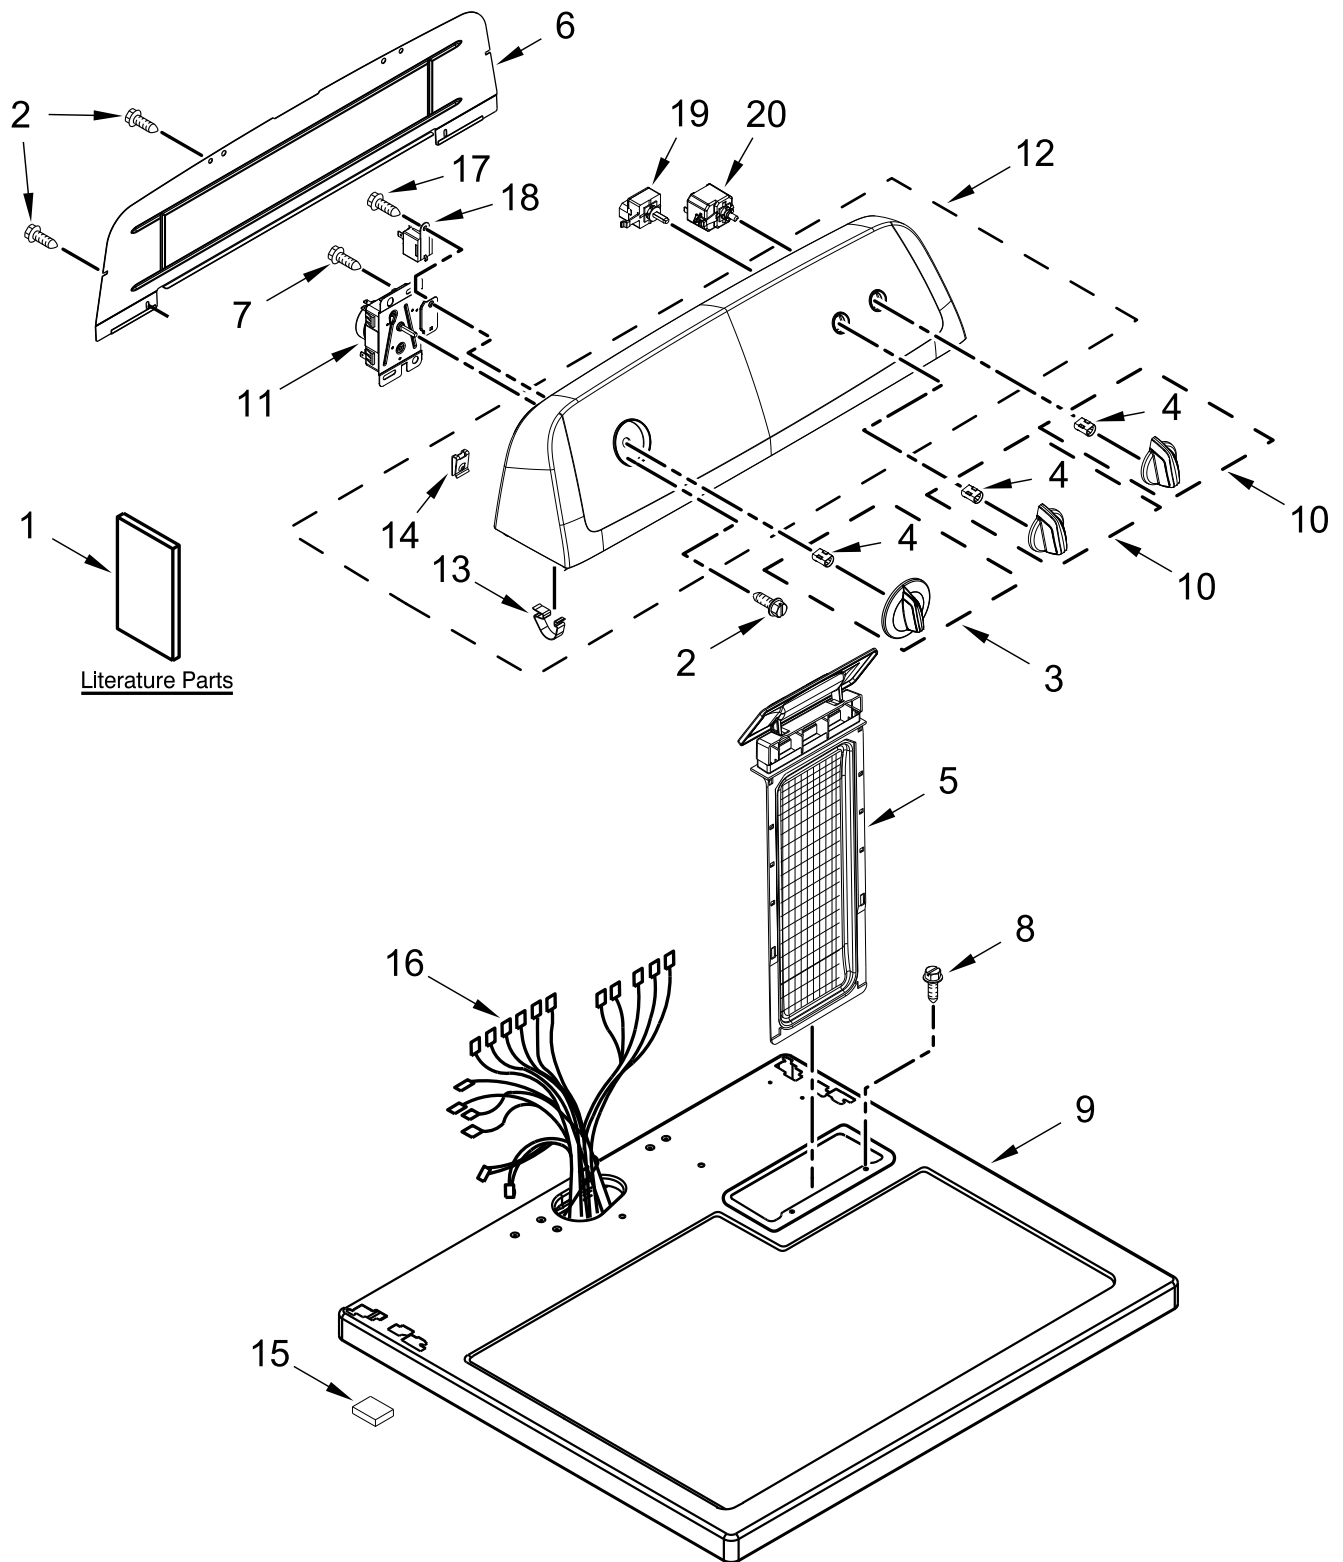

TOP AND CONSOLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	90767	Screw	14	W10298336	Nut, "U"
	W11361424	Owners Manual	8	688983	Screw	15	3389682	Spacer, Toe Panel
	W11355746	Quick Start Guide	9		Top	16	W10865758	Harness, Wiring
	W10876312	Wiring Diagram		8559800	White	17	3348629	Screw
2	693995	Screw	10		Knob, Push To Start	18	694419	Buzzer, Mini
3		Assembly, Timer Knob		W11160348	White	19	W10420747	Switch, Rotary
	W11158829	White	11	W10436302	Timer Assembly (60 Hz.)	20	W10446920	Switch, Push to Start
4	8536939	Clip, Spring						
5		Lint Screen	12		Assembly, Console			
	W10717210	White		W11178662	White			
6	W10416486	Panel, Rear Console	13	8312709	Clip, Console			


CABINET PARTS

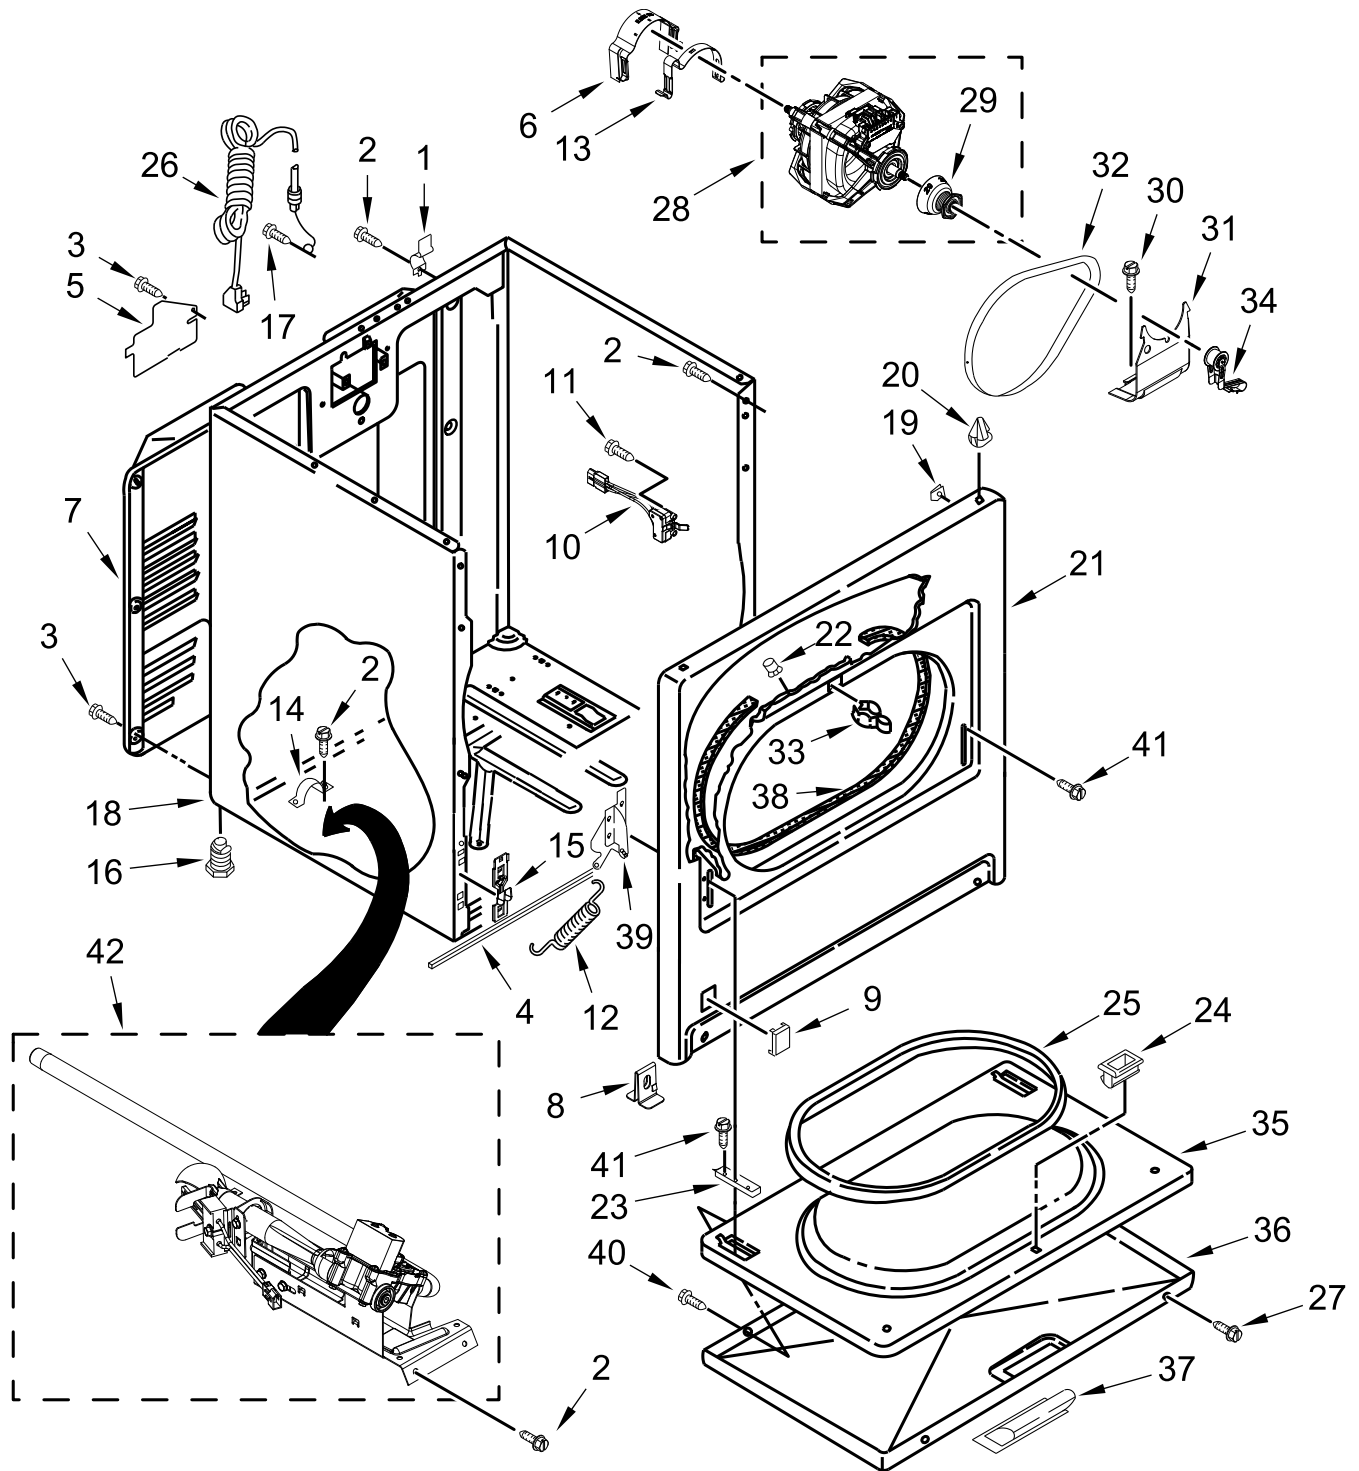

CABINET PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8066217	Hinge, Top	17	W10773242	Screw	35	695737	Door, Rear
2	343641	Screw	18		Cabinet	36		Door, Front
3	693995	Screw		8530603	White		W10714515	White
4	W10841728	Seal, Spill Guard	19	98234	Clip, Ground	37		Handle, Door
5	3396795	Cover, Terminal Block	20	8066092	Lock, Front Top		W10714516	White
6	3404162	Clamp, Motor (With Shield)	21		Panel, Front	38	W10803476	Assembly, Seal and Bearing
				W10664692	White			
7	W10571724	Panel, Rear	22	685203	Clip, Felt Pad	39	8066056	Hinge, Door (Right)
8	W10575896	Clip, Spring	23	337189	Clip, Hinge		8066057	Hinge, Door (Left)
9		Plug, Sight Hole	24	3389441	Assembly, Door Catch	40	342043	Screw
	8564457	White	25	W10823580	Seal, Door	41	3357011	Screw
10	W10569603	Switch, Door	26	W10869141	Cord, Power	42	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)
11	697773	Screw	27	342055	Screw			
12	W10041960	Spring, Door	28	W10396029	Assembly, Motor			
13	W10121316	Clamp, Motor Mount	29	8066184	Pulley, Motor			
14	341029	Clamp, Pipe	30	3400500	Bolt			
15	W10775448	Clip, Front Panel	31	348780	Base, Motor			
			32	W10131364	Belt, Drive			
16	W10561321	Foot, Dryer	33	696144	Strike, Door			
	W10570316	Foot - Package of 4 (Not Included)	34	691366	Idler Assembly			

BULKHEAD PARTS

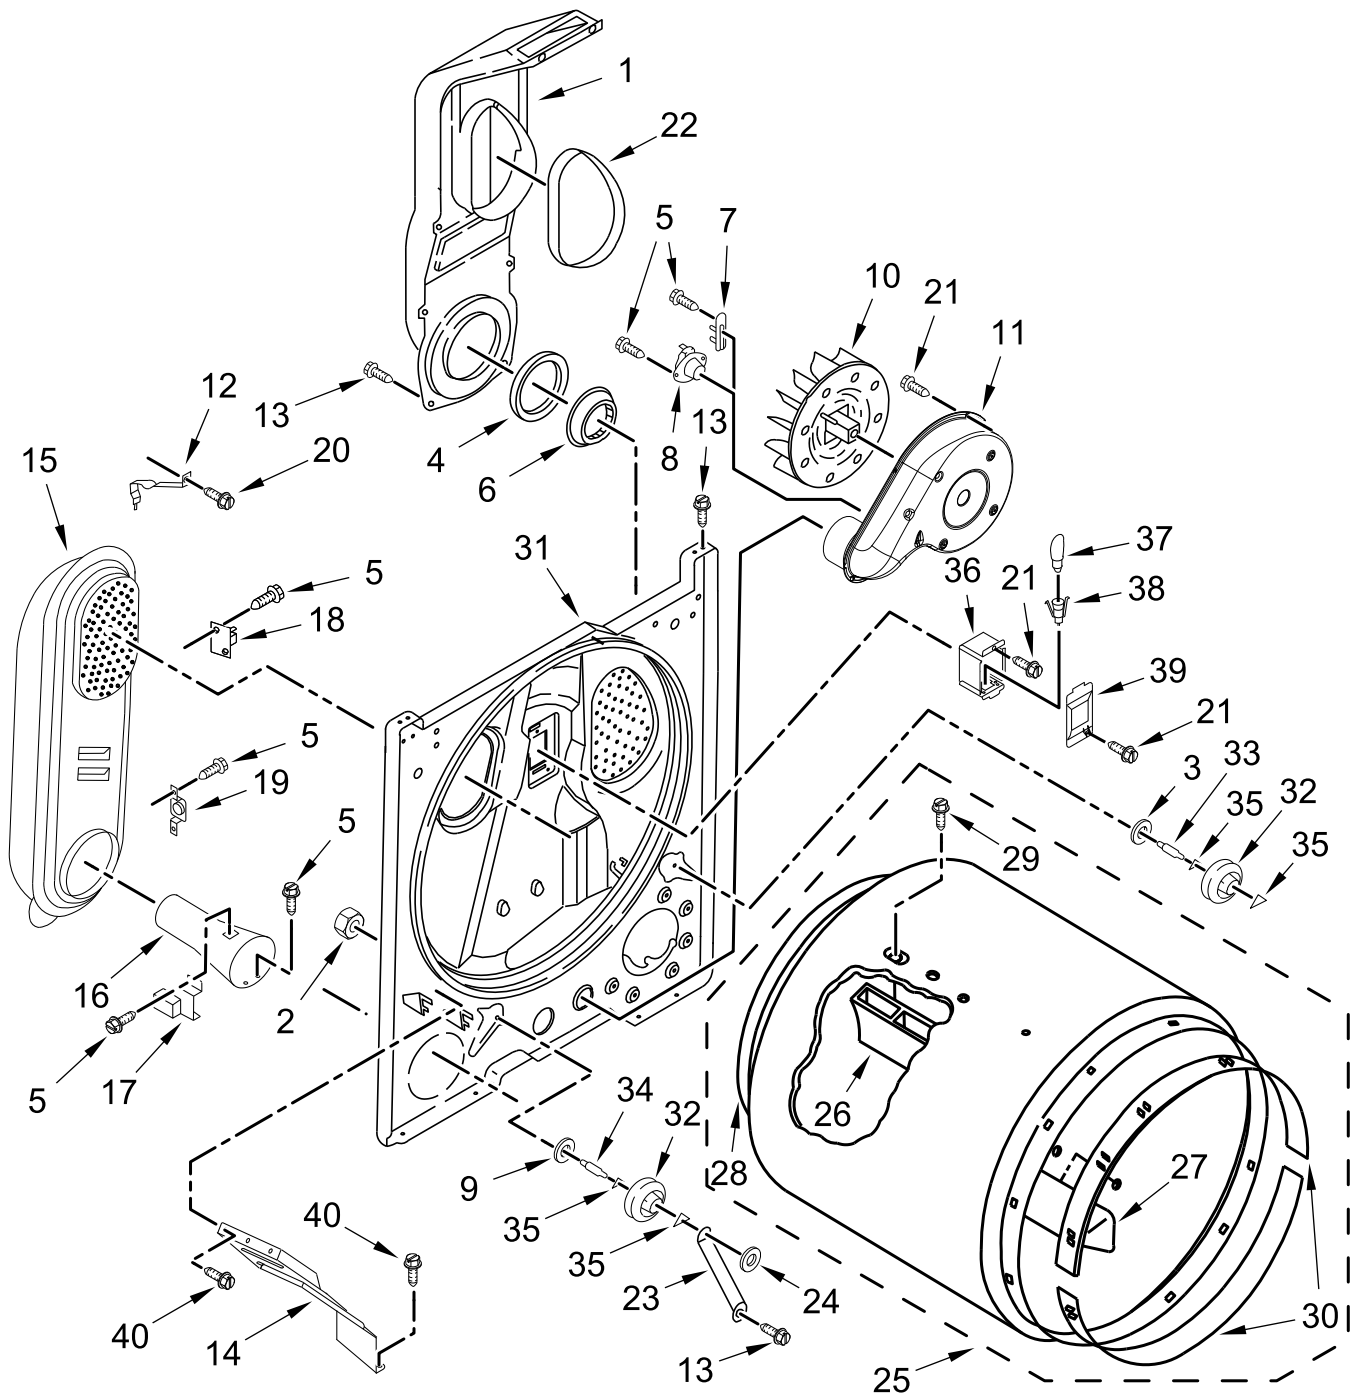


BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10798023	Assembly, Lint Chute	16	8066049	Funnel, Burner	29	W10219342	Screw
2	W10298789	Nut, Hex	17	338906	Sensor, Radiant	30	692526	Bearing, Ring
3	3388703	Washer	18	W11050897	Kit, Thermal Cut-Off (Includes Thermostat)	31	W10714468	Rear Bulkhead
4	347139	Seal, Lint Chute	19	W10754607	Thermostat, High Limit SPST (180F)	32	W10756057	Roller, Support
5	90767	Screw	20	489463	Screw	33	W10359269	Shaft, Drum Roller - Right Hand Thread
6	W10389567	Shield, Exhaust	21	3390647	Screw	34	W10359270	Shaft, Drum Roller - Left Hand Thread
7	3392519	Fuse, Thermal (91C)	22	339956	Seal	35	W10512946	Washer, Tri Ring
8	3387134	Thermostat	23	W11032820	Bracket, Support	36	8578825	Bracket, Drum Light
9	348197	Washer	24	90296	Nut, Push On	37	3406124	Bulb, Light
10	694089	Wheel, Blower	25	W10757750	Assembly, Drum (Complete)	38	W10214261	Socket, Light
11	8577230	Housing, Blower	26	692490	Baffle, Drum (Long)	39	3402841	Lens, Drum Light
12	3398161	Clip, Heater Box	27	3403636	Baffle, Drum (Short)	40	3390631	Screw
13	343641	Screw	28	W10856781	Seal, Rear Drum			
14	3406022	Bracket, Bulkhead Chute						
15	8530285	Box, Heater (96C)						

BURNER ASSEMBLY PARTS

USE WITH TYPE 1 - NATURAL,
AND TYPE 4 - LIQUEFIED PROPANE AND BUTANE GASES

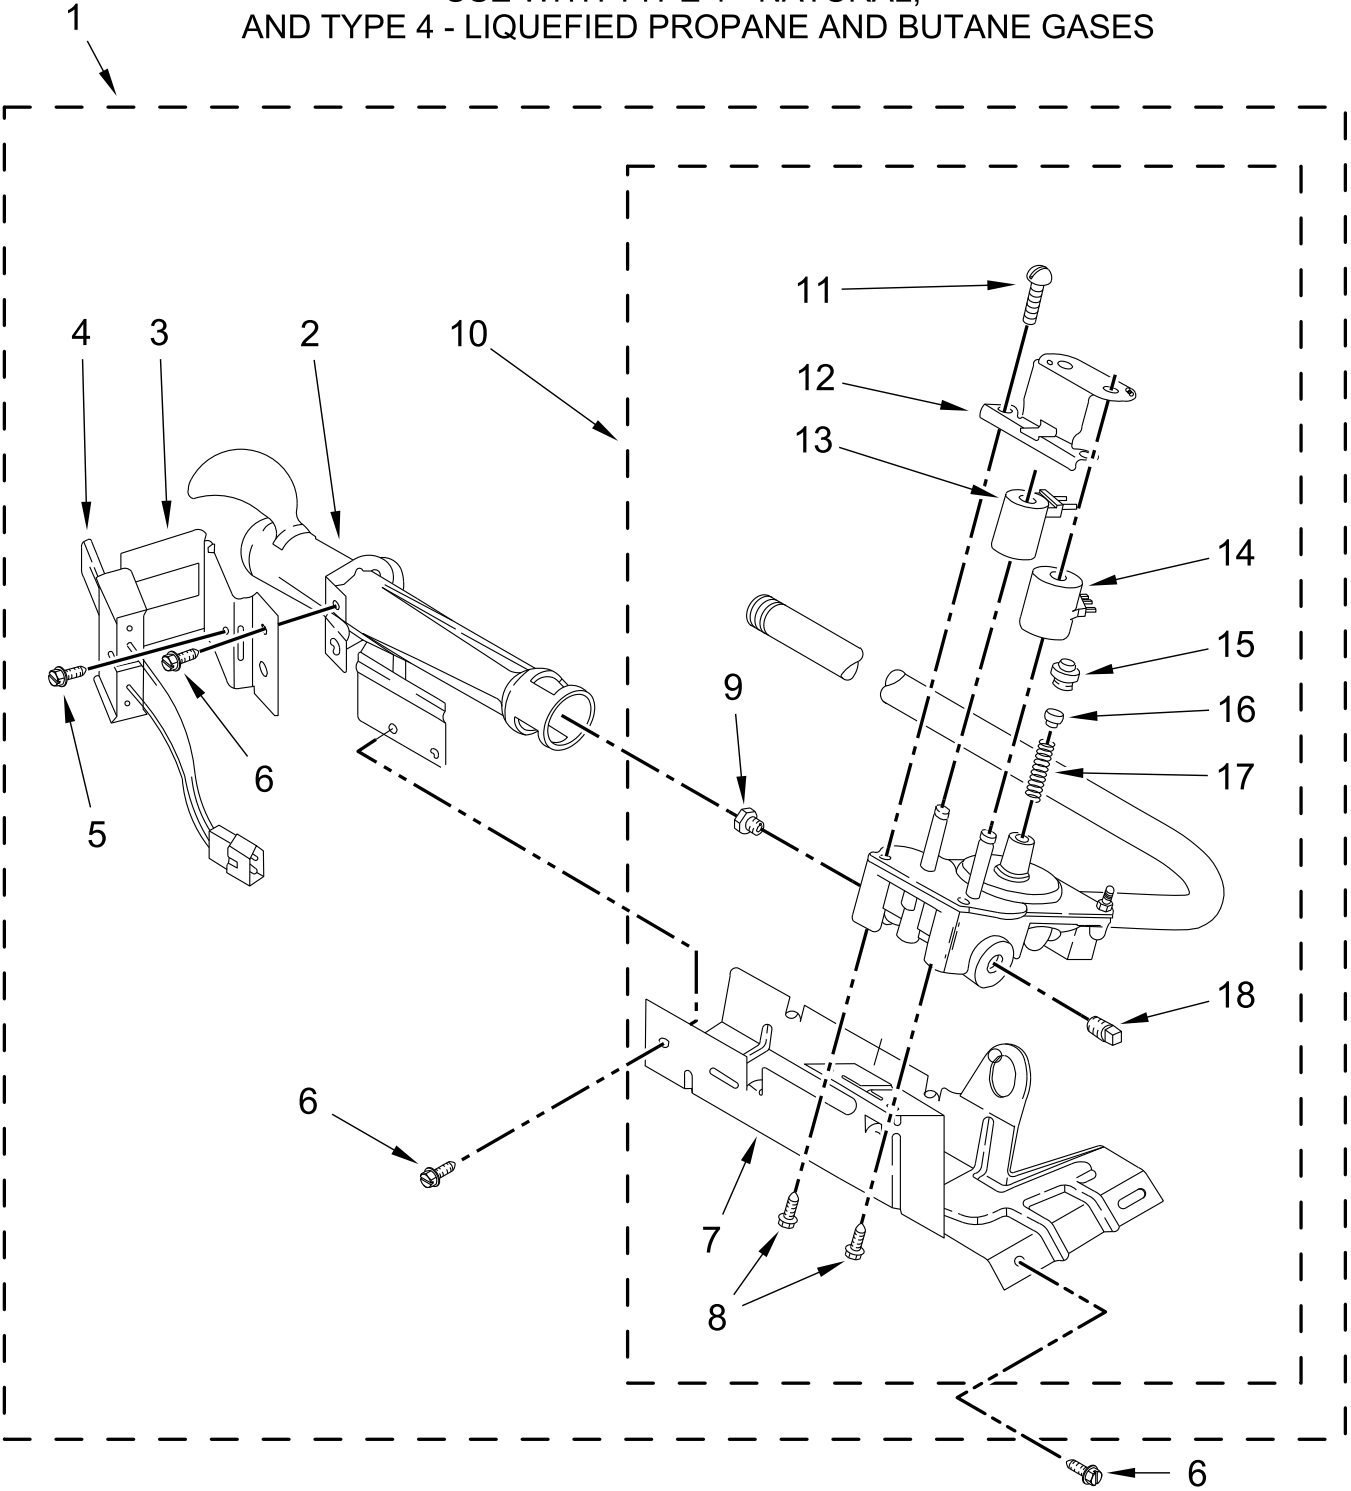

BURNER ASSEMBLY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	8318272	Burner Assembly (60 Hz) (Type 1) (White Rodgers)	10	8318277	Valve, Gas (60 Hz)	18	239822	Plug, Pipe
2	688617	Tube, Burner	11	694421	Screw, Coil			Following Parts Not Illustrated
3	694298	Bracket, Ignitor	12	694538	Bracket, Coil			
4	686590	Ignitor	13	694540	Coil, 60 Hz. (2 Terminal) (Main)		49572A	Conversion Kit (Type 1 and 2) to Type (4) L.P.G.
5	W10366705	Screw	14	694539	Coil, 60 Hz (Split) (3 Terminal) (Pilot Position)			
6	343641	Screw	15	694424	Leak, Limiter			
7	693986	Base, Burner	16	694423	Screw, Regulator Adjustment			
8	3387057	Screw	17	694422	Spring, Regulator			
9		Orifice, Burner						
	234826	Type 1 (Natural)						
	229742	Type 4 (Butane)						
	234868	Type 4 (Propane)						

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

72017	White
-------	-------

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

799344	White (Uncut)
--------	---------------

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

350930	White
350938	Gray Primer

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
-----------------------------	-----------------	--------------------

279948	Kit, Dryer Repair
3406839	Dry Rack
8522199	Kit, Dryer Vent Testing